SIEMENS



Synco living

Train the Trainer

Mounting Safety Devices





Mounting Auxiliary Equipment Mounting the Door / Window Contact



Door / window contact AP260






The door / window contact is supplied complete with Installation Instructions, battery, magnetic contact, and fixing material.

SIEMENS


Mounting the Door / Window Contact

Mounting location door / window contact AP260

It is recommended to secure the RF sensor (C1) to the door / window frame, and the magnet (C3) directly to the edge of the door itself or the window's wing.

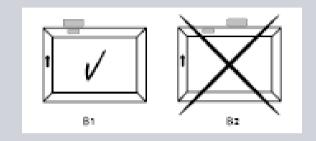

It must be ensured that the SIEMENS logo on the mounting plate (C2) and that on the magnet (C3) are aligned above one another and that the distance between the magnetic plate and the edge of the door or window is a minimum of 3 mm and a maximum of 10 mm.

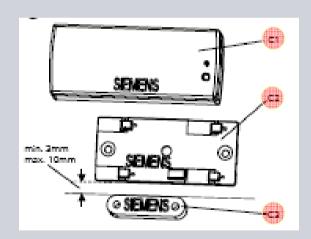


SIEMENS


Mounting the Door / Window Contact

Mounting location door / window contact AP260

Prior to attaching the RF sensor (E1) to the mounting plate (E2), the **transit tab** (D4) at the rear of the RF sensor in the battery compartment (D1) **must be removed**.

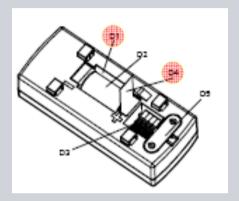

Place the RF sensor (E1) on the mounting plate (E2) and slide it in the direction of the arrow until it engages in the catches (E3).

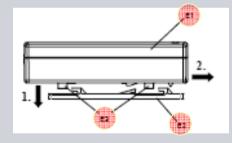

Function check

When opening or closing the window or door, the LED briefly lights up twice.




SIEMENS

Mounting the Door / Window Contact

Removing door / window contact AP260

For example, to replace the battery of the door / window contact, the RF sensor (H1) must be removed from its mounting plate. To do this, insert a tool (e.g. a small screwdriver (H4)) into the slot between RF sensor (H1) and mounting plate (H2), press the holding nose (H3) down and slide the RF sensor (H1) to the left over the holding nose out of its catches (H5).

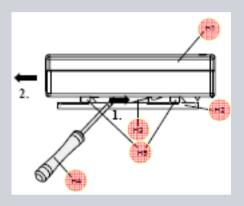



SIEMENS

Mounting the Smoke Detector

DELTA reflex smoke detector





The DELTA reflex smoke detector is supplied complete with Installation Instructions, batteries, and fixing material.

Per room, maximum 1 DELTA reflex smoke detector can be fitted.






Mounting the Smoke Detector

DFITA reflex smoke detector

To enable the DELTA reflex smoke detector to deliver an alarm via radio link, it requires a smoke detector module M255.

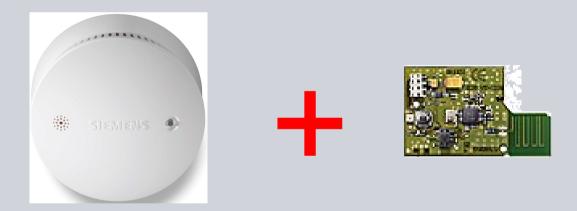

DELTA reflex smoke detector

Smoke detector module M255




SIEMENS

Mounting the Smoke Detector

Mounting location DELTA reflex smoke detector

When choosing the mounting location for the smoke detector, the following points must be observed:

- Every smoke detector can cover an area of max. 60 m²
- Fit the smoke detector as close as possible to the center of the ceiling (minimum distance from wall and corner: 15 cm)
- In rooms with inclined or pointed ceilings, fit the smoke detector approx. 90 cm from the highest point of the ceiling
- In the case of rooms having a height of more than 3 m, several smoke detectors are required (mounting height on the wall = 2.5 m)
- Take air flows into account (depending on the type of house)

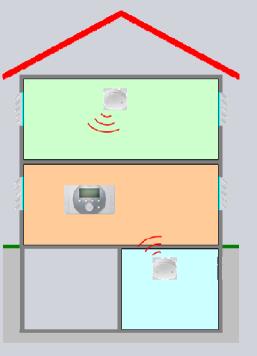





Synco[™] living

Mounting the Smoke Detector

Unsuited mounting locations for the DELTA reflex smoke detector

- In rooms, where considerable amounts of water vapor, dust or smoke occur
- In rooms with open fire places
- In the vicinity of electrical fields (e.g. fluorescent energy saving lamps and wiring, minimum distance: 50 cm)
- At locations where ambient temperatures drop below 0 °C or exceed +50 °C




SIEMENS

Mounting the Smoke Detector

Inserting the smoke detector module

Removing the module's cover: Insert a screwdriver in the respective opening and push it downward to lift the cover

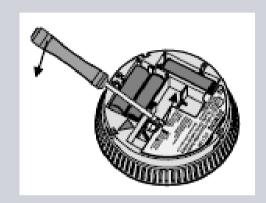

- Hold the smoke detector module at the edges, insert it in its respective place and push it downward until the module's 2 lateral catches engage
- Replace the cover to prevent malfunctions (caused by pressure variations or air drafts)






SIEMENS

Mounting the Smoke Detector

Mounting the DELTA reflex smoke detector

- Open the 2-sectional device (base B1 and smoke detector B2) by holding firmly the base and turning the detector counterclockwise
- Secure the base (B1) to the ceiling using the enclosed fixing material
- Insert the 3 enclosed batteries (B2) in the battery compartment (observe correct polarity)
- Place the smoke detector in the base and secure it by turning it in clockwise direction. Use the red triangles as an orientation aid

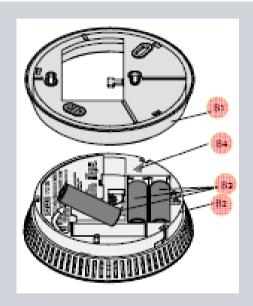

The smoke detector can be secured in its base only when the batteries are inserted.

