


Meaning of the symbols

- | | | | |
|--|----------------------------------------|--------------------------|-------------------|
| | Change batteries | | Time of day |
| | Locking of display active | | Day |
| | Heating equipment on | 24-hour operating modes: | |
| | Holiday program active | | 1 heating period |
| | Remote operation active (if connected) | | 2 heating periods |
| | Room temperature | | 3 heating periods |

Commissioning and quick startup

• Activating the batteries

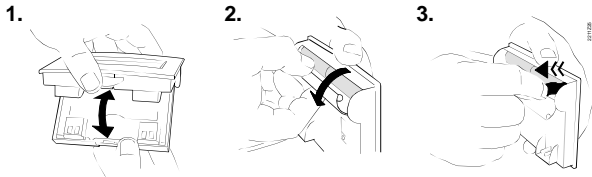


The REV200 features a back-lit touch screen display. Settings are made by touching the display fields with the fingers, which also switches on the display lighting.

Tip: to simplify programming, the unit can be removed from its base.


1. Remove the unit from its base
2. Open the cover of the battery compartment.
3. Remove the black transit tab from the batteries. The unit will switch itself on.

• Setting the time of day

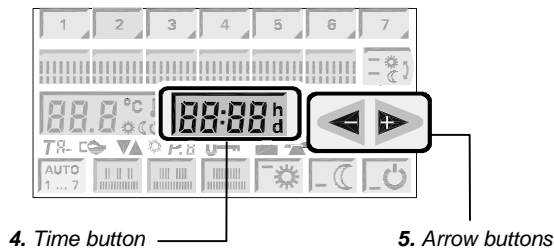


4. Select the time button.
5. Set the correct time of day with the arrow buttons. Longer pressing causes the display to accelerate, which can be stopped by repeated pressing.
6. After 5 seconds, the display will automatically return to the initial operating mode. The same action is achieved by touching the time button again.

• Selecting the day of week

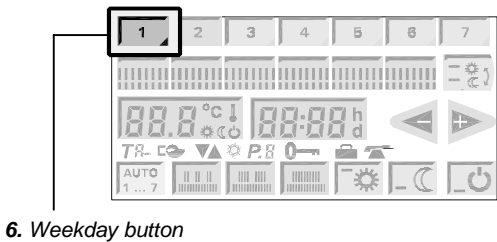

7. Touch the weekday button with the black triangle. The display now shows only the weekdays. Select the current weekday (1=Mo, 2=Tu, etc.).
8. After 5 seconds, the display will automatically return to the initial operating mode. The same action is achieved by touching the selected weekday button again.

• Selecting the operating mode of the heating periods

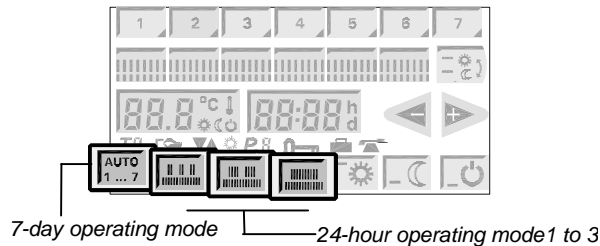


9. Select the operating mode:

Operating mode	Heating periods		
	07:00 – 23:00		
	06:00 – 08:00	17:00 – 22:00	
	06:00 – 08:00	11:00 – 13:00	17:00 – 22:00
Auto 1...7	Mo – Fr: (1...5)	Sa + Su: (6+7)	

Do you want to choose your individual switching program?

• 7-day operating mode

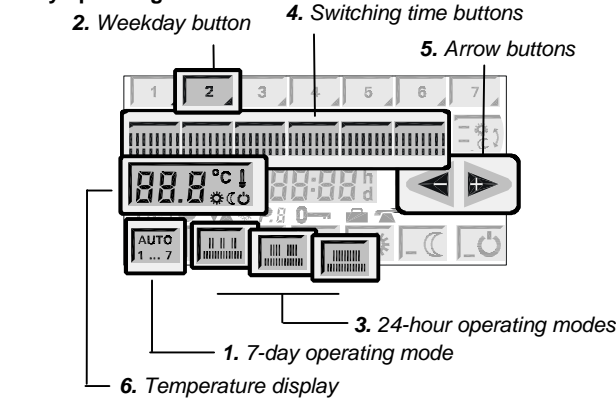


7-day operating mode

You can choose a different switching pattern for each weekday. Each weekday can be selected individually.

1. Touch the 7-day operating mode (Auto 1...7).
2. Select the weekday to be programmed.
3. Touch one of the three 24-hour operating modes.
4. Touch the switching time button where you want to change the time. The respective pointer on the switching time button and the time of day are flashing.
5. Use the arrow buttons to change the displayed switching time.
6. Touch the temperature display.
7. Use the arrow buttons to change the displayed temperature.

Tip: check the settings made by selecting the individual days.

• 24-hour operating mode

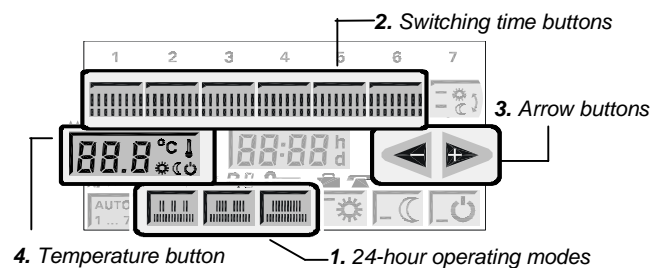


24-hour operating mode

This means that the same switching pattern is used for every day. Individual weekday settings are not possible.

1. Touch one of the three 24-hour operating modes.
2. Touch the switching time button where you want to change the time. The respective pointer on the switching time button and the switching time are flashing.
3. Use the arrow buttons to change the displayed switching time.
4. Touch the temperature display.
5. Use the arrow buttons to change the displayed temperature.


Do you want to change the room temperature level?

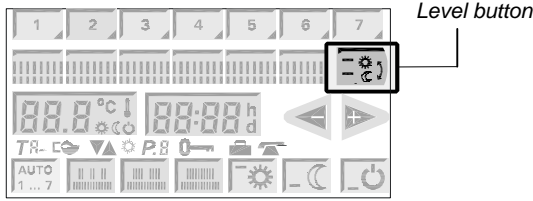

With the level button, you change from the current room temperature level to the other for a short period of time. The active level will be displayed: or . Use this function to reduce the room temperature level when the apartment is unoccupied.

The change is only active until the next switching point is reached.

Do you want continuous operation without changing the room temperature level?

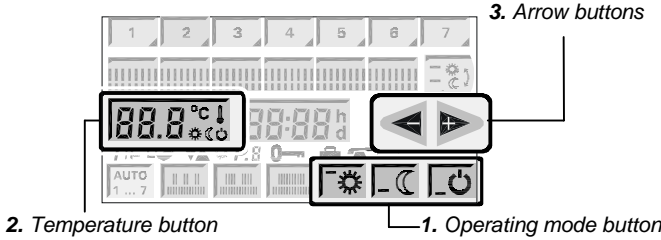

Select the required continuous operating mode. The respective temperature level will be maintained.


		Default value
	Continuously normal temperature	21 °C
	Continuously economy temperature	16 °C
	Continuously OFF (standby) with frost protection	5 °C

Do you want to change these default values?

1. Select the required continuous operating mode.
2. Touch the temperature button.
3. Change the temperature with the arrow buttons.

Are you going on holiday?

• Activating the holiday function

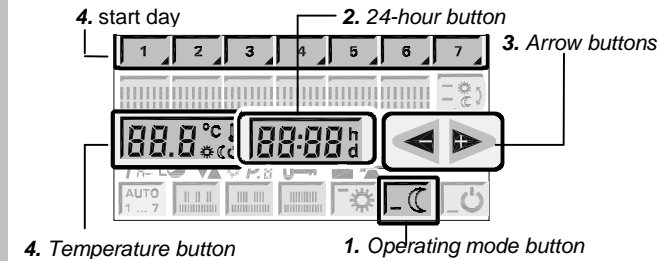


When absent for a longer period of time, it is possible to change to the economy temperature and to enter the time of absence.

1. Select operating mode «Economy temperature».
2. Touch the 24-hour button.
3. Enter the number of days you are absent (0..99).
4. Preselect the start day 1...7 of the holiday period.
5. Change the current economy temperature by touching the temperature button and by changing the value with the arrow button.
6. After 8 seconds, the display will automatically return to the initial operating mode. The same action is achieved by touching the time button again.

The display keeps showing the number of days and the holiday symbol. Every midnight, the counter subtracts one day. When the counter reaches "00", an automatic change to the previous program will take place.


• Displaying and cancelling the holiday function

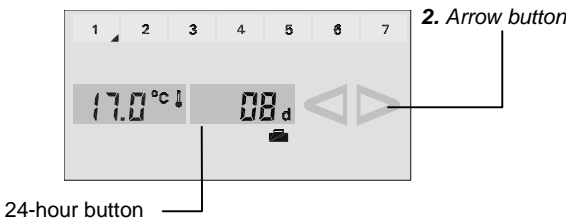

Cancelling the holiday function:

1. Touch the 24-hour button.
2. Use the arrow button to set to "00".
3. After 8 seconds, the display will automatically return to the initial operating mode. The same action is achieved by touching the 24-hour button again.

Do you want to return to the default settings?

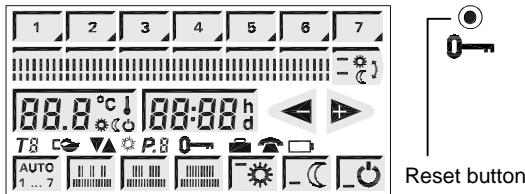

Press the reset button at top right for **at least 3 seconds**: this will reset all individual settings and the time of day to their default values. During the reset time of 3 second, the display will be fully lit, indicating that it works correctly.

Note: after each reset, all individual settings such as time of day, switching times and temperatures etc. must be reentered.

Cleaning the display / maintenance

To clean the unit, use the antistatic cloth provided or a soft damp cloth with no chemical cleaning agent. To clean the display, the operating fields can be locked.




Switching on: press the reset button at top right for a **maximum of 1 second**: appears and all other displays will disappear. The operating fields are now out of operation while all the other functions in the background remain fully operational.

Switching off: press the reset button at top right for a **maximum of 1 second**.

Locking of the display also serves as a protection against tampering.

Does symbol appear on the display?

When this symbol appears, you need to replace the batteries within the next 3 months.

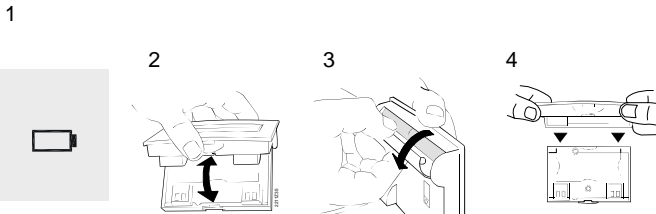

Note: the settings are retained for a maximum of 1 minute.

Do not activate the display lighting too often since this reduces the batteries' life.

1. Get 2 new alkaline batteries type AA, 1.5 V.
2. Open the unit by pressing the button and remove it from its base.
3. Change the batteries.
4. Fit the unit at the top, swing it down and snap on at the bottom.

Make certain exhausted batteries are disposed of properly!

The batteries' life expectancy is about 2 years.