

The background image shows a man in a light blue shirt from the side, holding a tablet. He is in a factory or industrial setting with various machines and equipment visible in the background. Overlaid on the image are several digital graphics: a large '24/7' icon with a circular arrow, a 'NEWS' section with a person icon, a 'Home' button, and a network diagram with three people icons connected by lines. There are also binary code (0s and 1s) scattered throughout the scene.

**SIEMENS**

*Ingenuity for life*

## Basic Positioner (EPos) in SINAMICS V90 PN

SINAMICS V90 PROFINET Version

<https://support.industry.siemens.com/cs/ww/en/view/109747750>

Siemens  
Industry  
Online  
Support



## Legal information

### Use of application examples

Application examples illustrate the solution of automation tasks through an interaction of several components in the form of text, graphics and/or software modules. The application examples are a free service by Siemens AG and/or a subsidiary of Siemens AG ("Siemens"). They are non-binding and make no claim to completeness or functionality regarding configuration and equipment. The application examples merely offer help with typical tasks; they do not constitute customer-specific solutions. You yourself are responsible for the proper and safe operation of the products in accordance with applicable regulations and must also check the function of the respective application example and customize it for your system.

Siemens grants you the non-exclusive, non-sublicensable and non-transferable right to have the application examples used by technically trained personnel. Any change to the application examples is your responsibility. Sharing the application examples with third parties or copying the application examples or excerpts thereof is permitted only in combination with your own products. The application examples are not required to undergo the customary tests and quality inspections of a chargeable product; they may have functional and performance defects as well as errors. It is your responsibility to use them in such a manner that any malfunctions that may occur do not result in property damage or injury to persons.

### Disclaimer of liability

Siemens shall not assume any liability, for any legal reason whatsoever, including, without limitation, liability for the usability, availability, completeness and freedom from defects of the application examples as well as for related information, configuration and performance data and any damage caused thereby. This shall not apply in cases of mandatory liability, for example under the German Product Liability Act, or in cases of intent, gross negligence, or culpable loss of life, bodily injury or damage to health, non-compliance with a guarantee, fraudulent non-disclosure of a defect, or culpable breach of material contractual obligations. Claims for damages arising from a breach of material contractual obligations shall however be limited to the foreseeable damage typical of the type of agreement, unless liability arises from intent or gross negligence or is based on loss of life, bodily injury or damage to health. The foregoing provisions do not imply any change in the burden of proof to your detriment. You shall indemnify Siemens against existing or future claims of third parties in this connection except where Siemens is mandatorily liable.

By using the application examples you acknowledge that Siemens cannot be held liable for any damage beyond the liability provisions described.

### Other information

Siemens reserves the right to make changes to the application examples at any time without notice. In case of discrepancies between the suggestions in the application examples and other Siemens publications such as catalogs, the content of the other documentation shall have precedence.

The Siemens terms of use (<https://support.industry.siemens.com>) shall also apply.

### Security information

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, systems, machines and networks.

In order to protect plants, systems, machines and networks against cyber threats, it is necessary to implement – and continuously maintain – a holistic, state-of-the-art industrial security concept. Siemens' products and solutions constitute one element of such a concept.

Customers are responsible for preventing unauthorized access to their plants, systems, machines and networks. Such systems, machines and components should only be connected to an enterprise network or the Internet if and to the extent such a connection is necessary and only when appropriate security measures (e.g. firewalls and/or network segmentation) are in place.

For additional information on industrial security measures that may be implemented, please visit <https://www.siemens.com/industrialsecurity>.

Siemens' products and solutions undergo continuous development to make them more secure. Siemens strongly recommends that product updates are applied as soon as they are available and that the latest product versions are used. Use of product versions that are no longer supported, and failure to apply the latest updates may increase customer's exposure to cyber threats.

To stay informed about product updates, subscribe to the Siemens Industrial Security RSS Feed at: <https://www.siemens.com/industrialsecurity>.

# Table of contents

<b>Legal information .....</b>	<b>2</b>
<b>1 Task.....</b>	<b>4</b>
<b>2 Solution.....</b>	<b>5</b>
2.1 Solution overview .....	5
2.2 Hardware and Software Components .....	6
2.2.1 Validity .....	6
2.2.2 Used Components.....	6
<b>3 Basics .....</b>	<b>7</b>
3.1 Basics regarding SINAMICS V90 PN version .....	7
3.2 Installation and startup .....	8
3.2.1 Hardware installation .....	8
3.2.2 Trial-run .....	8
<b>4 Configuration .....</b>	<b>9</b>
4.1 Configurations via V-ASSISTANT .....	9
4.2 Configurations via TIA Portal (V14 and higher) .....	13
<b>5 Operation of the application .....</b>	<b>18</b>
5.1 Scenario A (with SINA_POS (FB284)).....	18
5.1.1 Function block SINA_POS (FB284) .....	18
5.1.2 Operations .....	22
<b>6 Appendix .....</b>	<b>29</b>
6.1 Service and support .....	29
6.2 Links and Literature .....	30
<b>7 Contact.....</b>	<b>30</b>
<b>8 History.....</b>	<b>30</b>



# 1 Task

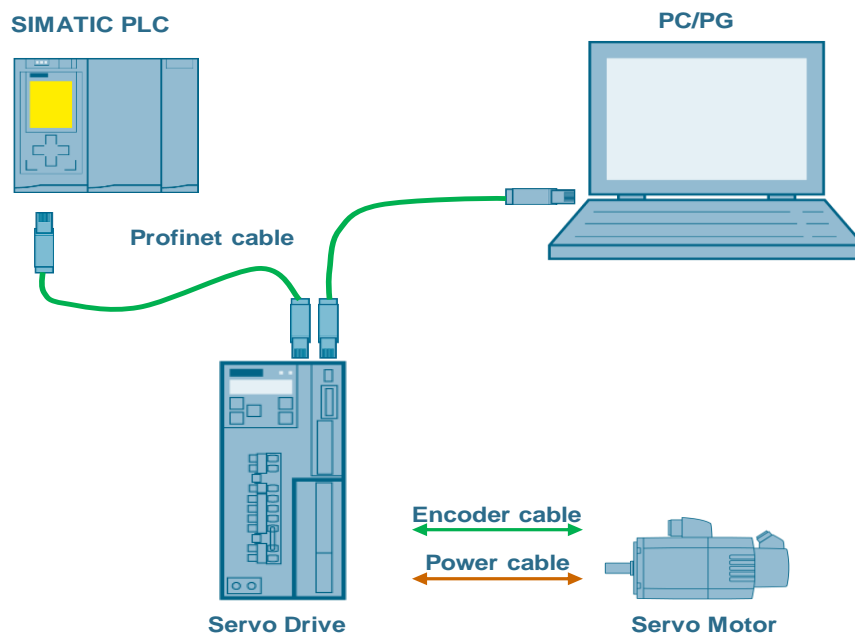
## Introduction

Basic positioner (EPos) is one of the two basic control modes for SINAMICS V90 PROFINET version. In this manual, the basic application of the basic positioner (EPos) in SINAMICS V90 PN will be described in detail.

## Overview of the automation task

The figure below provides an overview of the automation task.

Figure 1-1



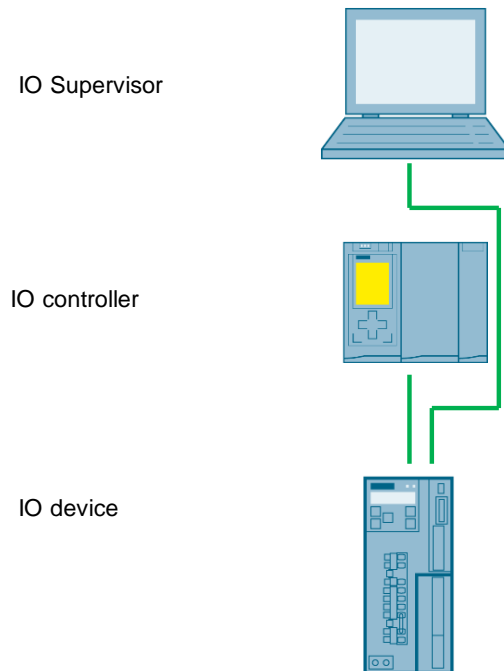
## 2 Solution

### 2.1 Solution overview

#### Schema Display

The following figure displays the most important components of the solution:

Figure 2-1



#### Delimitation

This application does not include a description of

- PROFINET communication
- SINAMICS V90 PN version
- BOP operation

Basic knowledge of these topics is assumed.

#### Required knowledge

Basic knowledge on TIA Portal is assumed.

## 2.2 Hardware and Software Components

### 2.2.1 Validity

This application example is valid for

- TIA Portal V15
- S7-1200/1500/300/400 CPU with PN interface
- SINAMICS V90 PN FW V10002.4 or newer
- SIMOTICS S-1FL6 Li motor

### 2.2.2 Used Components

The application was generated with the following components:

#### Hardware components

Table 2-1

Component	No.	Article number	Note
SIMATIC S7-1500 CPU1511 1-PN	1	6ES7511-1AK00-0AB0	V1.7
SINAMICS V90 PN 200V	1	6SL3210-5FB10-1UF0	0.4 kW
SIMOTICS S-1FL6 Li motor	1	1FL6024-2AF21-1AA1	0.4 kW

#### Standard software components

Table 2-2

Component	No.	Article number	Note
TIA Portal	1		V15
SINAMICS V-ASSISTANT	1		V1.05.00.00

#### Sample files and projects

The following list includes all files and projects that are used in this example.

Table 2-3

Component	Note
109747750_V90_EPos_Test_CODE_V15.zip	TIA Project file
109747750_V90_EPos_Test_V-ASSISTANT.zip	SINAMICS V-ASSISTANT Project file
109747750_V90_EPos_DOC_v10_en_V1.1.pdf	Reference document

## 3 Basics

### 3.1 Basics regarding SINAMICS V90 PN version

#### Supported Telegrams

When SINAMICS V90 PN is working in EPos mode, the following telegrams are supported:

- Standard telegram 7
- Standard telegram 9
- Siemens telegram 110
- Siemens telegram 111

Among these four telegrams, telegram 111 is the factory default telegram and also the mostly frequently used one. **Thus, the Siemens telegram 111 will be used in this basic application.**

#### Number of IO devices

When the basic positioner (EPos mode) is used in SINAMICS V90 PN, number of IO device depends on the number of slaves supported by the controller; for example, SIMATIC S7-1200 supports maximally 16 slaves including the CPU itself.

## 3.2 Installation and startup

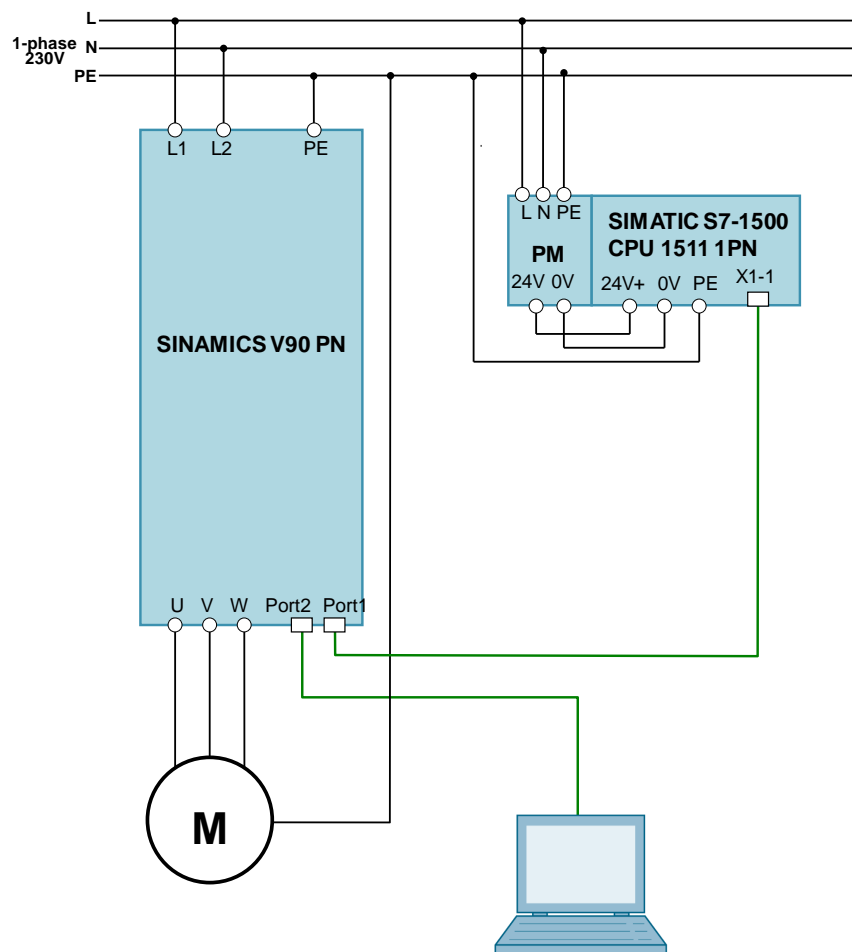
### 3.2.1 Hardware installation

The figure below shows the hardware configuration of the application:

**CAUTION**    **Wrong wiring can damage the drive!**

In this application, the one phase 230V power supply is used. It is a must for you to check the supply voltage; otherwise, the drive can be damaged!

Figure 3-1



### 3.2.2 Trial-run

Table 3-1 Trial-run

Nr.	Action	Remarks
1.	Set drive parameter p29108 to be 1.	JOG function is enabled when p29108=1
2.	Switch to JOG menu with drive BOP operation.	
3.	Press ▲ or ▼ button to run the motor.	Check if the motor can run properly.


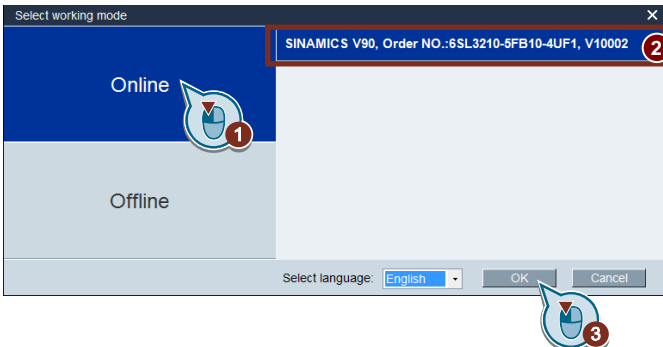
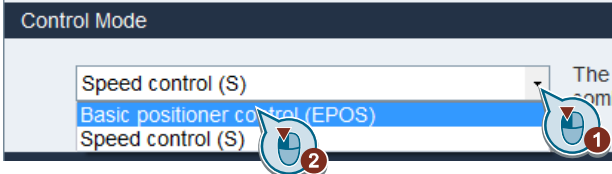


## 4 Configuration

In this section, the configurations from V-ASSISTANT side as well as from the TIA Portal V14 will be described in details. The used telegram is telegram 111.

### 4.1 Configurations via V-ASSISTANT

Table 4-1 Configurations via V-ASSISTANT

Step	Description
1.	<p><b>Go online with V-ASSISTANT</b></p> <p>Double-click the V-ASSISTANT icon  to start this software:</p>  <ol style="list-style-type: none"> <li>1. Select the <b>"Online"</b> working mode. Normally, the online mode is the default working mode.</li> <li>2. If the USB communication is okay, the drive information will be displayed.</li> <li>3. Click the <b>"OK"</b> button to proceed.</li> </ol>
2.	<p><b>Change control mode</b></p> <p>When the V-ASSISTANT has been successfully connected to SINAMICS V90 servo drive, you need to change the control mode from S mode to EPos mode firstly:</p>  <ol style="list-style-type: none"> <li>1. Open the drop-down list.</li> <li>2. Select <b>"Basic positioner control (EPOS)"</b>.</li> </ol> <p><b>NOTICE:</b> Change of the control mode needs a restart of servo drive, so the parameters must be saved before drive restart.</p>

Step

Description

3.

Configure telegram

After successfully switching to EPos mode, you can select the telegram according to actual application:

Task navigation

State: positioner control mode

Select drive

The current telegram: 111 - SIEMENS telegram 111, PZD-12/12

Set PROFINET

The process data (PZD): 7 - Standard telegram 7, PZD-2/2  
Standard telegram 9, PZD-16/5  
110 - SIEMENS telegram 110, PZD-12/7  
111 - SIEMENS telegram 111, PZD-12/12

Select telegram

PZD structure and values

Configure

Receptive direction (PZD count=12)

Param

Transmit direction (PZD count=12)

Commission

Program: Control word 1

Diagnostics

Program: Status word 1

1

2

Program	Description	Status
111	Control word 1	0000h
110	1 = Ready for switching on	0
111	1 = Ready for operation (DC link loaded, pulsed supply)	0
112	1 = Operation enabled (drive follows n_ref)	0
113	1 = Fault present	0
114	1 = No load down active (OPF2 inactive)	0
115	1 = No load stop active (OPF3 inactive)	0
116	1 = Switching on inhibited active	1
117	1 = Alarm present	0
118	1 = Following error within tolerance	1
119	1 = Control requested	1
120	1 = Target position reached	0
121	1 = Reference point set	0
122	Rising edge = Transferring block activated	0
123	1 = Setpoint feed	0
124	1 = Axis accelerated	0
125	1 = Axis decelerated	0

1. Click "Select telegram".

2. Select a telegram from the drop-down list. In this example application document, we will keep the default telegram 111.

4.

Configure network settings

The following parameters can be configured with the V-ASSISTANT from the PROFINET settings menu field:

Task navigation

State: External mode

Select drive

v90p1

Set PROFINET

6 / 239

Configure network

Note: Only numbers, lower case (a-z) and characters (- and \_) in English are acceptable.

Parameterize

IP address of P1 station

Commission

Subnet mask of P1 station

Diagnostics

Default gateway of P1 station

1

2

3

4

1. Click "Configure network".

2. Input a device name for SINAMICS V90 PN servo drive currently connected.

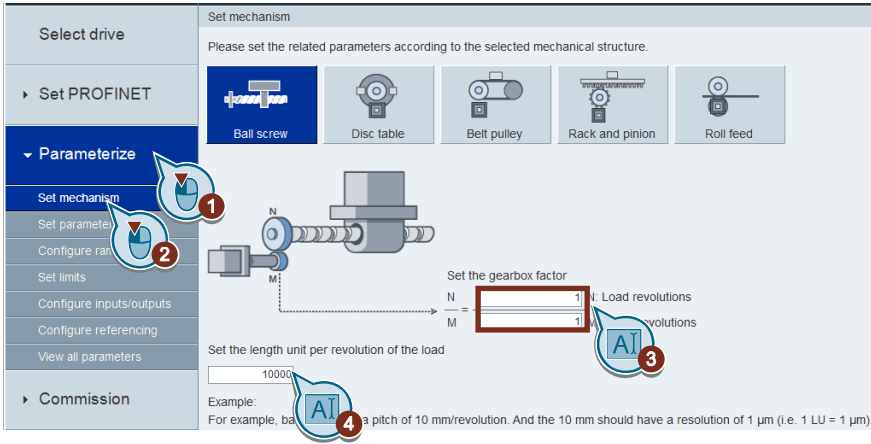
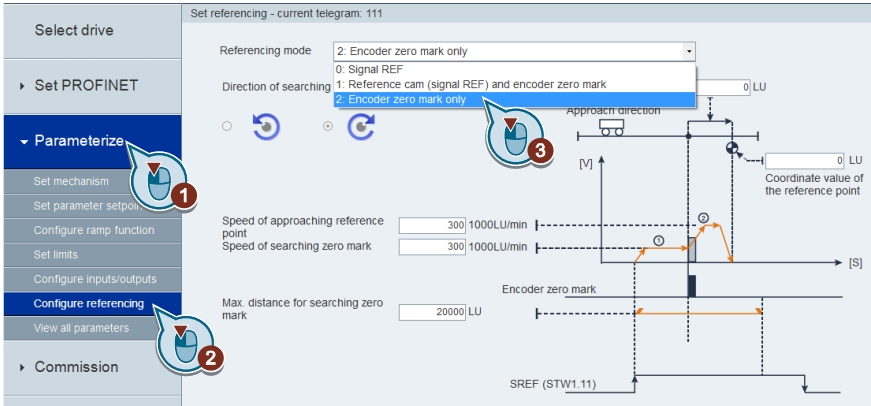
3. Input valid IP address for the servo drive.

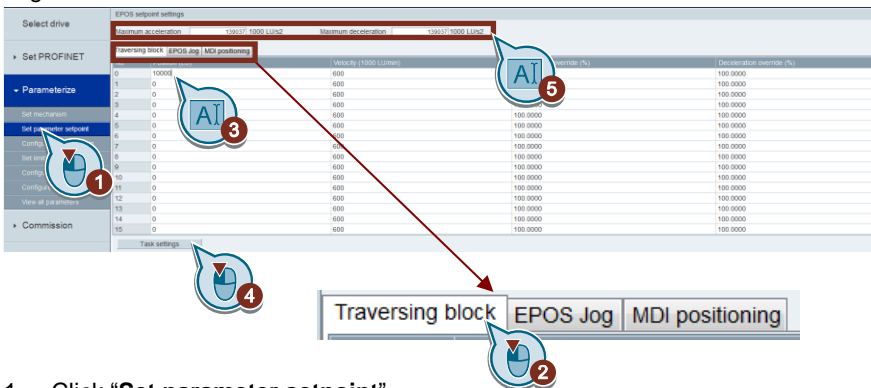
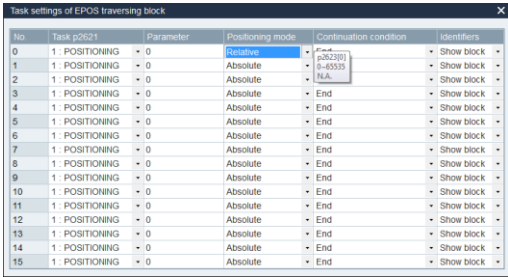
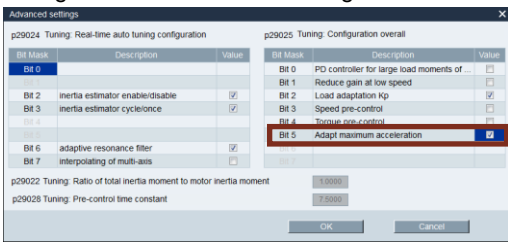
 
4. Click the "Save and active" button.

© Siemens AG 2018 All rights reserved

SINAMICS V90 PN EPos  
Entry-ID: 109747750, V1.1, 05/2018

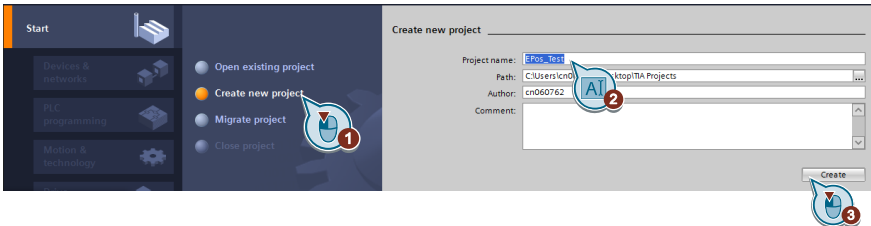
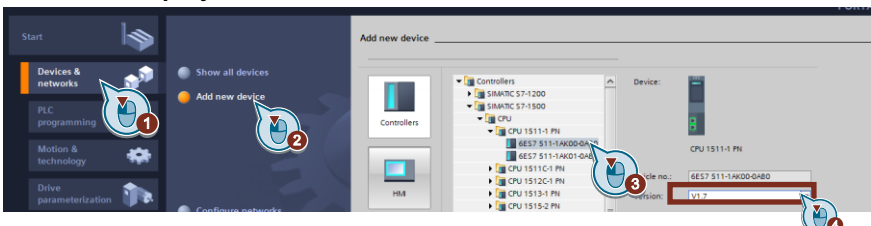
10

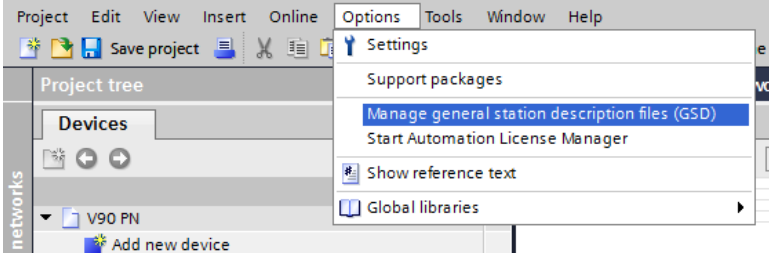
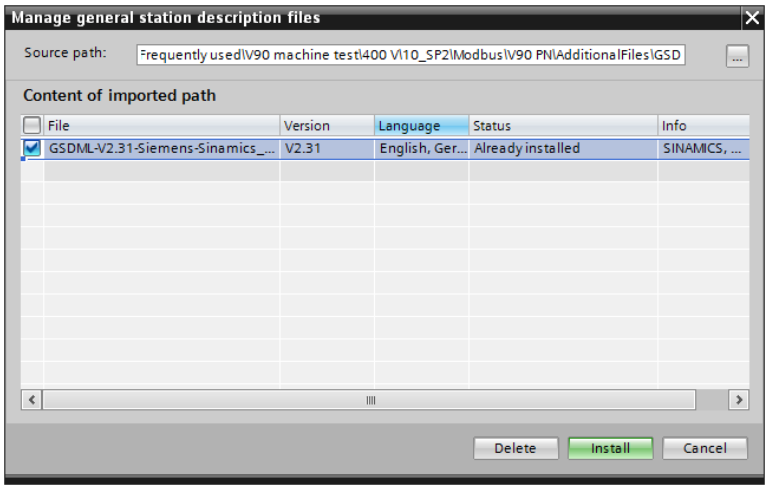
Step	Description
5.	<p><b>Configure mechanism</b> Set relevant mechanism parameters according to actual mechanism system:</p>  <ol style="list-style-type: none"> <li>1. Click <b>"Parameterize"</b>.</li> <li>2. Click <b>"Set mechanism"</b>.</li> <li>3. Set the gearbox. In this example, we will keep default settings.</li> <li>4. Set the length unit per revolution of the load. In this example, we will keep default settings.</li> </ol>
6.	<p><b>Configure referencing</b> Configure the referencing mode:</p>  <ol style="list-style-type: none"> <li>1. Click <b>"Parameterize"</b>.</li> <li>2. Click <b>"Configure referencing"</b>.</li> <li>3. Three referencing modes are available for SINAMICS V90PN working in EPos mode (0: Signal REF; 1: Reference cam and encoder zero mark; 2: Encoder zero mark only). In the example, we will use the third mode (only encoder zero mark).</li> </ol>

Step	Description
7.	<p><b>Configure setpoint parameters</b></p> <p>Configure setpoint parameters for EPos traversing block, EPos MDI and EPos Jog:</p>  <ol style="list-style-type: none"> <li>Click "Set parameter setpoint".</li> <li>Click to switch between the headlines of traversing block, EPos MDI and EPos Jog.</li> <li>Input a target position for traversing block 0. In this example, we will use 10000 LU, that's, one motor revolution according to the mechanism configuration. <b>Note:</b> in this example, we will keep the default settings for EPos Jog.</li> <li>Click "Task settings" to configure task settings for traversing block 0:</li> </ol>  <p>In this example, we will use relative positioning for traversing block 0.</p> <ol style="list-style-type: none"> <li>Configure maximum acceleration/deceleration time in EPos mode. These two values can be calculated automatically by activating bit5 of auto-tuning configuration in advanced setting:</li> </ol> 
8.	<p><b>Save parameter settings into drive ROM</b></p> <p>After finishing above parameter settings, we should save parameter settings into drive ROM by clicking the "Save parameters into ROM" button:</p>  <p><b>Note:</b></p> <p>You can also perform other configurations like torque limit, DI/DO, etc. according to actual application. Please refer to SINAMICS V90 PN Operating Instruction for more details:</p> <p><a href="https://support.industry.siemens.com/cs/ww/en/view/109742518">https://support.industry.siemens.com/cs/ww/en/view/109742518</a></p>

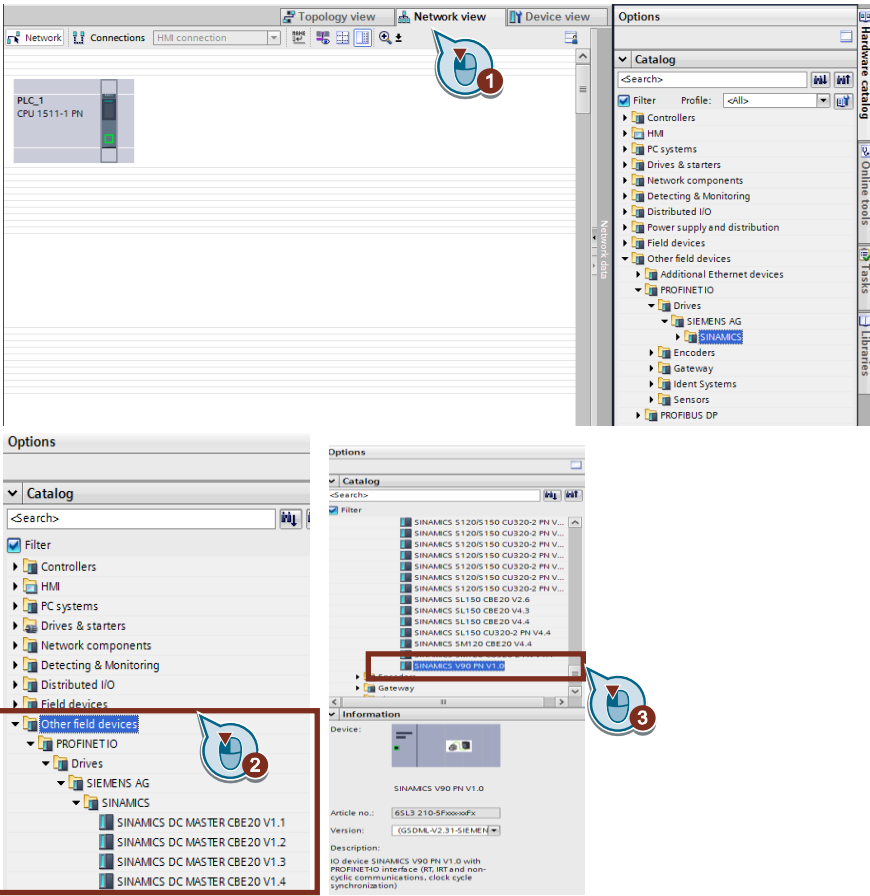
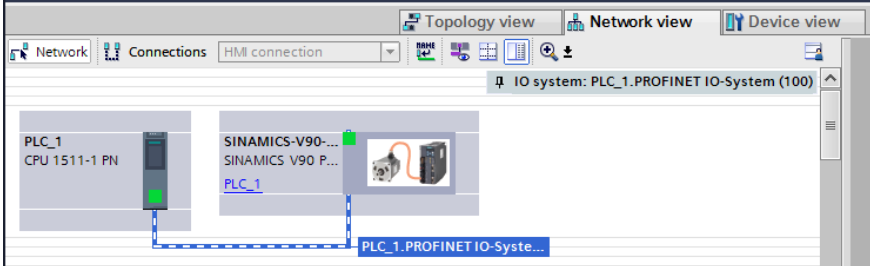
## 4.2 Configurations via TIA Portal (V14 and higher)

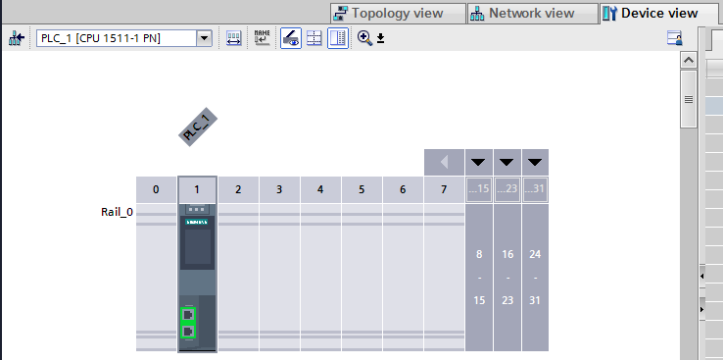
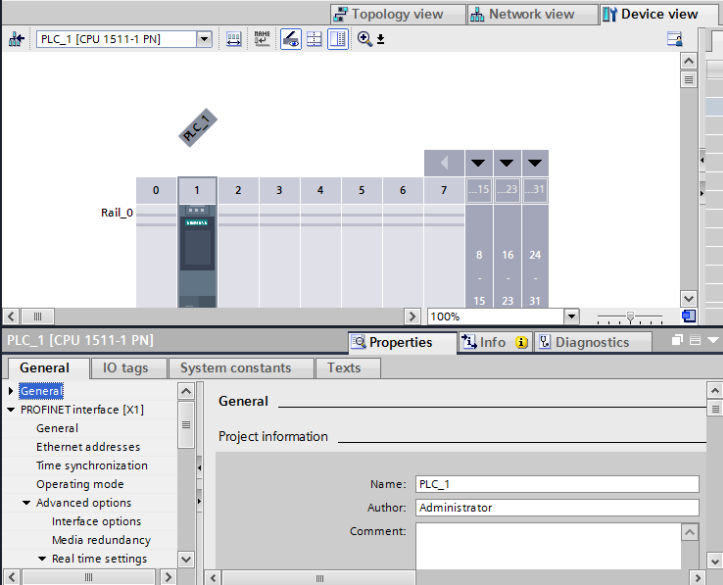
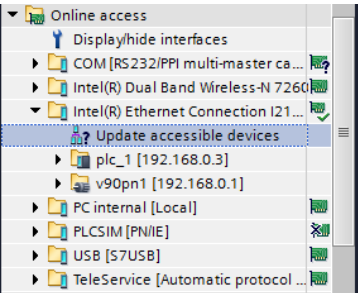
Table 4-2 Configurations via TIA Portal V14

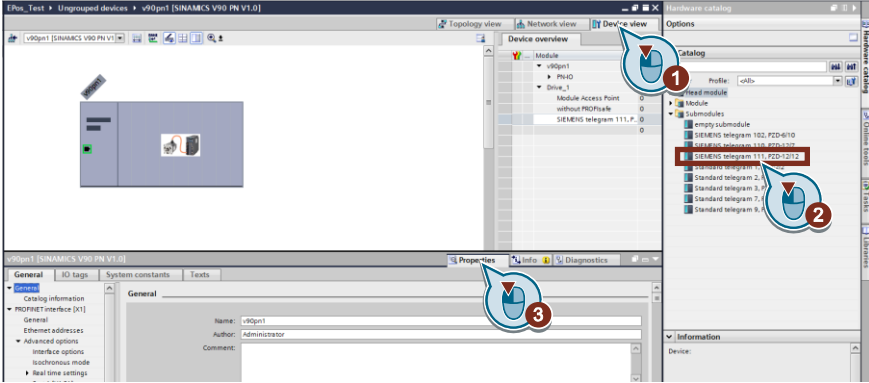
Step	Descriptions
1.	<p><b>Create a new project</b></p> <p>Open TIA Portal and create a new project:</p>  <ol style="list-style-type: none"> <li>Click <b>“Create new project”</b>.</li> <li>Input a name for this newly created project; for example, “EPos_Test”.</li> <li>Click <b>“Create”</b> button.</li> </ol>
2.	<p><b>Add PLC into project</b></p>  <ol style="list-style-type: none"> <li>Click <b>“Devices &amp; networks”</b>.</li> <li>Click <b>“Add new device”</b>.</li> <li>Find the target PLC.</li> <li>Select the PLC FW version.</li> </ol>

Step	Descriptions
3.	<p><b>Install V90PN GSD file into TIA Portal</b></p> <ol style="list-style-type: none"> <li>Click menu “Options” → “Manage general station description (GSD)”.</li> </ol>  <ol style="list-style-type: none"> <li>Find the GSD file and install it.</li> </ol>  <p><b>Note:</b> The latest V90PN GSD file can be found from the link below: <a href="http://support.automation.siemens.com/WW/view/en/109737269">http://support.automation.siemens.com/WW/view/en/109737269</a></p>



Step	Descriptions
4.	<p><b>Insert V90PN into project</b></p>  <ol style="list-style-type: none"> <li>1. Click <b>"Network view"</b> tab to switch to <b>"Network view"</b>.</li> <li>2. In the <b>"Hardware Catalog"</b>, click <b>"Other field devices"</b> → <b>"PROFINET IO"</b> → <b>"Drives"</b> → <b>"SIEMENS AG"</b> → <b>"SINAMICS"</b> → <b>"SINAMICS V90 PN V1.0"</b>.</li> <li>3. Double-click the V90 PN node or drag it to the network view.</li> </ol>
5.	<p><b>Connect SINAMICS V90PN to SIMATIC PLC</b></p> <p>Establish the connection between SINAMICS V90 PN and SIMATIC PLC:</p> 

Step	Descriptions
6.	<p data-bbox="499 264 1018 297"><b>Make device configurations for SIMATIC PLC</b></p> <ol style="list-style-type: none"> <li data-bbox="499 297 1265 365">1. In the “<b>Network view</b>”, double-click PLC to enter the device view of SIMATIC PLC:</li> </ol>  <ol style="list-style-type: none"> <li data-bbox="499 723 1201 768">2. Double-click PLC to open the property view of SIMATIC PLC:</li> </ol>  <p data-bbox="547 1350 1265 1384">Configure PLC properties like device name, ethernet address...</p> <p data-bbox="547 1417 611 1451"><b>Note:</b></p> <p data-bbox="547 1451 1313 1507">You can also use the “<b>Online access</b>” to find the accessible device and make sure the information is consistent:</p> 

Step	Descriptions
7.	<p><b>Make device configurations for SINAMICS V90PN</b></p>  <ol style="list-style-type: none"> <li>1. Click the <b>"Device view"</b> tab to switch to device view.</li> <li>2. Select telegram 111 from the submodule for SINAMICS V90PN.</li> <li>3. Double-click the servo drive and configure properties of SINAMICS V90PN in the property view.</li> </ol> <p><b>Note:</b> You can also use the <b>"Online access"</b> to find the accessible device and make sure the information is consistent.</p>

## 5 Operation of the application

### 5.1 Scenario A (with SINA\_POS (FB284))

In the following paragraph, we will use the function block SINA\_POS (FB284) to perform the operations of SINAMICS V90 PN with EPos (basic positioner).

#### 5.1.1 Function block SINA\_POS (FB284)

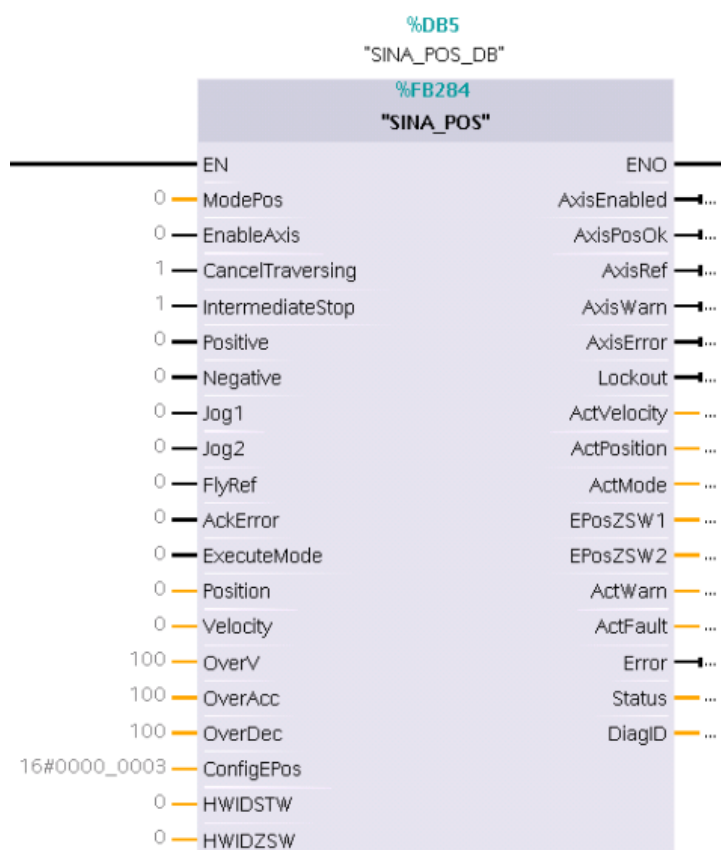
**NOTICE** Standard telegram 111 must be selected for the communication when configuring the SINAMICS drive.

For more information about the function block SINA\_POS, please refer to the manual about SINAMICS function blocks. The latest version of this manual is available at the link below:

<https://support.industry.siemens.com/cs/ww/en/view/109475044>

The SINA\_XXX function blocks are delivered with the actual Startdrive software package or in a separate download.

Figure 5-1 SINA\_POS (FB284)



### Input interface of SINA\_POS

The input interface consists of 19 inputs with various data formats.

When the function block is first configured, the inputs are set up with initial values. An overview of the input interface is subsequently shown as follows:

Table 5-1 Input interface of SINA\_POS

Input signal	Type	Default	Meaning
ModePos	INT	0	Operating mode: 1 = relative positioning 2 = absolute positioning 3 = positioning as setup 4 = approach reference point 5 = set reference point 6 = traversing block 0~15 7 = Jog mode 8 = incremental jogging
EnableAxis	BOOL	0	Switching command: 0=OFF, 1=ON
CancelTraversing	BOOL	1	0 = reject active traversing task, 1 = do not reject
IntermediateStop	BOOL	1	0 = active traversing command is interrupted, 1 = no intermediate stop
Positive	BOOL	0	Positive direction
Negative	BOOL	0	Negative direction
Jog1	BOOL	0	Jog signal source 1
Jog2	BOOL	0	Jog signal source 2
FlyRef	BOOL	0	0 = deselect flying referencing, 1 = select flying referencing <b>Note:</b> Currently flying referencing is not supported by SINAMICS V90 PN.
AckError	BOOL	0	Acknowledging errors
ExecuteMode	BOOL	0	Activate traversing task / setpoint activate reference function
Position	DINT	0[LU]	Position setpoint in [LU] for direct setpoint input/ MDI mode OR traversing block number for traversing block mode
Velocity	DINT	0[1000 LU/min]	Velocity in [1000 LU/min] for MDI mode
OverV	INT	100[%]	Velocity override active for all modes: 0-199%
OverAcc	INT	100[%]	Acceleration override active 0-100%
OverDec	INT	100[%]	Deceleration override active 0-100%

Input signal	Type	Default	Meaning
ConfigEPos	DWORD	3h	<p>With this interface, the following bit functions of telegram 111 can be transmitted:</p> <ul style="list-style-type: none"> <li>• Bit0 = STW1.1 (OFF2: 1 = no pulse inhibit)</li> <li>• Bit1 = STW1.2 (OFF3: 1 = no pulse inhibit)</li> <li>• Bit2 = EPosSTW2.14 (Software limit switch: 1 = active)</li> <li>• Bit3 = EPosSTW2.15 (Stop output cam: 1 = active)</li> <li>• Bit4 = EPosSTW2.11 (reserved)</li> <li>• Bit5 = EPosSTW2.10 (reserved)</li> <li>• Bit6 = EPosSTW2.2 (signal source reference mark)</li> <li>• Bit7 = STW1.13 (External block change)</li> <li>• Bit8 = EPosSTW1.12 (continuous setpoint transfer MDI: 1 = active)</li> <li>• Bit9 = STW2.0 (reserved)</li> <li>• Bit10 = STW2.1 (reserved)</li> <li>• Bit11 = STW2.2 (reserved)</li> <li>• Bit12 = STW2.3 (reserved)</li> <li>• Bit13 = STW2.4 (reserved)</li> <li>• Bit14 = STW2.7 (reserved)</li> <li>• Bit15 = STW1.14 (reserved)</li> <li>• Bit16 = STW1.15 (reserved)</li> <li>• Bit17 = EPosSTW1.6 (reserved)</li> <li>• Bit18 = EPosSTW1.7 (reserved)</li> <li>• Bit19 = EPosSTW1.11 (reserved)</li> <li>• Bit20 = EPosSTW1.13 (reserved)</li> <li>• Bit21 = EPosSTW2.3 (reserved)</li> <li>• Bit22 = EPosSTW2.4 (reserved)</li> <li>• Bit23 = EPosSTW2.6 (reserved)</li> <li>• Bit24 = EPosSTW2.7 (reserved)</li> <li>• Bit25 = EPosSTW2.12 (reserved)</li> <li>• Bit26 = EPosSTW2.13 (reserved)</li> <li>• Bit27 = STW2.5 (reserved)</li> <li>• Bit28 = STW2.6 (reserved)</li> <li>• Bit29 = STW2.8 (travel to fixed endstop: 1 = active)</li> <li>• Bit30 = STW2.9 (reserved)</li> </ul>
HWIDSTW	HW_IO	0	Symbolic name or HW ID/IO address on the SIMATIC S7-1x00/300/400 of the setpoint slot
HWIDZSW	HW_IO	0	Symbolic name or HW ID/IO address on the SIMATIC S7-1x00/300/400 of the setpoint slot



## Output signal of SINA\_POS

The output interface consists of 16 outputs with various data formats.

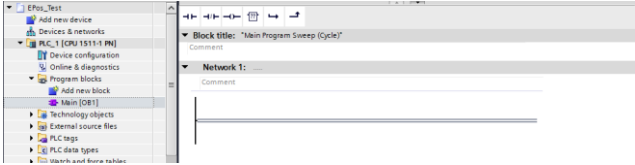
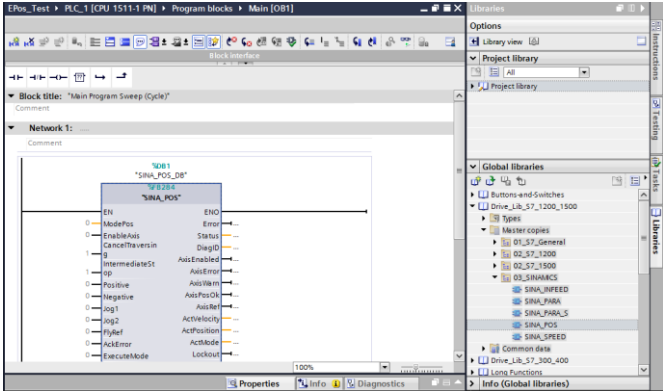
When the block is first configured, the outputs are set up with initial values. The following is an overview of the output interface:

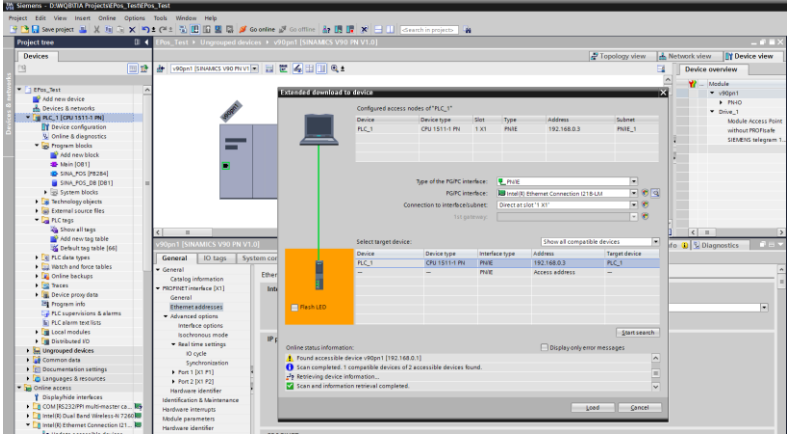
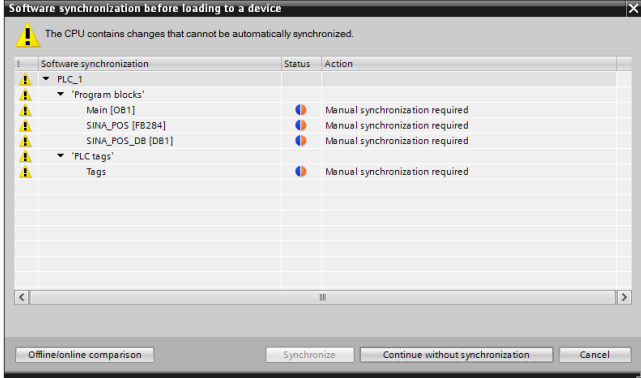
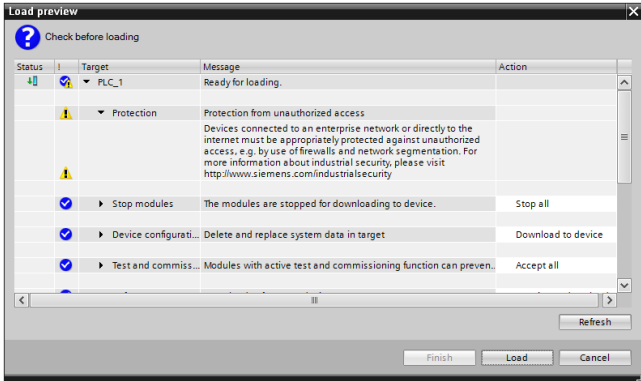
Table 5-2 Output signal of SINA\_POS

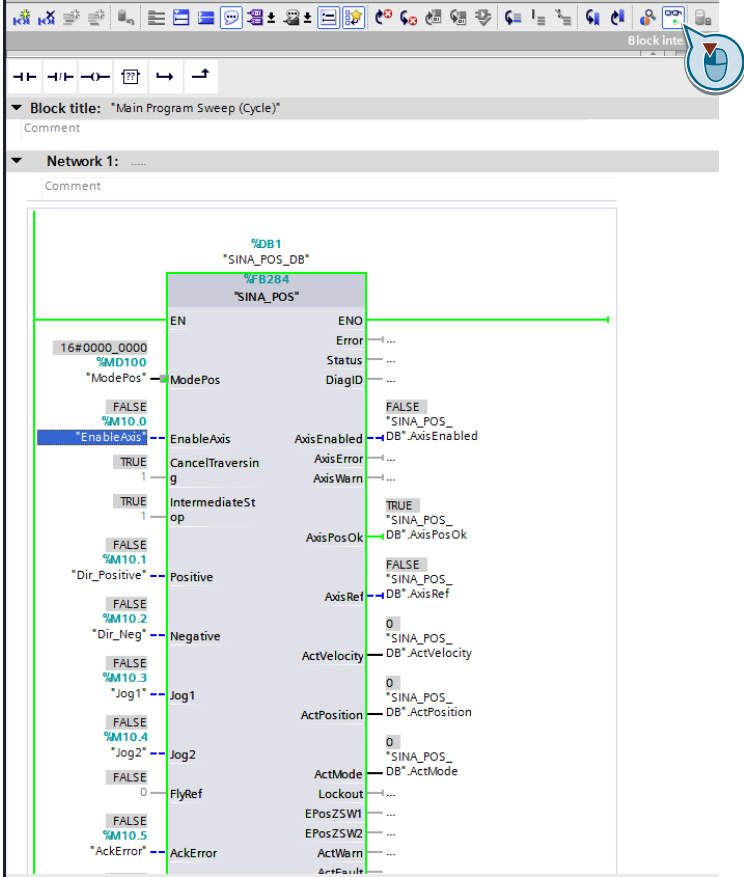
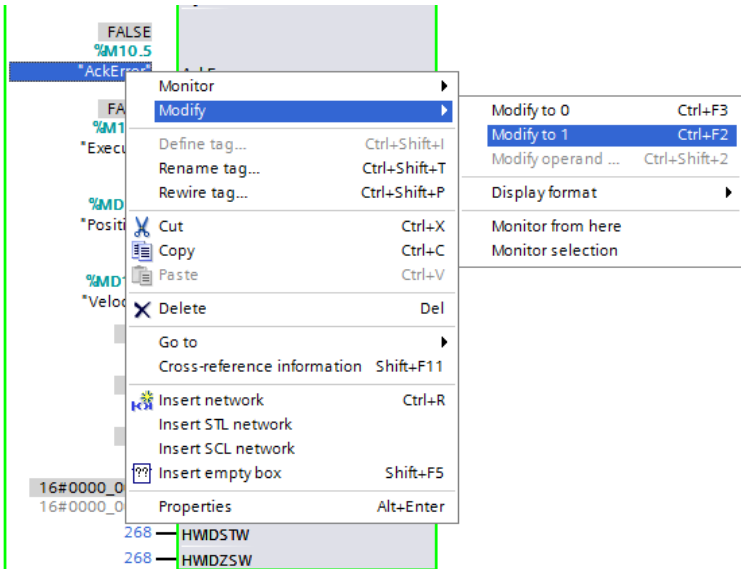
Output signal	Type	Default	Meaning
AxisEnabled	BOOL	0	Drive is ready and switched on
AxisPosOk	BOOL	0	Target position of the axis reached
AxisRef	BOOL	0	Reference point set
AxisWarn	BOOL	0	Drive has alarm
AxisError	BOOL	0	Drive has fault
Lockout	BOOL	0	Switching-on inhibit
ActcVelocity	DINT	0	Actual velocity (scaled 40000000h = 100% x p2000)
ActPosition	DINT	0[LU]	Actual position in LU
ActMode	INT	0	Currently active mode
EPosZSW1	WORD	0	Status of EPos ZSW1 (bit-granular)
EPosZSW2	WORD	0	Status of EPos ZSW2 (bit-granular)
ActWarn	WORD	0	Actual alarm number
ActFault	WORD	0	Actual fault active
Error	BOOL	0	1 = group fault active
Status	INT	0	<ul style="list-style-type: none"> <li>16#7002: No fault – block is being executed</li> <li>16#8401: Drive fault</li> <li>16#8402: Switching-on inhibit</li> <li>16#8403: flying referencing could not be started</li> <li>16#8600: Error DPRD_DAT</li> <li>16#8601: Error DPWR_DAT</li> <li>16#8202: incorrect operating mode selected</li> <li>16#8203: incorrect setpoints parameterized</li> <li>16#8204: incorrect traversing block number selected</li> </ul>
DiagID	WORD	0	Extended communication error → error during SFB call

5.1.2 Operations

Table 5-3 Operations

Step	Descriptions
1.	<div><p><b>Make PLC programming</b></p><p>1. Open program view by clicking “Main [OB1]”:</p></div> <p>2. Find SINA_POS and add it into the main program:</p> 

Step	Descriptions
2.	<p><b>Compile the project and download it into PLC CPU</b></p> <ol style="list-style-type: none"> <li>1. Compile the project by clicking the <b>"Compile"</b> button.</li> <li>2. Download the project into PLC CPU</li> </ol>   

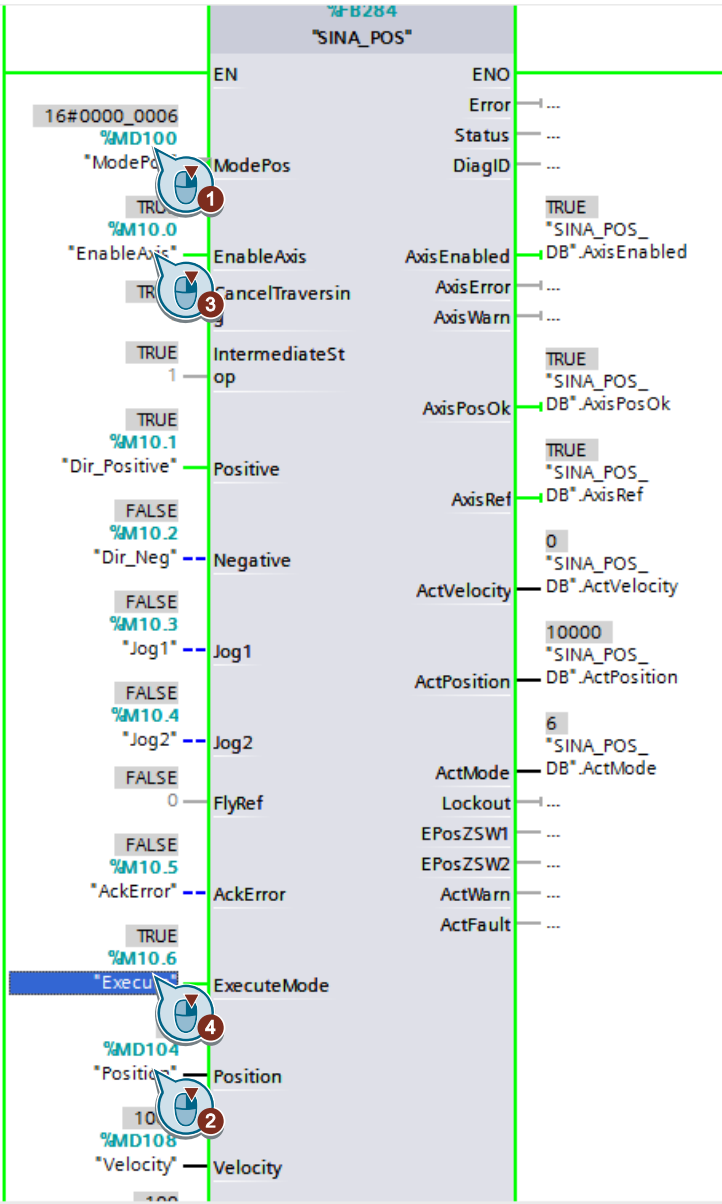
Step	Descriptions
3.	<div><p><b>Activate program monitoring</b></p><ol style="list-style-type: none"><li>Switch to the view of main program.</li><li>Press the monitoring button to activate program monitoring.</li></ol></div> <div></div>
4.	<div><p><b>Clear faults</b></p><p>Clear faults with M10.5 (<b>AckError</b>) = 1.</p></div> <div></div>

Step	Descriptions
5.	<p><b>Jog</b></p> <ol style="list-style-type: none"> <li>Set operating mode (MD100) to be <b>7h</b> (Jog mode).</li> <li>Enable servo drive by setting M10.0 (<b>EnableAxis</b>) to be 1. If the drive has been successfully enabled, the output signal "<b>AxisEnabled</b>" turns to be "1".</li> <li>Activate Jog resource 1 by setting M10.3 to be 1 or Jog resource 2 by setting M10.4 to be 1. Then, the motor starts running at 30 rpm that is the default setting for Jog speed.</li> </ol>

Step	Descriptions
6.	<p><b>MDI</b></p> <ol style="list-style-type: none"> <li>Set M10.3 (<b>Jog1</b>) or M10.4 (<b>Jog2</b>) to be "0".</li> <li>Set operating mode (MD100) to be <b>1h</b> (MDI: relative positioning).</li> <li>Enable servo drive by setting M10.0 (<b>EnableAxis</b>) to be 1. If the drive has been successfully enabled, the output signal "<b>AxisEnabled</b>" turns to be "1".</li> <li>Configure MDI (relative positioning) parameters as follows: <ul style="list-style-type: none"> <li>MD104 = 100000: MDI target position of 10 motor revolutions (10000 LU)</li> <li>MD108 = 1000: MDI speed of 100 rpm</li> </ul> </li> <li>Trigger a rising edge to M10.6 (<b>execute mode</b>) and the motor starts running for 10 revolutions at the speed of 100 rpm.</li> </ol>



Step	Descriptions
7.	<p><b>Homing</b></p> <p>The diagram shows a ladder logic network for the homing process. It starts with a reset coil (R) for MD100, set to 16#0000_0004. A normally open contact (NO) for M10.0 (EnableAxis) is connected to the EN input of the SINAMICS V90 PN EPos block. A normally open contact (NO) for M10.1 (Dir_Positive) is connected to the Dir_Positive input. A normally open contact (NO) for M10.2 (Dir_Neg) is connected to the Dir_Neg input. A normally open contact (NO) for M10.3 (Jog1) is connected to the Jog1 input. A normally open contact (NO) for M10.4 (Jog2) is connected to the Jog2 input. A normally open contact (NO) for M10.5 (AckError) is connected to the AckError input. A normally open contact (NO) for M10.6 (ExecuteMode) is connected to the ExecuteMode input. A normally open contact (NO) for M10.7 (FlyRef) is connected to the FlyRef input. A normally open contact (NO) for M10.8 (Velocity) is connected to the Velocity input. The block outputs include ENO, Error, Status, DiagID, AxisEnabled, AxisError, AxisWarn, AxisPosOk, AxisRef, ActVelocity, ActPosition, ActMode, Lockout, EPosZSW1, EPosZSW2, ActWarn, and ActFault. The block is configured with the following parameters: ModePos (16#0000_0004), EnableAxis (M10.0), Dir_Positive (M10.1), Dir_Neg (M10.2), Jog1 (M10.3), Jog2 (M10.4), FlyRef (M10.5), AckError (M10.6), ExecuteMode (M10.7), FlyRef (M10.8), Velocity (M10.8), and Position (M10.8).</p> <ol style="list-style-type: none"> <li>Set operating mode (MD100) to be <b>4h (approach reference point)</b>.</li> <li>Set M10.1 to be "1", which means the start homing direction of positive has been selected.</li> <li>Enable servo drive by setting M10.0 (<b>EnableAxis</b>) to be "1".</li> <li>Trigger a rising edge to M10.6 (<b>execute mode</b>) and the motor starts homing as configured in SINAMICS V-ASSISTANT. In this example, the homing method of searching zero mark has been selected.</li> </ol> <p>When the homing operation has been done, the output signal "<b>AxisRef</b>" turns to be 1.</p>

Step	Descriptions
8.	<p><b>Traversing block</b></p>  <ol style="list-style-type: none"> <li>Set operating mode (MD100) to be <b>6h (traversing block)</b>.</li> <li>Set MD104 to be 0, which means that traversing block 0 has been selected.</li> <li>Enable servo drive by setting M10.0 (<b>EnableAxis</b>) to be "1".</li> <li>Trigger a rising edge to M10.6 (<b>execute mode</b>) and the motor starts running according to the configurations of traversing block 0 in SINAMICS V-ASSISTANT; in this example, relative positioning of one motor revolution. When the positioning has been done, the output signal of "ActPosition" will display the actual position.</li> </ol>
9.	<p><b>End operation</b></p> <ol style="list-style-type: none"> <li>Set M10.0 (EnableAxis) to be "0", which means the servo drive is switched to servo-off state.</li> <li>Go offline.</li> </ol>

## 6 Appendix

### 6.1 Service and support

#### Industry Online Support

Do you have any questions or need assistance?

Siemens Industry Online Support offers round the clock access to our entire service and support know-how and portfolio.

The Industry Online Support is the central address for information about our products, solutions and services.

Product information, manuals, downloads, FAQs, application examples and videos – all information is accessible with just a few mouse clicks:

<https://support.industry.siemens.com/>

#### Technical Support

The Technical Support of Siemens Industry provides you fast and competent support regarding all technical queries with numerous tailor-made offers – ranging from basic support to individual support contracts. Please send queries to Technical Support via Web form:

<https://www.siemens.com/industry/supportrequest>

#### SITRAIN – Training for Industry

We support you with our globally available training courses for industry with practical experience, innovative learning methods and a concept that's tailored to the customer's specific needs.

For more information on our offered trainings and courses, as well as their locations and dates, refer to our web page:

<https://www.siemens.com/sitrain>

#### Service offer

Our range of services includes the following:

- Plant data services
- Spare parts services
- Repair services
- On-site and maintenance services
- Retrofitting and modernization services
- Service programs and contracts

You can find detailed information on our range of services in the service catalog web page:

<https://support.industry.siemens.com/cs/sc>

#### Industry Online Support app

You will receive optimum support wherever you are with the "Siemens Industry Online Support" app. The app is available for Apple iOS, Android and Windows Phone:

<https://support.industry.siemens.com/cs/ww/en/sc/2067>

## 6.2 Links and Literature

Table 6-1

No.	Topic
\1\	Siemens Industry Online Support <a href="https://support.industry.siemens.com">https://support.industry.siemens.com</a>
\2\	Link to this entry page of this application example <a href="https://support.industry.siemens.com/cs/ww/en/view/109747750">https://support.industry.siemens.com/cs/ww/en/view/109747750</a>
\3\	SINAMICS V90 PN Operating Instruction <a href="https://support.industry.siemens.com/cs/ww/en/view/109742518">https://support.industry.siemens.com/cs/ww/en/view/109742518</a>

## 7 Contact

Siemens Ltd., China  
 DF M3-BF GMC  
 No. 18 Siemens Road  
 Jiangning Development Zone  
 Nanjing, 211100  
 China  
 mailto: [mc\\_gmc\\_mp\\_asia.cn@siemens.com](mailto:mc_gmc_mp_asia.cn@siemens.com)

## 8 History

Table 8-1

Version	Date	Modifications
V1.0	06/2017	First version
V1.1	05/2018	Second version, upgrade the project to TIA Portal V15