

SIPROTEC

Distance protection
7SA522, 7SA6

Communication module

PROFIBUS-DP
Bus mapping

Preface

Table of contents

Data of the PROFIBUS-DP messages

1

Standard mapping 3-1

2

Standard mapping 3-2

3

Index

Revision 2.0

Edition: December 2004

C53000-L1840-B007-03

Liability statement

We have checked the contents of this manual against the hardware and software described. Exclusions and deviations cannot be ruled out; we accept no liability for lack of total agreement.

The information in this manual is checked periodically, and necessary corrections will be included in future editions.

We appreciate any suggested improvements.

We reserve the right to make technical improvements without notice.

Copyright

Copyright © Siemens AG 2004. All rights reserved.

Dissemination or reproduction of this document, or evaluation and communication of its contents, is not authorized except where expressly permitted. Violations are liable for damages. All rights reserved, particularly for the purposes of patent application or trademark registration.

Registered trademarks

SIPROTEC®, SIMATIC®, SIMATIC NET®, SINAUT®, SICAM® and DIGSI® are registered trademarks of Siemens AG.

Other designations in this manual may be trademarks that if used by third parties for their own purposes may violate the rights of the owner.

Preface

Purpose of this manual

This manual describes the data in the PROFIBUS-DP messages of the SIPROTEC devices 7SA522, 7SA6 and is divided into the following topics:

- Data of the PROFIBUS-DP messages → Chapter 1,
- Standard mapping 3-1 → Chapter 2,
- Standard mapping 3-2 → Chapter 3.

General details about the function, operation, assembly and commissioning of the SIPROTEC devices you find in the

- SIPROTEC4 System Manual, order no. E50417–H1176–C151.

PROFIBUS-DP communication profile documentation

The following additional manual informs you about the data types, bus specific parameters and hardware interface of the PROFIBUS-DP slave modul of the SIPROTEC devices:

| Manual | Order number |
|--|----------------------|
| SIPROTEC Communication module, PROFIBUS-DP - Communication profile | C53000-L1840-B001-03 |

PROFIBUS-DP specification

The PROFIBUS-DP specification and the structure of the PROFIBUS-DP messages are defined in the European Standard EN 50170:

- PROFIBUS Specification
Normative Parts of PROFIBUS-FMS, -DP, -PA
According to the European Standard
EN 50170, Volume 2
PROFIBUS Nutzerorganisation e.V.

Validity

This manual is valid for the SIPROTEC devices:

- 7SA522, 7SA6 (firmware version 4.20 or higher)

with

- PROFIBUS-DP communication module version 02.00.05 or higher,
- PROFIBUS-DP communication module version 03.00.03 or higher at use of
 - Standard mapping 3-2.

For device parameterization have to be used:

- DIGSI 4.30 or higher,
- DIGSI 4.21 considering the preconditions explained in the manual “SIPROTEC Communication module, PROFIBUS-DP - Communication profile” (ref. to page 3),
- PROFIBUS-DP standard mappings 3-1 to 3-n (n = device type dependent number of standard mappings).

Additional Support

For questions regarding SIPROTEC4 devices, please contact your Siemens representative.

Training courses

Individual course offerings may be found in our Training Catalog and questions can be directed to our Training Centre. Please contact your Siemens representative.

Target audience

Protection engineers, commissioning engineers, personnel concerned with adjustment, checking and service of selective protective equipment, automatic and control facilities and personnel of electrical facilities and power plants.



Warning!

Hazardous voltages are present in this electrical equipment during operation. Non-observance of the safety rules can result in severe personal injury or property damage.

Only qualified personnel shall work on and around this equipment after becoming thoroughly familiar with all warnings and safety notices of this and the associated manuals as well as with the applicable safety regulations.

The successful and safe operation of this device is dependent on proper transport and storage, proper handling, installation, operation, and maintenance by qualified personnel under observance of all warnings and hints contained in this and the associated manuals.

In particular the general erection and safety regulations (e.g. IEC, EN, DIN, VDE, or other national and international standards) regarding the correct use of high-voltage installations must be observed. Non-observance can result in death, personal injury or substantial property damage.

QUALIFIED PERSONNEL

For the purpose of this manual and product labels, a qualified person is one who is familiar with the installation, construction and operation of the equipment and the hazards involved. In addition, he has the following qualifications:

- Is trained and authorized to energize, de-energize, clear, ground and tag circuits and equipment in accordance with established safety practices.
- Is trained in the proper care and use of protective equipment in accordance with established safety practices.
- Is trained in rendering first aid.

Typographic and graphical conventions

The following text formats are used to identify concepts giving device information described by the text flow:

Parameter names, or identifiers for configuration or function parameters that appear in the device display or on the screen of a PC (with DIGSI) are shown in mono-script (same point size) bold text. This also applies to header bars for selection menus.

Parameter conditions, or possible settings of parameters that appear in the device display or on the screen of a PC (with DIGSI), are additionally shown in italic style. This also applies to selection items for selection menus.

„Annunciations“, or identifiers for information produced by the device or required by other devices or from the switchgear is shown in mono-script (same point size) and placed into quotation marks.

For diagrams in which the identifier type results from the representation itself, text conventions may differ from the above-mentioned.

Revision index

Listing of the changes between the editions of this manual:

| Modified chapters / pages | Edition | Reasons of modification |
|---------------------------|---------|---|
| | 1.0 | First edition, Doc.-No.: C53000-L1840-B007-03 Oct. 2 nd , 2001 |
| general Chap. 1.4, 3 | 2.0 | <ul style="list-style-type: none">• Page numbering in the manual now continuous, not chapter-related any more• New: description of Standard mapping 3-2 with event list Dec. 21 st , 2004 |
| | | |

Table of contents

- Preface..... 3**

- Revision index 7**

- 1 Data of the PROFIBUS-DP messages 11**
 - 1.1 Explanations 12
 - 1.2 Messages in output direction:
PROFIBUS-DP master to the SIPROTEC device 14
 - 1.3 Messages in input direction:
SIPROTEC device to the PROFIBUS-DP master 15
 - 1.3.1 Annunciations 15
 - 1.3.2 Measured values 15
 - 1.3.3 Metered measurands..... 16
 - 1.4 Configuration data of the standard mappings..... 17
 - 1.5 Notes to SIPROTEC objects 19
 - 1.5.1 Control mode REMOTE..... 19
 - 1.5.2 Changing the setting group 20
 - 1.5.3 Stop data transmission 20
 - 1.5.4 Fault locator..... 20

- 2 Standard mapping 3-1 21**
 - 2.1 Message in output direction..... 22
 - 2.1.1 Double commands..... 22
 - 2.1.2 Internal commands 22
 - 2.1.3 Single commands and taggings 23
 - 2.2 Message in input direction..... 25
 - 2.2.1 Annunciations 25
 - 2.2.1.1 Double-point indications 25
 - 2.2.1.2 Single-point indications and taggings 25
 - 2.2.1.3 Status indications 26
 - 2.2.1.4 Monitoring information 27
 - 2.2.1.5 Sensitive ground fault protection 27
 - 2.2.1.6 Fault indications 27
 - 2.2.1.7 Auto reclose function 28
 - 2.2.2 Measured values 29

| | | |
|----------|---|-----------|
| 2.2.3 | Fault locator | 29 |
| 2.2.4 | Metered measurands | 30 |
| 3 | Standard mapping 3-2 | 31 |
| 3.1 | Message in output direction | 32 |
| 3.1.1 | Event list | 32 |
| 3.1.2 | Double commands | 32 |
| 3.1.3 | Internal commands | 33 |
| 3.1.4 | Single commands and taggings | 33 |
| 3.2 | Message in input direction | 34 |
| 3.2.1 | Annunciations | 34 |
| 3.2.1.1 | Double-point indications | 34 |
| 3.2.1.2 | Single-point indications and taggings | 34 |
| 3.2.1.3 | Setting group | 35 |
| 3.2.1.4 | Diagnosis | 35 |
| 3.2.1.5 | Device status | 35 |
| 3.2.1.6 | Measurement supervision | 36 |
| 3.2.1.7 | Auto reclosing and Pilot protection for Distance protection | 36 |
| 3.2.1.8 | Protection pickup indications | 37 |
| 3.2.1.9 | Protection trip indications | 37 |
| 3.2.1.10 | Distance protection Time Outs | 38 |
| 3.2.1.11 | Single-point indications and taggings | 38 |
| 3.2.2 | Measured values | 39 |
| 3.2.3 | Fault locator | 39 |
| 3.2.4 | Metered measurands | 40 |
| 3.2.5 | Event list | 40 |
| | Glossary | 41 |
| | Index | 43 |

Data of the PROFIBUS-DP messages

This chapter delivers explanations to the data descriptions of the standard mappings as well as notes for evaluation of selected SIPROTEC objects and for the configuration of the standard mapping in the PROFIBUS-DP master.

| | | |
|-----|---|----|
| 1.1 | Explanations | 12 |
| 1.2 | Messages in output direction: PROFIBUS-DP master to the SIPROTEC device | 14 |
| 1.3 | Messages in input direction: SIPROTEC device to the PROFIBUS-DP master | 15 |
| 1.4 | Configuration data of the standard mappings | 17 |
| 1.5 | Notes to SIPROTEC objects | 19 |

1.1 Explanations



Note:

The examples shown in this chapter 1.1 do not necessarily correspond to the real allocation of the objects in the bus mapping.

Chapters 2 and 3 define the data area of the PROFIBUS-DP messages for data transfer between the PROFIBUS-DP slave of the SIPROTEC devices 7SA522, 7SA6 and the PROFIBUS-DP master.

The columns "Designation of the SIPROTEC objects" contain the names of the SIPROTEC objects for "US English" device language.

The listed SIPROTEC objects in the PROFIBUS-DP messages' data area are sorted after byte offset, beginning with 0.

Variables with data type greater than or equal to 1 byte

The offset defines the start of the most significant byte in the message, e.g.:

| Offset | Designation of the SIPROTEC objects | Comments | Scaling (32767 corresponds to...) | Internal object no. |
|--------|-------------------------------------|--------------------|-----------------------------------|---------------------|
| 10 | Ia = | Current in phase A | 3276.7 A | 601 |

The measured value "Ia" is assigned to data byte 10 (most significant byte of the measured value) and data byte 11 (least significant byte of the measured value) in the PROFIBUS-DP message

Bit variables (SP/SC, DP/DC)

The offset indicates the byte which contains the bit value and the position of bit 0 of the bit variable, e.g. (input message):

| Offset | Designation of the SIPROTEC objects | Comments | Internal object no. |
|--------|-------------------------------------|-----------------|---------------------|
| 0 / 0 | Q0 ON/OFF OFF | Circuit breaker | - |
| 0 / 1 | Q0 ON/OFF ON | | |

| Offset | Designation of the SIPROTEC objects | Comments | Internal object no. |
|--------|-------------------------------------|-----------------------------|---------------------|
| 17 / 4 | Fail Ph. Seq. | 1 = Failure: Phase Sequence | 171 |

The checkback signal from the circuit breaker (as double-point indication) is located in data byte 0, bit positions 2^0 (bit 0) and 2^1 (bit 1).

The single-point indication "Fail Ph. Seq." is located in byte 17, bit position 2^4 .



Note:

The definition of the data types (single-point indication, double-point indication, measured value etc.) are contained in the manual "SIPROTEC Communication module, PROFIBUS-DP - Communication profile" (ref. to page 3).

1.2 Messages in output direction: PROFIBUS-DP master to the SIPROTEC device

The messages in PROFIBUS-DP output direction (ref. to chap. 2.1 and 3.1) allow:

- command outputs through the output relays of the SIPROTEC devices (external commands),
- manipulation of taggings (internal commands).



Note:

- The allocation of the output relays to the switching devices and to the output channels is defined during parameterization of the SIPROTEC devices.
 - Depending on the device composition there may be less than indicated output relays (and corresponding PROFIBUS-DP message positions) available in the SIPROTEC device.
-

1.3 Messages in input direction: SIPROTEC device to the PROFIBUS-DP master

The messages in PROFIBUS-DP input direction (ref. to chap. 2.2 and 3.2) allow:

- polling of switching devices' status and binary inputs,
- transmission of annunciations, measurands and meter values to the PROFIBUS-DP master.

1.3.1 Annunciations



Note:

- The allocation of the input channels to the binary inputs is defined during parameterization of the devices.
 - Depending on the device composition and the existing protection packages not all of the indicated binary inputs or protection annunciations (and corresponding PROFIBUS-DP message positions) may be available in the SIPROTEC device.
-

1.3.2 Measured values



Note:

Depending on the device composition not all of the indicated analog inputs (and corresponding PROFIBUS-DP message positions) may be available in the SIPROTEC device.

The given default scaling values for the measured values in the standard mappings apply to installations with the following nominal operating values:

Full Scale Voltage (parameter address 1103):

→ 100.01 ... 1000 kV

Full Scale Current (parameter address 1104):

→ 10.01 ... 1000 A

Product of:

- Rated Primary Voltage (parameter address 0203) and
- Matching ratio Phase-VT to Open-Delta-VT (parameter address 0211):
→ 100.01 ... 1000 kV

Product of:

- CT Rated Primary Current (parameter address 0205) and
- Matching ratio I_4/I_{ph} for CT's (parameter address 0221)
→ 10,01 ... 1000 A

Power values:

- Product of Full Scale Voltage and Full Scale Current multiplied by $\sqrt{3}$
→ 100,01 ... 1000 MW (MVAR)



Note:

Changes of the scaling of the measured values are possible in adaption of the concrete installation environment.

You find information about this in the manual "SIPROTEC Communication module, PROFIBUS-DP - Communication profile" (ref. to page 3).

1.3.3 Metered measurands

Scaling

The scaling of the metered measurands which are derived from measured values ("Wp+", "Wq+", "Wp-", "Wq-") refers to:

60000 Impulses per hour for $V = V_{nom}$ and $I = I_{nom}$

V_{nom} = Full Scale Voltage (parameter address = 1103)

I_{nom} = Full Scale Current (parameter address = 1104)

Example

In the parameter set is configured:

$I_{nom} = 1000$ A and $U_{nom} = 400$ kV,

60000 impulse corresponds so that:

$1 \text{ h} * 1000 \text{ A} * 400 \text{ kV} * \sqrt{3} = 692.82 \text{ MWh}$



Note:

- The type of the update (cyclic, with or without deletion) and the update interval must be programmed for the metered measurands with the parameterization software DIGSI.
 - The scaling of the metered measurands at binary inputs (pulse counters) depends on the externally connected pulse generator.
-

1.4 Configuration data of the standard mappings

There are two standard mappings (standard mapping 3-1 and standard mapping 3-2) available for the SIPROTEC devices 7SA522, 7SA6 which differ in the data size of the PROFIBUS-DP messages.

Standard mapping 3-1

The standard mapping 3-1 contains:

Output direction:

- 5 Double commands
- 19 Single commands

Input direction:

- 5 Double-point indications
- 70 Single-point indications
- 17 Measured values (Integer)
- 4 Metered measurands (Unsigned Long)
- 4 Integer values for fault locator and statistics

Standard mapping 3-2

The standard mapping 3-2 contains:

Output direction:

- Handshake byte for event list via PROFIBUS-DP
- 5 Double commands
- 11 Single commands

Input direction:

- 5 Double-point indications
- 86 Single-point indications
- 19 Measured values (Integer)
- 1 Integer value for fault locator
- 4 Metered measurands (Unsigned Long)
- Handshake byte and three message blocks for event list via PROFIBUS-DP

Configuration data

Standard mapping 3-1: **1FH 1FH 1FH 1FH 13H 25H**

(68 bytes input-, 6 bytes output direction)

Standard mapping 3-2: **1FH 1FH 1FH 1FH 13H DFH 25H**

(100 bytes input-, 6 bytes output direction)

PROFIBUS-DP master

At the configuration of a PROFIBUS-DP slave of the SIPROTEC devices in the parameterization system of the PROFIBUS-DP masters are to select the following modules for the 7SA522, 7SA6 standard mappings and to allocate associated addresses in the I/O addressing range of the PROFIBUS-DP master:

Standard mapping 3-1:

| Module | Order number | Input address | Output address |
|--------|------------------|---------------|----------------|
| 0 | Input - 16 Bytes | Adr_lx | |
| 1 | Input - 16 Bytes | Adr_lx + 16 | |
| 2 | Input - 16 Bytes | Adr_lx + 32 | |
| 3 | Input - 16 Bytes | Adr_lx + 48 | |
| 4 | Input - 4 Bytes | Adr_lx + 64 | |
| 5 | Output - 6 Bytes | | Adr_Ox |

Standard mapping 3-2:

| Module | Order number | Input address | Output address |
|--------|------------------------------|---------------|----------------|
| 0 | Input - 16 Bytes | Adr_lx | |
| 1 | Input - 16 Bytes | Adr_lx + 16 | |
| 2 | Input - 16 Bytes | Adr_lx + 32 | |
| 3 | Input - 16 Bytes | Adr_lx + 48 | |
| 4 | Input - 4 Bytes | Adr_lx + 64 | |
| 5 | Input - 16 Words, consistent | Adr_lx + 68 | |
| 6 | Output - 6 Bytes | | Adr_Ox |

Adr_lx and Adr_Ox indicate arbitrary (as a rule even) addresses in the I/O addressing range of the PROFIBUS-DP master.

Adr_lx (base address of the inputs) is identical with offset 0 of the PROFIBUS-DP message data of the SIPROTEC device in input direction (ref. to chap. 2.2 and 3.2).

Adr_Ox (base address of the outputs) is identical with offset 0 of the PROFIBUS-DP message data of the SIPROTEC device in output direction (ref. to chap. 2.1 and 3.1).



Note:

There is dependently on the PROFIBUS-DP master in addition possibly the demand to put the base address of the inputs on a value divisible by four so that accesses on the metered measurands (unsigned long values, ref. to chap. 2.2.4 and 3.2.4) can be correctly carried out in the PROFIBUS-DP master.

1.5 Notes to SIPROTEC objects

This chapter contains notes for the use and evaluation of certain SIPROTEC objects.



Note:

- The description of the standard mappings (ref. to chap. 2 and 3) contains the pre-allocation of the mapping files at delivery or at first assignment of a mapping in DIGSI to the SIPROTEC device.
- Changes of the allocation and the scaling of the measured values are possible in adaptation to the concrete installation environment.
You find information about this in the manual "SIPROTEC Communication module, PROFIBUS-DP - Communication profile" (ref. to page 3).
- If a mapping file is assigned to a SIPROTEC device and if the data size of the PROFIBUS-DP message of this SIPROTEC device is changed by choice of a new mapping file then assignments which are not available in the existing mapping file remain unassigned furthermore.

1.5.1 Control mode REMOTE

Control mode with control authority is REMOTE, option of unlocked control with PROFIBUS-DP

- Changing the "Control mode REMOTE" to UNLOCKED permits one unlocked control operation via PROFIBUS-DP.
After execution of the command, the "Control mode REMOTE" in the SIPROTEC device will automatically be reset to LOCKED.
- A programmed test "Switch in position" for unlocked control operations is always be executed.
- If, after changing the "Control mode REMOTE" to UNLOCKED, no command is received via PROFIBUS-DP for a period of 5 minutes, then the "Control mode REMOTE" is automatically reset to LOCKED.
- If the "Control mode REMOTE" was automatically reset to LOCKED by the SIPROTEC device then this status can be recognized by the corresponding bit in the PROFIBUS-DP input message.
In this case the status of "Control mode REMOTE" in output direction has to be updated by the PROFIBUS-DP master.

References

Standard mapping 3-1: ref. to chap. 2.1.2

Standard mapping 3-2: not pre-allocated

1.5.2 Changing the setting group

In order to change the setting group, the value "10" = ON must be transmitted for the corresponding pair of bits and afterwards be reset to "00" = "Quiescent status" (controlled by an impulse from the PROFIBUS-DP master).

- Switching ON one setting group automatically switches OFF the current active setting group.
- Transmission of the value "01" = OFF is insignificant for the change of the setting group and is refused by the device.
- A change of the setting group is only possible via PROFIBUS-DP if the parameter **Change to Another Setting Group** (parameter address = 302) has the value **Protocol**.

References *Standard mapping 3-1:* ref. to chap. 2.1.2
 Standard mapping 3-2: ref. to chap. 3.1.3

1.5.3 Stop data transmission

The functionality "Stop data transmission" is not supported via PROFIBUS-DP communication.

If "Stop data transmission" is active nevertheless data via PROFIBUS-DP will be transferred furthermore.

The annunciation "DataStop" signals the activation of "Stop data transmission" however and can be evaluated correspondingly in the PROFIBUS-DP master.

References *Standard mapping 3-1:* ref. to chap. 2.2.1.3
 Standard mapping 3-2: ref. to chap. 3.2.1.5

1.5.4 Fault locator

Always the latest fault location is stored.

In the event of a fault, reading out of the fault record protocol from the SIPROTEC device is necessary for an exact diagnosis.

References *Standard mapping 3-1:* ref. to chap. 2.2.3
 Standard mapping 3-2: ref. to chap. 3.2.3

Standard mapping 3-1

This chapter describes the data in the PROFIBUS-DP messages between the PROFIBUS-DP master and the SIPROTEC devices 7SA522, 7SA6 if standard mapping 3-1 is selected.

| | | |
|-----|-----------------------------|----|
| 2.1 | Message in output direction | 22 |
| 2.2 | Message in input direction | 25 |

2.1 Message in output direction

2.1.1 Double commands

| Offset | Designation of the SIPROTEC objects | Comments | Internal object no. |
|--------|-------------------------------------|---|---------------------|
| 0 / 0 | 52Breaker OFF | Impulse output, 3 relays (2-pole ON, 1-pole OFF) | - |
| 0 / 1 | 52Breaker ON | | |
| 0 / 2 | Disconnect Switch OFF | Impulse output, 2 relays, 1-pole | - |
| 0 / 3 | Disconnect Switch ON | | |
| 0 / 4 | Ground Switch OFF | Impulse output, 2 relays, 1-pole | - |
| 0 / 5 | Ground Switch ON | | |
| 0 / 6 | Q2 Open/Close OFF | Impulse output, 2 relays, 1-pole | - |
| 0 / 7 | Q2 Open/Close ON | | |
| 1 / 0 | Q9 Open/Close OFF | Impulse output, 2 relays, 1-pole | - |
| 1 / 1 | Q9 Open/Close ON | | |

2.1.2 Internal commands

- Ref. to chap. 1.5.1 and 1.5.2 for notes regarding “Control mode REMOTE” and Changing the setting group.

| Offset | Designation of the SIPROTEC objects | Comments | Internal object no. |
|--------|-------------------------------------|--------------------------------------|---------------------|
| 1 / 2 | 79 OFF | Deactivation of “Autoreclosing” | 2782 |
| 1 / 3 | 79 ON | Activation of “Autoreclosing” | |
| 1 / 4 | Protection OFF | Deactivation of protection functions | 52 |
| 1 / 5 | Protection ON | Activation of protection functions | |
| 1 / 6 | Pilot OFF | Deactivation of Pilot Protection | 4051 |
| 1 / 7 | Pilot ON | Activation of Pilot Protection | |

| Offset | Designation of the SIPROTEC objects | Comments | Internal object no. |
|--------|-------------------------------------|--------------------------------|---------------------|
| 2 / 0 | Mode REMOTE | Control mode REMOTE = LOCKED | - |
| 2 / 1 | Mode REMOTE | Control mode REMOTE = UNLOCKED | |
| 2 / 2 | Setting group A | | - |
| 2 / 3 | Setting group A | Activation of setting group A | |
| 2 / 4 | Setting group B | | - |
| 2 / 5 | Setting group B | Activation of setting group B | |
| 2 / 6 | Setting group C | | - |
| 2 / 7 | Setting group C | Activation of setting group C | |
| 3 / 0 | Setting group D | | - |
| 3 / 1 | Setting group D | Activation of setting group D | |

2.1.3 Single commands and taggings

- Single commands and taggings can be routed on these position as “Source system interface” using the **DIGSI Configuration matrix**.

| Offset | Designation of the SIPROTEC objects | Comments | Internal object no. |
|--------|-------------------------------------|-------------------|---------------------|
| 3 / 2 | <user-defined> OFF | not pre-allocated | - |
| 3 / 3 | <user-defined> ON | | |
| 3 / 4 | <user-defined> OFF | not pre-allocated | - |
| 3 / 5 | <user-defined> ON | | |
| 3 / 6 | <user-defined> OFF | not pre-allocated | - |
| 3 / 7 | <user-defined> ON | | |
| 4 / 0 | <user-defined> OFF | not pre-allocated | - |
| 4 / 1 | <user-defined> ON | | |
| 4 / 2 | <user-defined> OFF | not pre-allocated | - |
| 4 / 3 | <user-defined> ON | | |
| 4 / 4 | <user-defined> OFF | not pre-allocated | - |
| 4 / 5 | <user-defined> ON | | |
| 4 / 6 | <user-defined> OFF | not pre-allocated | - |
| 4 / 7 | <user-defined> ON | | |
| 5 / 0 | <user-defined> OFF | not pre-allocated | - |
| 5 / 1 | <user-defined> ON | | |

| Offset | Designation of the SIPROTEC objects | Comments | Internal object no. |
|--------|-------------------------------------|-------------------|---------------------|
| 5 / 2 | <user-defined> OFF | not pre-allocated | - |
| 5 / 3 | <user-defined> ON | | |
| 5 / 4 | <user-defined> OFF | not pre-allocated | - |
| 5 / 5 | <user-defined> ON | | |
| 5 / 6 | <user-defined> OFF | not pre-allocated | - |
| 5 / 7 | <user-defined> ON | | |

2.2 Message in input direction

2.2.1 Annunciations

2.2.1.1 Double-point indications

| Offset | Designation of the SIPROTEC objects | Comments | Internal object no. |
|--------|-------------------------------------|--------------------------------|---------------------|
| 0 / 0 | 52Breaker OFF | Double-point indication ON/OFF | - |
| 0 / 1 | 52Breaker ON | | |
| 0 / 2 | Disconnect Switch OFF | Double-point indication ON/OFF | - |
| 0 / 3 | Disconnect Switch ON | | |
| 0 / 4 | Ground Switch OFF | Double-point indication ON/OFF | - |
| 0 / 5 | Ground Switch ON | | |
| 0 / 6 | Q2 Open/Close OFF | Double-point indication ON/OFF | - |
| 0 / 7 | Q2 Open/Close ON | | |
| 1 / 0 | Q9 Open/Close OFF | Double-point indication ON/OFF | - |
| 1 / 1 | Q9 Open/Close ON | | |

2.2.1.2 Single-point indications and taggings

- Protection annunciations, single-point indications and taggings can be routed on these position as "Destination system interface" using the **DIGSI Configuration matrix**.

| Offset | Designation of the SIPROTEC objects | Comments | Internal object no. |
|--------|-------------------------------------|-------------------|---------------------|
| 1 / 2 | <user-defined> | not pre-allocated | - |
| 1 / 3 | <user-defined> | not pre-allocated | - |
| 1 / 4 | <user-defined> | not pre-allocated | - |
| 1 / 5 | <user-defined> | not pre-allocated | - |
| 1 / 6 | <user-defined> | not pre-allocated | - |
| 1 / 7 | <user-defined> | not pre-allocated | - |
| 2 / 0 | <user-defined> | not pre-allocated | - |
| 2 / 1 | <user-defined> | not pre-allocated | - |

| Offset | Designation of the SIPROTEC objects | Comments | Internal object no. |
|--------|-------------------------------------|-------------------|---------------------|
| 2 / 2 | <user-defined> | not pre-allocated | - |
| 2 / 3 | <user-defined> | not pre-allocated | - |
| 2 / 4 | <user-defined> | not pre-allocated | - |
| 2 / 5 | <user-defined> | not pre-allocated | - |
| 2 / 6 | <user-defined> | not pre-allocated | - |
| 2 / 7 | <user-defined> | not pre-allocated | - |

2.2.1.3 Status indications

- Ref. to chap. 1.5.3 for notes regarding “Stop data transmission”.

| Offset | Designation of the SIPROTEC objects | Comments | Internal object no. |
|--------|-------------------------------------|--|---------------------|
| 3 / 0 | 79 ON | 1 = 79 Auto recloser is switched ON | 2782 |
| 3 / 1 | Pilot ON | 1 = Pilot Prot. is switched ON | 4051 |
| 3 / 2 | ProtActive | 1 = At least one protection function is active | 52 |
| 3 / 3 | DataStop | 1 = Stop data transmission is active | - |
| 3 / 4 | Test mode | 1 = Test mode is active | - |
| 3 / 5 | Settings Calc. | 1 = Setting calculation is running | 70 |
| 3 / 6 | Group A | 1 = Setting group A is active | - |
| 3 / 7 | Group B | 1 = Setting group Bis active | - |
| 4 / 0 | Group C | 1 = Setting group Cis active | - |
| 4 / 1 | Group D | 1 = Setting group D is active | - |
| 4 / 2 | Control Auth. | Control Authority (0 = REMOTE, 1 = LOCAL) | - |
| 4 / 3 | ModeLOCAL | Controlmode LOCAL (0 = LOCKED, 1 = UNLOCKED) | - |
| 4 / 4 | ModeREMOTE | Controlmode REMOTE (0 = LOCKED, 1 = UNLOCKED) | - |
| 4 / 5 | Data valid | 1 = Data in the PROFIBUS-DP message are valid. (This indication is created by the PROFIBUS-DP slave; not available in DIGSI and not relocatable.) | - |

2.2.1.4 Monitoring information

| Offset | Designation of the SIPROTEC objects | Comments | Internal object no. |
|--------|-------------------------------------|---|---------------------|
| 4 / 6 | Fail I Superv. | 1 = Failure: General Current Supervision | 161 |
| 4 / 7 | Fail V Superv. | 1 = Failure: General Voltage Supervision | 164 |
| 5 / 0 | Fail Ph. Seq. | 1 = Failure: Phase Sequence | 171 |
| 5 / 1 | <user-defined> | not pre-allocated | - |
| 5 / 2 | Emer. mode | 1 = Emergency mode | 2054 |
| 5 / 3 | >FAIL:Feeder VT | 1 = Binary input "Failure: Feeder VT (MCB tripped)" is active | 361 |
| 5 / 4 | 85-21 Carr.Fail | 1 = 85-21 Carrier CHANNEL FAILURE | 4055 |
| 5 / 5 | Alarm Sum Event | 1 = Alarm Summary Event | 160 |
| 5 / 6 | Error Sum Alarm | 1 = Error with a summary alarm | 140 |

2.2.1.5 Sensitive ground fault protection

| Offset | Designation of the SIPROTEC objects | Comments | Internal object no. |
|--------|-------------------------------------|--|---------------------|
| 5 / 7 | Sens. Gnd Ph A | 1 = Sensitive Ground fault picked up in Ph A | 1272 |
| 6 / 0 | Sens. Gnd Ph B | 1 = Sensitive Ground fault picked up in Ph B | 1273 |
| 6 / 1 | Sens. Gnd Ph C | 1 = Sensitive Ground fault picked up in Ph C | 1274 |
| 6 / 2 | SensGnd Forward | 1 = Sensitive Gnd fault in forward direction | 1276 |
| 6 / 3 | SensGnd Reverse | 1 = Sensitive Gnd fault in reverse direction | 1277 |

2.2.1.6 Fault indications

| Offset | Designation of the SIPROTEC objects | Comments | Internal object no. |
|--------|-------------------------------------|--------------------------------|---------------------|
| 6 / 4 | Relay PICKUP Ph A | 1 = Relay PICKUP Phase A | 503 |
| 6 / 5 | Relay PICKUP Ph B | 1 = Relay PICKUP Phase B | 504 |
| 6 / 6 | Relay PICKUP Ph C | 1 = Relay PICKUP Phase C | 505 |
| 6 / 7 | Relay PICKUP G | 1 = Relay PICKUP GROUND | 506 |
| 7 / 0 | Relay TRIP | 1 = Relay GENERAL TRIP command | 511 |
| 7 / 1 | Relay TRIP Ph A | 1 = Relay TRIP command Phase A | 507 |
| 7 / 2 | Relay TRIP Ph B | 1 = Relay TRIP command Phase B | 508 |
| 7 / 3 | Relay TRIP Ph C | 1 = Relay TRIP command Phase C | 509 |
| 7 / 4 | 21 PU forward | 1 = 21 Picked up FORWARD | 3719 |

| Offset | Designation of the SIPROTEC objects | Comments | Internal object no. |
|--------|-------------------------------------|-----------------------------------|---------------------|
| 7 / 5 | 21 PU reverse | 1 = 21 Picked up REVERSE | 3720 |
| 7 / 6 | 85-21 SEND | 1 = 85-21 Carrier SEND signal | 4056 |
| 7 / 7 | 85-21 Carr.rec. | 1 = 85-21 Carrier signal received | 4054 |
| 8 / 0 | 21 Time Out T1 | 1 = 21 Time Out T1 | 3771 |
| 8 / 1 | 21 Time Out T2 | 1 = 21 Time Out T2 | 3774 |
| 8 / 2 | 21 Time Out T3 | 1 = 21 Time Out T3 | 3777 |
| 8 / 3 | 21 Time Out T4 | 1 = 21 Time Out T4 | 3778 |
| 8 / 4 | 21 Time Out T5 | 1 = 21 Time Out T5 | 3779 |
| 8 / 5 | Relay PICKUP | 1 = Relay PICKUP | 501 |
| 8 / 6 | 50BF BusTrip | 1 = 50BF Busbar trip | 1494 |
| 8 / 7 | 50(N)-B2 TRIP | 1 = 50(N)-B2 TRIP | 7222 |
| 9 / 0 | 50(N)-B1 TRIP | 1 = 50(N)-B1 TRIP | 7221 |
| 9 / 1 | 50N-3 TRIP | 1 = 50N-3 TRIP | 1368 |
| 9 / 2 | 50N-2 TRIP | 1 = 50N-2 TRIP | 1367 |

2.2.1.7 Auto reclose function

| Offset | Designation of the SIPROTEC objects | Comments | Internal object no. |
|--------|-------------------------------------|--|---------------------|
| 9 / 3 | 79 Close | 1 = 79 - Close command | 2851 |
| 9 / 4 | 79 Close 2.Cyc | 1 = 79: Close command 2nd cycle (and higher) | 2854 |
| 9 / 5 | 79 not ready | 1 = 79: Auto recloser is not ready | 2784 |
| 9 / 6 | 79 Successful | 1 = 79 - cycle successful | 2862 |
| 9 / 7 | Definitive Trip | 1 = Definitive Trip | 2863 |

2.2.2 Measured values

- Ref to chap. 1.3.2 for notes regarding scaling of measured values.

| Offset | Designation of the SIPROTEC objects | Comments | Scaling (32767 corresponds to...) | Internal object no. |
|--------|-------------------------------------|---|-----------------------------------|---------------------|
| 10 | Ia = | Ia | 3276.7 A | 601 |
| 12 | Ib = | Ib | 3276.7 A | 602 |
| 14 | Ic = | Ic | 3276.7 A | 603 |
| 16 | Va = | Va | 3276.7 kV | 621 |
| 18 | Vb = | Vb | 3276.7 kV | 622 |
| 20 | Vc = | Vc | 3276.7 kV | 623 |
| 22 | P = | P (active power) | 3276.7 MW | 641 |
| 24 | Q = | Q (reactive power) | 3276.7 MVAR | 642 |
| 26 | S = | S (apparent power) | 3276.7 MVA | 645 |
| 28 | Freq= | Frequency | 327.67 Hz | 644 |
| 30 | Va-b= | Va-b | 3276.7 kV | 624 |
| 32 | Vb-c= | Vb-c | 3276.7 kV | 625 |
| 34 | Vc-a= | Vc-a | 3276.7 kV | 626 |
| 36 | PF = | Power Factor | 3.2767 | 643 |
| 38 | 3I0 = | 3I0 (zero sequence) | 3276.7 A | 610 |
| 40 | INs Real | Resistive ground current in isol. systems | 3276.7 A | 701 |
| 42 | INs Reac | Reactive ground current in isol. systems | 3276.7 A | 702 |

2.2.3 Fault locator

- Ref. to chap. 1.5.4 for notes regarding the fault locator.

| Offset | Designation of the SIPROTEC objects | Comments | Scaling (32767 corresponds to...) | Internal object no. |
|--------|-------------------------------------|--------------------------------|-----------------------------------|---------------------|
| 44 | Ia = | Primary fault current Ia | 327.67 kA | 533 |
| 46 | Ib = | Primary fault current Ib | 327.67 kA | 534 |
| 48 | Ic = | Primary fault current Ic | 327.67 kA | 535 |
| 50 | Xpri = | FIt Locator: primary REACTANCE | 327.67 Ω | 1115 |

2.2.4 Metered measurands

- Ref. to chap. 1.3.3 for notes regarding scaling of metered measurands.

| Offset | Designation of the SIPROTEC objects | Comments | Scaling ($2^{31}-1$ corresponds to ...) | Internal object no |
|--------|-------------------------------------|---|---|--------------------|
| 52 | Wp+ | Wp forward (Metered measurand derived from measured values) | $2^{31}-1$ impulses | 924 |
| 56 | Wq+ | Wq forward (Metered measurand derived from measured values) | $2^{31}-1$ impulses | 925 |
| 60 | Wp- | Wp reverse (Metered measurand derived from measured values) | $2^{31}-1$ impulses | 928 |
| 64 | Wq- | Wq reverse (Metered measurand derived from measured values) | $2^{31}-1$ impulses | 929 |

Standard mapping 3-2

This chapter describes the data in the PROFIBUS-DP messages between the PROFIBUS-DP master and the SIPROTEC devices 7SA522, 7SA6 if standard mapping 3-2 is selected.

| | | |
|-----|-----------------------------|----|
| 3.1 | Message in output direction | 32 |
| 3.2 | Message in input direction | 34 |

3.1 Message in output direction

3.1.1 Event list

- Information regarding the handshake bytes as well as the retrieval methods of the event list via PROFIBUS-DP can be found in the manual "SIPROTEC Communication module, PROFIBUS-DP - Communication profile".

| Offset | Designation | Comments | Internal object no. |
|--------|-------------|--|---------------------|
| 0 | Control_O | Handshake byte for event list via PROFIBUS-DP | - |
| 1 | SPARE | reserved for future use (the value at this position is ignored) | - |

3.1.2 Double commands

| Offset | Designation of the SIPROTEC objects | Comments | Internal object no. |
|--------|-------------------------------------|---|---------------------|
| 2 / 0 | 52Breaker OFF | Impulse output, 3 relays (2-pole ON, 1-pole OFF) | - |
| 2 / 1 | 52Breaker ON | | |
| 2 / 2 | Disconnect Switch OFF | Impulse output, 2 relays, 1-pole | - |
| 2 / 3 | Disconnect Switch ON | | |
| 2 / 4 | Ground Switch OFF | Impulse output, 2 relays, 1-pole | - |
| 2 / 5 | Ground Switch ON | | |
| 2 / 6 | Q2 Open/Close OFF | Impulse output, 2 relays, 1-pole | - |
| 2 / 7 | Q2 Open/Close ON | | |
| 3 / 0 | Q9 Open/Close OFF | Impulse output, 2 relays, 1-pole | - |
| 3 / 1 | Q9 Open/Close ON | | |

3.1.3 Internal commands

- Ref. to chap. 1.5.2 for notes regarding Changing the setting group.

| Offset | Designation of the SIPROTEC objects | Comments | Internal object no. |
|--------|-------------------------------------|----------------------------------|---------------------|
| 3 / 2 | 79 OFF | Deactivation of "Autoreclosing" | 2782 |
| 3 / 3 | 79 ON | Activation of "Autoreclosing" | |
| 3 / 4 | Pilot OFF | Deactivation of Pilot Protection | 4051 |
| 3 / 5 | Pilot ON | Activation of Pilot Protection | |
| 3 / 6 | <user-defined> OFF | not pre-allocated | - |
| 3 / 7 | <user-defined> ON | | |
| 4 / 0 | Setting group A | | - |
| 4 / 1 | Setting group A | Activation of setting group A | |
| 4 / 2 | Setting group B | | - |
| 4 / 3 | Setting group B | Activation of setting group B | |
| 4 / 4 | Setting group C | | - |
| 4 / 5 | Setting group C | Activation of setting group C | |
| 4 / 6 | Setting group D | | - |
| 4 / 7 | Setting group D | Activation of setting group D | |

3.1.4 Single commands and taggings

- Single commands and taggings can be routed on these position as "Source system interface" using the **DIGSI Configuration matrix**.

| Offset | Designation of the SIPROTEC objects | Comments | Internal object no. |
|--------|-------------------------------------|-------------------|---------------------|
| 5 / 0 | <user-defined> OFF | not pre-allocated | - |
| 5 / 1 | <user-defined> ON | | |
| 5 / 2 | <user-defined> OFF | not pre-allocated | - |
| 5 / 3 | <user-defined> ON | | |
| 5 / 4 | <user-defined> OFF | not pre-allocated | - |
| 5 / 5 | <user-defined> ON | | |
| 5 / 6 | <user-defined> OFF | not pre-allocated | - |
| 5 / 7 | <user-defined> ON | | |

3.2 Message in input direction

3.2.1 Annunciations

3.2.1.1 Double-point indications

| Offset | Designation of the SIPROTEC objects | Comments | Internal object no. |
|--------|-------------------------------------|--------------------------------|---------------------|
| 0 / 0 | 52Breaker OFF | Double-point indication ON/OFF | - |
| 0 / 1 | 52Breaker ON | | |
| 0 / 2 | Disconnect Switch OFF | Double-point indication ON/OFF | - |
| 0 / 3 | Disconnect Switch ON | | |
| 0 / 4 | Ground Switch OFF | Double-point indication ON/OFF | - |
| 0 / 5 | Ground Switch ON | | |
| 0 / 6 | Q2 Open/Close OFF | Double-point indication ON/OFF | - |
| 0 / 7 | Q2 Open/Close ON | | |
| 1 / 0 | Q9 Open/Close OFF | Double-point indication ON/OFF | - |
| 1 / 1 | Q9 Open/Close ON | | |

3.2.1.2 Single-point indications and taggings

- Protection annunciations, single-point indications and taggings can be routed on these position as “Destination system interface” using the **DIGSI Configuration matrix**.
- Offsets 1 / 6 and 1 / 7 are available from 7SA522, 7SA6 V04.60.

| Offset | Designation of the SIPROTEC objects | Comments | Internal object no. |
|--------|-------------------------------------|-------------------|---------------------|
| 1 / 2 | <user-defined> | not pre-allocated | - |
| 1 / 3 | <user-defined> | not pre-allocated | - |
| 1 / 4 | <user-defined> | not pre-allocated | - |
| 1 / 5 | <user-defined> | not pre-allocated | - |
| 1 / 6 | <user-defined> | not pre-allocated | - |
| 1 / 7 | <user-defined> | not pre-allocated | - |

3.2.1.3 Setting group

| Offset | Designation of the SIPROTEC objects | Comments | Internal object no. |
|--------|-------------------------------------|-------------------------------|---------------------|
| 2 / 0 | Group A | 1 = Setting group A is active | - |
| 2 / 1 | Group B | 1 = Setting group Bis active | - |
| 2 / 2 | Group C | 1 = Setting group Cis active | - |
| 2 / 3 | Group D | 1 = Setting group D is active | - |

3.2.1.4 Diagnosis

| Offset | Designation of the SIPROTEC objects | Comments | Internal object no. |
|--------|-------------------------------------|---|---------------------|
| 2 / 4 | Device OK | 1 = Update of the device replica in the SIPROTEC device completed after initial start or restart | 51 |
| 2 / 5 | ProtActive | 1 = At least one protection function is active | 52 |
| 2 / 6 | Settings Calc. | 1 = Setting calculation is running | 70 |
| 2 / 7 | Error Sum Alarm | 1 = Error with a summary alarm ON | 140 |
| 3 / 0 | Alarm Sum Event | 1 = Alarm summary event ON | 160 |
| 3 / 1 | Relay PICKUP | 1 = Relay PICKUP (group signal) | 501 |
| 3 / 2 | Relay TRIP | 1 = Relay GENERAL TRIP command | 511 |
| 3 / 3 | Data valid | 1 = Data in the PROFIBUS-DP message are valid. (This indication is created by the PROFIBUS-DP slave; not available in DIGSI and not relocatable.) | - |

3.2.1.5 Device status

- Ref. to chap. 1.5.3 for notes regarding "Stop data transmission".

| Offset | Designation of the SIPROTEC objects | Comments | Internal object no. |
|--------|-------------------------------------|---|---------------------|
| 3 / 4 | Test mode | 1 = Test mode is active | - |
| 3 / 5 | DataStop | 1 = Stop data transmission is active | - |
| 3 / 6 | <user-defined> | not pre-allocated | - |
| 3 / 7 | <user-defined> | not pre-allocated | - |
| 4 / 0 | ModeREMOTE | Controlmode REMOTE (0 = LOCKED , 1 = UNLOCKED) | - |
| 4 / 1 | MeasSup OFF | 1 = Measurement supervision is switched off | 197 |
| 4 / 2 | Fail Battery | 1 = Failure: Battery empty | 177 |

| Offset | Designation of the SIPROTEC objects | Comments | Internal object no. |
|--------|-------------------------------------|---|---------------------|
| 4 / 3 | Error 5V | 1 = Error 5V | 144 |
| 4 / 4 | >FAIL:Feeder VT | 1 = Binary input "Failure: Feeder VT (MCB tripped)" is active | 361 |
| 4 / 5 | Emer. mode | 1 = Emergency mode | 2054 |
| 4 / 6 | <user-defined> | not pre-allocated | - |
| 4 / 7 | <user-defined> | not pre-allocated | - |

3.2.1.6 Measurement supervision

- Offset 5 / 7 is available from 7SA522, 7SA6 V04.60.

| Offset | Designation of the SIPROTEC objects | Comments | Internal object no. |
|--------|-------------------------------------|---|---------------------|
| 5 / 0 | Failure Sum I | 1 = Failure: Current Summation | 162 |
| 5 / 1 | Fail I balance | 1 = Failure: Current Balance | 163 |
| 5 / 2 | Fail V balance | 1 = Failure: Voltage Balance | 167 |
| 5 / 3 | Fail Ph. Seq. | 1 = Failure: Phase Sequence | 171 |
| 5 / 4 | Fail Sum V Ph-G | 1 = Failure: Voltage summation Phase-Ground | 165 |
| 5 / 5 | Fail V Superv. | 1 = Failure: General Voltage Supervision | 164 |
| 5 / 6 | <user-defined> | not pre-allocated | - |
| 5 / 7 | <user-defined> | not pre-allocated | - |

3.2.1.7 Auto reclosing and Pilot protection for Distance protection

| Offset | Designation of the SIPROTEC objects | Comments | Internal object no. |
|--------|-------------------------------------|--|---------------------|
| 6 / 0 | 79 not ready | 1 = 79: Auto recloser is not ready | 2784 |
| 6 / 1 | 79 Successful | 1 = 79 - cycle successful | 2862 |
| 6 / 2 | 79 Close | 1 = 79 - Close command | 2851 |
| 6 / 3 | 79 Close 2.Cyc | 1 = 79: Close command 2nd cycle (and higher) | 2854 |
| 6 / 4 | 85-21 Carr.Fail | 1 = 85-21 Carrier CHANNEL FAILURE | 4055 |
| 6 / 5 | 85-21 SEND | 1 = 85-21 Carrier SEND signal | 4056 |
| 6 / 6 | 85-21 Carr.rec. | 1 = 85-21 Carrier signal received | 4054 |
| 6 / 7 | <user-defined> | not pre-allocated | - |

3.2.1.8 Protection pickup indications

- Offset 8 / 6 is available from 7SA522, 7SA6 V04.60.

| Offset | Designation of the SIPROTEC objects | Comments | Internal object no. |
|--------|-------------------------------------|--|---------------------|
| 7 / 0 | Relay PICKUP Ph A | 1 = Relay PICKUP Phase A | 503 |
| 7 / 1 | Relay PICKUP Ph B | 1 = Relay PICKUP Phase B | 504 |
| 7 / 2 | Relay PICKUP Ph C | 1 = Relay PICKUP Phase C | 505 |
| 7 / 3 | Relay PICKUP G | 1 = Relay PICKUP GROUND | 506 |
| 7 / 4 | 21 PU forward | 1 = 21 Picked up FORWARD | 3719 |
| 7 / 5 | 21 PU reverse | 1 = 21 Picked up REVERSE | 3720 |
| 7 / 6 | Sens. Gnd Ph A | 1 = Sensitive Ground fault picked up in Ph A | 1272 |
| 7 / 7 | Sens. Gnd Ph B | 1 = Sensitive Ground fault picked up in Ph B | 1273 |
| 8 / 0 | Sens. Gnd Ph C | 1 = Sensitive Ground fault picked up in Ph C | 1274 |
| 8 / 1 | SensGnd Forward | 1 = Sensitive Gnd fault in forward direction | 1276 |
| 8 / 2 | SensGnd Reverse | 1 = Sensitive Gnd fault in reverse direction | 1277 |
| 8 / 3 | SendGnd undef. | 1 = Sensitive Gnd fault direction undefined | 1278 |
| 8 / 4 | <user-defined> | not pre-allocated | - |
| 8 / 5 | <user-defined> | not pre-allocated | - |
| 8 / 6 | <user-defined> | not pre-allocated | - |

3.2.1.9 Protection trip indications

- Offset 10 / 2 is available from 7SA522, 7SA6 V04.60.

| Offset | Designation of the SIPROTEC objects | Comments | Internal object no. |
|--------|-------------------------------------|--------------------------------|---------------------|
| 8 / 7 | Relay TRIP Ph A | 1 = Relay TRIP command Phase A | 507 |
| 9 / 0 | Relay TRIP Ph B | 1 = Relay TRIP command Phase B | 508 |
| 9 / 1 | Relay TRIP Ph C | 1 = Relay TRIP command Phase C | 509 |
| 9 / 2 | 50(N)-B1 TRIP | 1 = 50(N)-B1 TRIP | 7221 |
| 9 / 3 | 50(N)-B2 TRIP | 1 = 50(N)-B2 TRIP | 7222 |
| 9 / 4 | 50N-3 TRIP | 1 = 50N-3 TRIP | 1368 |
| 9 / 5 | 50N-2 TRIP | 1 = 50N-2 TRIP | 1367 |
| 9 / 6 | 50BF BusTrip | 1 = 50BF Busbar trip | 1494 |
| 9 / 7 | Definitive TRIP | 1 = Relay Definitive TRIP | 536 |
| 10 / 0 | <user-defined> | not pre-allocated | - |
| 10 / 1 | <user-defined> | not pre-allocated | - |
| 10 / 2 | <user-defined> | not pre-allocated | - |

3.2.1.10 Distance protection Time Outs

| Offset | Designation of the SIPROTEC objects | Comments | Internal object no. |
|--------|-------------------------------------|--------------------|---------------------|
| 10 / 3 | 21 Time Out T1 | 1 = 21 Time Out T1 | 3771 |
| 10 / 4 | 21 Time Out T2 | 1 = 21 Time Out T2 | 3774 |
| 10 / 5 | 21 Time Out T3 | 1 = 21 Time Out T3 | 3777 |
| 10 / 6 | 21 Time Out T4 | 1 = 21 Time Out T4 | 3778 |
| 10 / 7 | 21 Time Out T5 | 1 = 21 Time Out T5 | 3779 |

3.2.1.11 Single-point indications and taggings

- Protection annunciations, single-point indications and taggings can be routed on these position as “Destination system interface” using the **DIGSI Configuration matrix**.
- Offsets 11 / 1 to 11 / 7 are available from 7SA522, 7SA6 V04.60.

| Offset | Designation of the SIPROTEC objects | Comments | Internal object no. |
|--------|-------------------------------------|-------------------|---------------------|
| 11 / 0 | <user-defined> | not pre-allocated | - |
| 11 / 1 | <user-defined> | not pre-allocated | - |
| 11 / 2 | <user-defined> | not pre-allocated | - |
| 11 / 3 | <user-defined> | not pre-allocated | - |
| 11 / 4 | <user-defined> | not pre-allocated | - |
| 11 / 5 | <user-defined> | not pre-allocated | - |
| 11 / 6 | <user-defined> | not pre-allocated | - |
| 11 / 7 | <user-defined> | not pre-allocated | - |

3.2.2 Measured values

- Ref to chap. 1.3.2 for notes regarding scaling of measured values.

| Offset | Designation of the SIPROTEC objects | Comments | Scaling (32767 corresponds to...) | Internal object no. |
|--------|-------------------------------------|---|-----------------------------------|---------------------|
| 12 | Ia = | Ia | 3276.7 A | 601 |
| 14 | Ib = | Ib | 3276.7 A | 602 |
| 16 | Ic = | Ic | 3276.7 A | 603 |
| 18 | Va = | Va | 3276.7 kV | 621 |
| 20 | Vb = | Vb | 3276.7 kV | 622 |
| 22 | Vc = | Vc | 3276.7 kV | 623 |
| 24 | P = | P (active power) | 3276.7 MW | 641 |
| 26 | Q = | Q (reactive power) | 3276.7 MVAR | 642 |
| 28 | S = | S (apparent power) | 3276.7 MVA | 645 |
| 30 | Freq= | Frequency | 327.67 Hz | 644 |
| 32 | Va-b= | Va-b | 3276.7 kV | 624 |
| 34 | Vb-c= | Vb-c | 3276.7 kV | 625 |
| 36 | Vc-a= | Vc-a | 3276.7 kV | 626 |
| 38 | PF = | Power Factor | 3.2767 | 643 |
| 40 | 3Io = | 3Io (zero sequence) | 3276.7 A | 610 |
| 42 | INs Real | Resistive ground current in isol. systems | 3276.7 A | 701 |
| 44 | INs Reac | Reactive ground current in isol. systems | 3276.7 A | 702 |
| 46 | <user-defined> | not pre-allocated | - | - |
| 48 | <user-defined> | not pre-allocated | - | - |

3.2.3 Fault locator

- Ref. to chap. 1.5.4 for notes regarding the fault locator.

| Offset | Designation of the SIPROTEC objects | Comments | Scaling (32767 corresponds to...) | Internal object no. |
|--------|-------------------------------------|--------------------------------|-----------------------------------|---------------------|
| 50 | Xpri = | Flt Locator: primary REACTANCE | 327.67 Ω | 1115 |

3.2.4 Metered measurands

- Ref. to chap. 1.3.3 for notes regarding scaling of metered measurands.

| Offset | Designation of the SIPROTEC objects | Comments | Scaling ($2^{31}-1$ corresponds to ...) | Internal object no |
|--------|-------------------------------------|---|---|--------------------|
| 52 | Wp+ | Wp forward (Metered measurand derived from measured values) | $2^{31}-1$ impulses | 924 |
| 56 | Wq+ | Wq forward (Metered measurand derived from measured values) | $2^{31}-1$ impulses | 925 |
| 60 | Wp- | Wp reverse (Metered measurand derived from measured values) | $2^{31}-1$ impulses | 928 |
| 64 | Wq- | Wq reverse (Metered measurand derived from measured values) | $2^{31}-1$ impulses | 929 |

3.2.5 Event list

- Information regarding the handshake bytes as well as the retrieval methods of the event list via PROFIBUS-DP can be found in the manual "SIPROTEC Communication module, PROFIBUS-DP - Communication profile".

| Offset | Designation of the SIPROTEC objects | Comments | Internal object no. |
|---------|-------------------------------------|--|---------------------|
| 68 | Control_I | Handshake byte for event list via PROFIBUS-DP | - |
| 69 | SPARE | reserved for future use (the value 0 is transmitted at this position) | - |
| 70 | Message block #1 | Identification #1 | - |
| 71 | | Value #1 | |
| 72 | | Time stamp #1 | |
| - 79 | | | |
| 80 | Message block #2 | Identification #2 | - |
| 81 | | Value #2 | |
| 82 | | Time stamp #2 | |
| - 89 | | | |
| 90 | Message block #3 | Identification #3 | - |
| 91 | | Value #3 | |
| 92 | | Time stamp #3 | |
| - 99 | | | |

Glossary

| | |
|---|--|
| CFC | Continuous Function Chart |
| DC | Double command |
| DDB file / GSD file | <p>The DDB file contains the Device Data Base (technical characteristics) of the PROFIBUS-DP communication module (PROFIBUS-DP slave).</p> <p>This file is required for configuration of the PROFIBUS-DP master and is supplied together with DIGSI.</p> |
| DIGSI | Parameterization system / parameterization software for SIPROTEC devices |
| DP | Double-point indication |
| Input data / Input direction | Data from the PROFIBUS-DP slave to the PROFIBUS-DP master. |
| Octet | Term from EN 50170, one octet corresponds to 8 bits. |
| OLM | Optical Link Module |
| Output data / Output direction | Data from the PROFIBUS-DP master to the PROFIBUS-DP slave. |
| PNO | PROFIBUS Nutzerorganisation |
| PROFIBUS-DP | PROFIBUS - Decentralized Peripherals |
| PSE | PROFIBUS interface module with (electrical) isolated RS485 interface for the SIPROTEC devices from Siemens. |
| PSO | PROFIBUS interface module with fibre-optical interface for the SIPROTEC devices from Siemens. |
| SC | Single command |
| SP | Single-point indication |

Index

Numerics

| | |
|-------------|--------|
| 21 | 27, 37 |
| 50 | 28, 37 |
| 50BF | 28, 37 |
| 79 | 28, 36 |
| 85-21 | 28, 36 |

A

| | |
|---------------------|------------|
| Annunciations | 15, 25, 34 |
|---------------------|------------|

C

| | |
|----------------------------------|----|
| Changing the setting group | 20 |
| Configuration data | 17 |

D

| | |
|--------------------------------|--------|
| Double commands | 22, 32 |
| Double-point indications | 25, 34 |

E

| | |
|--|----|
| Event list | |
| Handshake byte in input direction | 40 |
| Handshake byte in output direction | 32 |
| Message blocks | 40 |

F

| | |
|-------------------------|----|
| Fault indications | 27 |
|-------------------------|----|

M

| | |
|------------------------------|------------|
| Measured values | 15, 29, 39 |
| Metered measurands | 16, 30, 40 |
| Monitoring information | 27 |

P

| | |
|--|--------|
| PROFIBUS-DP | |
| Configuration data | 17 |
| Configuration in the master system | 18 |
| Event list | 40 |
| Message in input direction | 25, 34 |
| Message in output direction | 22, 32 |
| Protection pickup indications | 37 |
| Protection trip indications | 37 |

Q

| | |
|--|---|
| Qualified personnel (definition) | 5 |
|--|---|

S

| | |
|---|--------|
| Sensitive ground fault protection | 27 |
| Single commands | 23, 33 |
| Status indications | 26 |

T

| | |
|-------------------------------|---|
| Target audience | 4 |
| Typographic conventions | 5 |

V

| | |
|------------------------------|---|
| Validity of the manual | 4 |
|------------------------------|---|

