


AT&T Card Configuration

1 Default IP Address: **196.168.1.1**

2 Default Username: **admin**

3 Default Password: **admin**

Note: You will be forced to change the password after logging in.

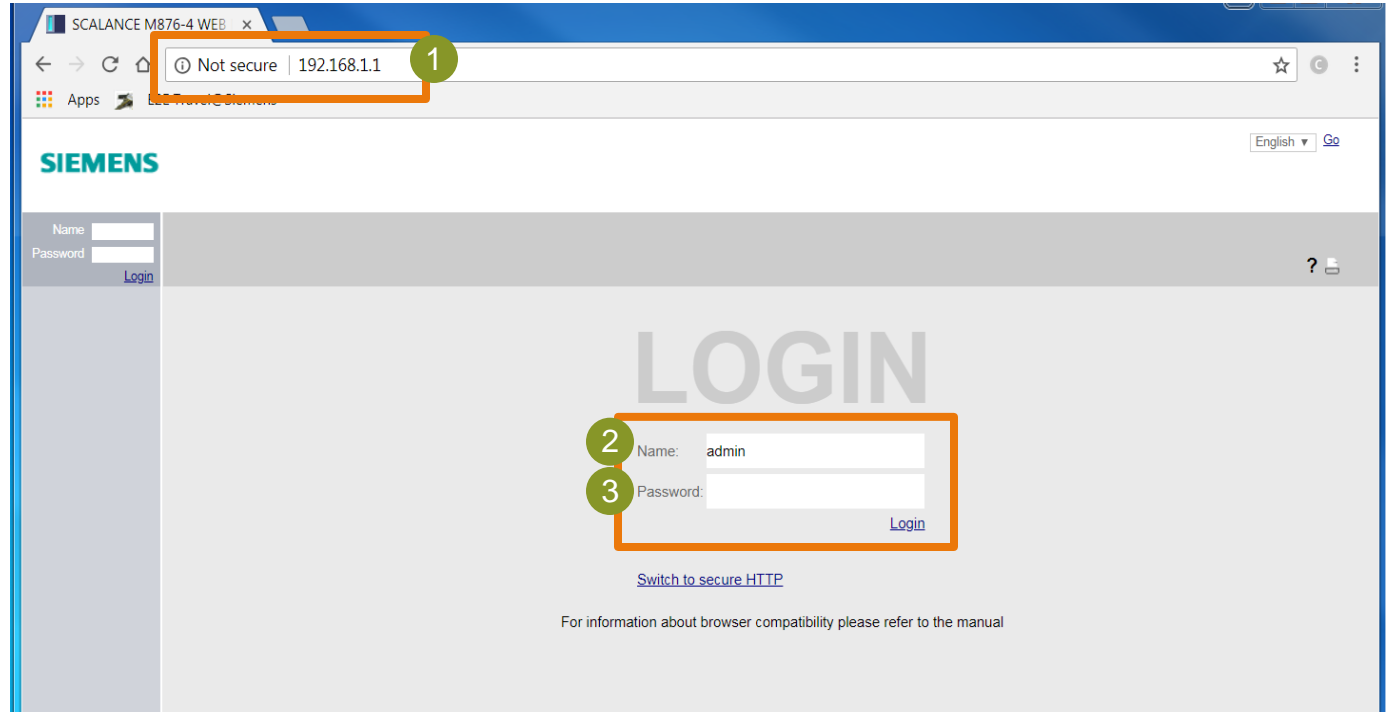

AT&T Card Configuration

- 1 Click on **Interface** menu.
- 2 Click on **Mobile** submenu.
- 3 Select **Operator** tab. You must create a manual entry.
- 4 When using ATT SIM card in **APN** field enter: **m2m005364.attz**
- 5 Click on **Set Values** button to save configuration.

The screenshot shows the SCALANCE M876-4 WEB interface. The browser address bar shows '192.168.1.1'. The page title is 'SIEMENS 192.168.1.1/SCALANCE M876-4'. The user is logged in as 'admin'. The 'Operator' tab is selected. The 'SIM Operator Connection Check' section is active. The 'Manual APN' checkbox is checked, and the APN field contains 'm2m005364.attz'. The 'User Name' field is empty. The 'Password' and 'Password Confirmation' fields are empty. The 'PLMNID' field is empty. Below the form is a table with 4 entries. The 'Set Values' button is highlighted.

Select	PLMNID	Operator Name	APN	User Name	Password	Password Confirmation	Enabled
<input type="checkbox"/>	26201	T-Mobile	internet.t-mobile	guest	*****	*****	<input type="checkbox"/>
<input type="checkbox"/>	26202	Vodafone	web.vodafone.de	guest	*****	*****	<input type="checkbox"/>
<input type="checkbox"/>	26203	Eplus	internet.eplus.de	guest	*****	*****	<input type="checkbox"/>
<input type="checkbox"/>	26207	O2	internet	guest	*****	*****	<input type="checkbox"/>

AT&T Card Configuration

- 1 In the **Interfaces** menu, select the **Mobile** submenu.
- 2 Check on the box to **Enable Mobile Network Interface**.
- 3 Click on **Set Values** button to save configuration.

The screenshot displays the web interface for a SCALANCE M876-4 device. The browser address bar shows '192.168.1.1'. The page title is 'SIEMENS 192.168.1.1/SCALANCE M876-4'. The main content area is titled 'Mobile Network Interface Settings'. A left sidebar menu is visible with 'Mobile' selected under the 'Interfaces' section. The main settings area includes a table with columns 'SIM', 'Operator', and 'Connection Check'. Below the table, there are several configuration options: 'Enable Mobile Network Interface' (checked), 'PIN:', 'Radio Mode: Auto', 'Authentication Method: Auto', and 'Allow Data Roaming' (checked). At the bottom of the settings area, there are 'Set Values' and 'Refresh' buttons. Three red boxes with green circles containing numbers 1, 2, and 3 highlight the 'Mobile' menu item, the 'Enable Mobile Network Interface' checkbox, and the 'Set Values' button, respectively.

AT&T Card Configuration

- 1 Click on **Information** menu and Select **Mobile** submenu.
- 2 Information and screen will verify connection to **AT&T Cellular Network**.

The screenshot shows a web browser window with the address bar at 192.168.1.1. The page title is "SIEMENS 192.168.1.1/SCALANCE M876-4". The main content area is titled "Mobile Overview" and displays the following information:

- IMEI: 359677060012368
- SIM Status: present
- PIN Status: PIN valid
- IMSI: 310170813521825
- Phone Number: -
- Connection Status: Registered to home network (LTE)
- Packet Switch Status: Attached in EUTRAN capable cell
- Cell ID: B35980A
- LAC: -
- Signal Strength: -91 dBm, 11 CSQ
- Mobile Chip Temperature: 34°C
- Provider: 310410
- APN: m2m005364.attz
- External IP Address: 10.66.9.170
- DNS Server(s): 8.8.8.8, 8.8.4.4

A "Refresh" button is located at the bottom left of the mobile status area.