SIEMENS

SENTRON SUPERSWITCH

Switch Disconnector Fuse - Size 4



3KL84...-.. (500A-800A) 3KA84...-..(630A-1600Á)







IEC 60947-1 IEC 60947-3



Operating Instruction







Hazardous voltage will cause death or serious injury. Turn off and lock out all power supplying this device before working on this device. Replace all covers before power supplying this device is turned on.

⚠ DANGER



ΕN

NOTICE





Required tools










cal. ISO 6789



Contents



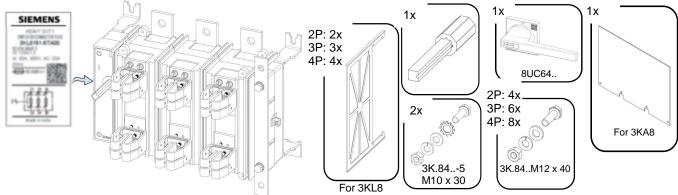





Assembly

Mounting Details:



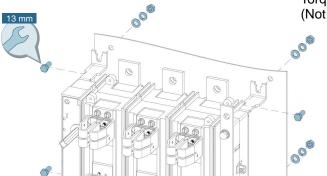

2P/3P/4P: M8 x 20 (4x) Torque 10....14 Nm (Not in scope of supply)

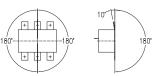

Permissible mounting position

800 Center of Shaft	M8 (4x)	20.5	A		1
	208	82			f	

Drilling Plan for mounting plate

POLE	Α
2P	228
3P	315
4P	402



Connection



3KL841... 3KL842.../3KA842.... 3KL8343.../3KA843....

Max. Lug Size.... 2 X 185 mm 2 M12 X 40 Max. Busbar Size..... 2 X 50 X 5 mm M12 x 40 Torque 20 Nm to 28 Nm

3KA844...../3KA845.../3KA846


Max. Busbar Size.....2 X 60 X 5 mm M12X40 Torque 20 Nm to 28 Nm

3KL844...../3KA884....5 Neutral Link

Max. Lug Size.... 120 mm $^{2}\,$ M10 x 30 (2x)

М5

Torque 10 Nm to 28 Nm

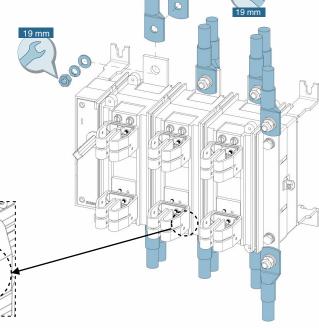


Provision for Fuse monitoring



Assembly



Installation of Shaft

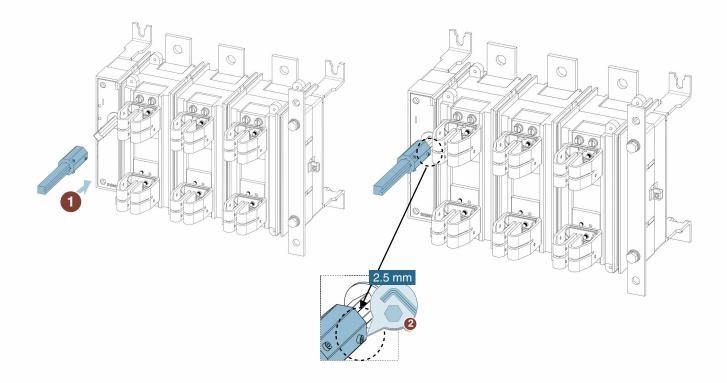




Assembly



Mounting Details for Front Drive

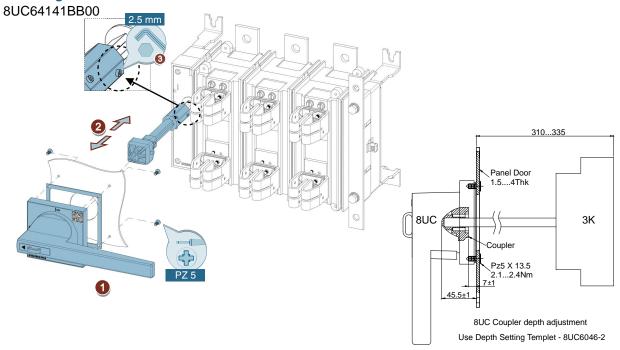

Adjust Depth of Drive as per dimensional plan




Assembly



Phase Barrier:


3KX84330AE

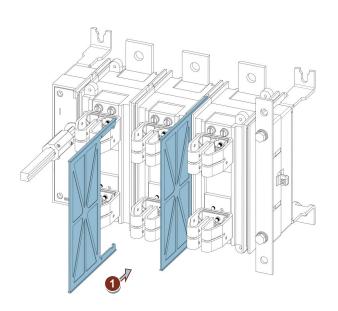

2P: Phase Barrier in position 1 & 2 are essential


3P: Phase Barrier in position 1, 2 & 3 are essential


4P: Phase Barrier in position 1, 2, 3 & 4 are essential

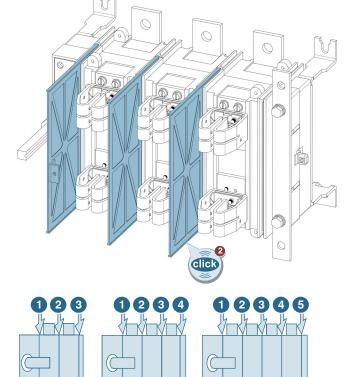






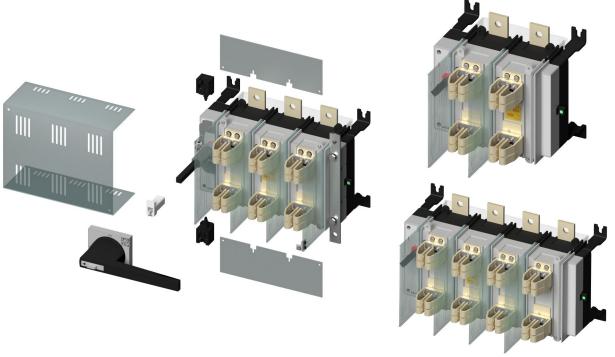

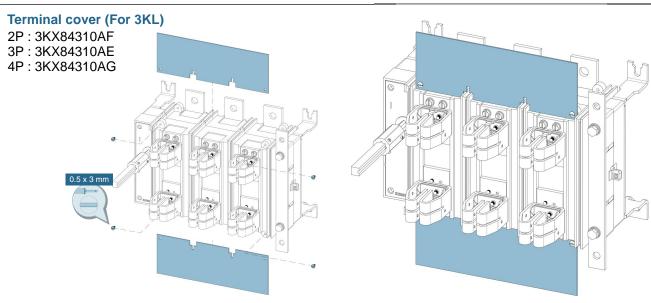

Rear Cover

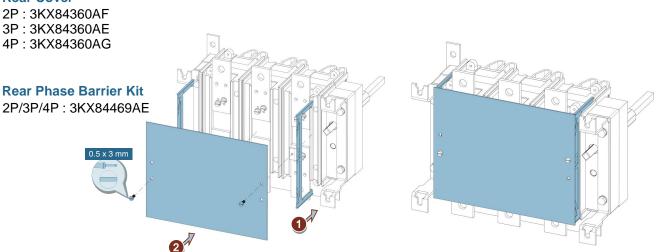




Assembly



Fuse Cover:

2P (DIN/BS): 3KX84300HF/3KX84300JF 3P (DIN/BS): 3KX84300HE/3KX84300JE 4P (DIN/BS): 3KX84300HG/3KX84300JG

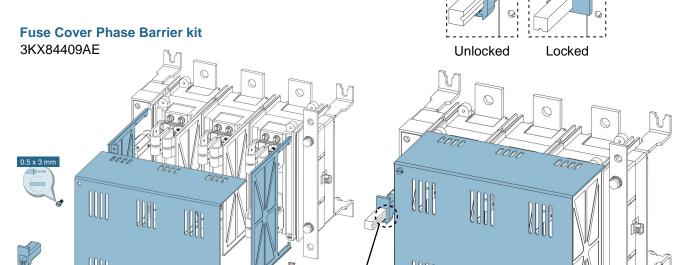


2P/3P/4P - Replace phase barrier in position 1 with Fuse Cover Phase Barrier


2P : Add Fuse cover phase Barrier in Position 3 2P: Add Fuse cover phase Barrier in Position 4


3P: Add Fuse cover phase Barrier in Position 5



Hazardous Voltage. Will Cause death or Serious Injury. Ensure Switch is in OFF postion.

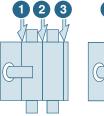

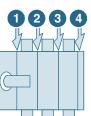

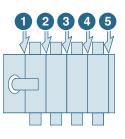




Assembly



Mounting Aux. Switch


3KX35821YC

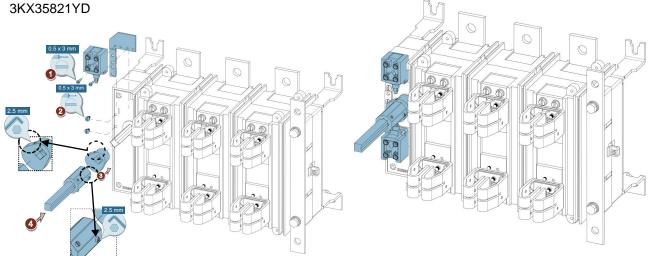



i Information

ı

Dimension Details for SDF in Enclosure

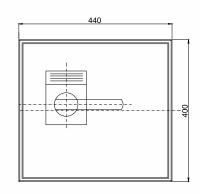

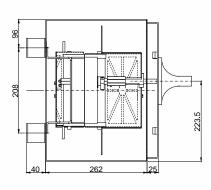

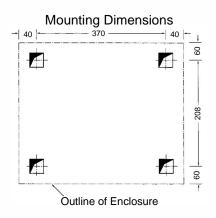



i Information

i

Overall Dimensional details


3P(3KL8)/3P+N

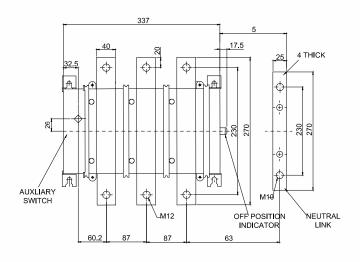

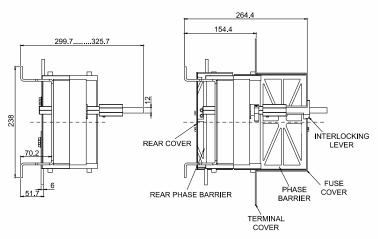


3KL8: 2P


3KL8: 4P

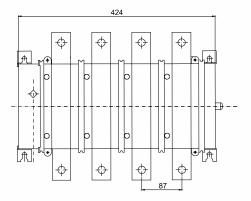

For other Dimensions refer 3P/3P+N


For other Dimensions refer 3P/3P+N

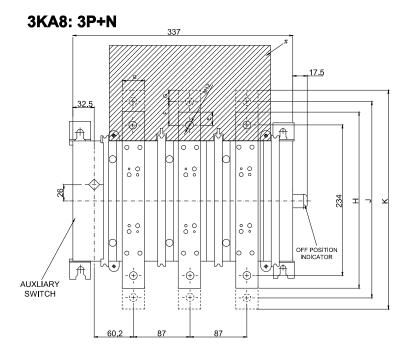

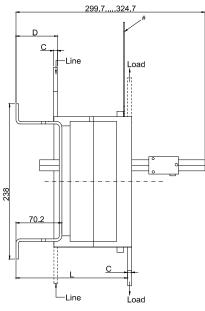


- 1) 3KA84.2-....: Top Incoming
- 2) 3KA84.3-....: Bottom Incoming

3KA8: 2P

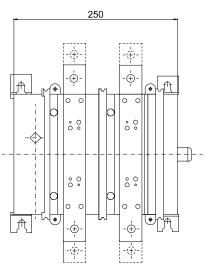

3KA8: 4P

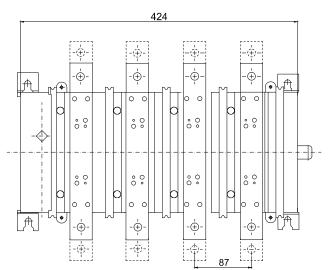

For missing Dimension refer 3P # Terminal cover only on Line side

For missing Dimension refer 3P

Type	В	С	D	Е	F	G	Н	J	K	L
3KA2 3KA3 842/843/844	40	6	64.4	20	-	-	274	-	-	153.9
3KA2 3KA3 845/846	50	10	58.4	-	40	20	-	314	354	159.9

Disposal

Siemens Products are environment-friendly, which predominantly consist of recyclable materials.

For Disposal, we recommend Disassembling and separation into following materials.

METALS. Segregate into Ferrous & Non Ferrous types for recycling through authorised dealer.

Email: ics.india@siemens.com

PLASTICS: Segregate as per material type for recycling through an authorised dealer.

Because of the long lifetime of Siemens products the disposal guidelines maybe replaced by other national regulations when taking the product out of service.

The local customer care service is available at any time to answer disposal-related questions

Customer Care Toll-free no. - 1800 209 0987

Product development is a continuous process. Consequently, the data indicated in this leaflet is subject to change without prior notice. For the latest issue contact our sales offices.