

SINAMICS

Web License Manager

Using the Web License Manager for
SINAMICS S120

SINAMICS Web License Manager



1 Assigning new licenses

2 Check for assigned licenses

3 Transfer new keys

How to assign a license from a certificate of license to a device

User menu

- > **Direct access**
- > Direct access with barcode
- > Customer login
- > Display license key
- > Manage license pool

Home

Welcome to the Web License Manager of Siemens DF MC!

The Web License Manager allows you to assign your software licenses online to a target system. You can assign several licenses at the same time. You will obtain a license key which you must transfer to your target system.

Before you can assign your software licenses, you must register using one of the following options:


Direct access: This access allows you to assign all licenses which are included in the delivery.



Direct access (barcode scanner): This access has been optimized for operating a barcode scanner. Thus, you can assign all Certificates of License which have been acquired using a barcode scanner.



Customer login: If you have a personal access, you can use the customer login to assign all licenses which you have obtained so far.

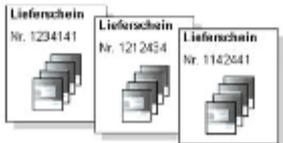

To assign a new license to a CF-Card select “Direct access”.

How to assign a license from a certificate of license to a device

User menu

- > Direct access
- > Direct access with barcode
- > Customer login
- > Display license key
- > Manage license pool

Direct access

Login Identify product Select licenses Assign licenses Generate license key

Please enter a license number that you want to assign, as well as the number of the associated delivery note. You will find this information on your Certificate of License, as shown below.

License number

Number of delivery note

Next

The image shows a 'Certificate of License' document. It contains the following information:
- SINAMICS License safety
- Type of Software / Softwaretyp: Runtime Software
- Type of License / Lizenztyp: Single License
- Type of Use / Art der Nutzung: Installation
- No. / Anzahl: 1
- Software Class / Softwareklasse: A
- Reference Hardware / Zubehör:
- Remark / Anmerkung: Software-Option
- Order No. / Bestell-Nr.: 6SL3074-0AA10-0AA0
- License No. / Lizenz-Nr.: T-H7IG09375
- License Key needed? www.siemens.com/industrial/licenses
A barcode is also present on the left side of the document.

License-No. / Lizenz-Nr.: T-H7IG09375
Dispatch note No. / Lieferschein-Nr.: 95525216

Enter your License number and your dispatch number from your certificate of license.

How to assign a license from a certificate of license to a device

User menu

- > Direct access
- > Direct access with barcode
- > Customer login
- > Display license key
- > Manage license pool

Direct access

Login **Identify product** Select licenses Assign licenses Generate license key

Enter the serial number of the hardware to which you want to assign licenses.

Hardware serial number

Product

For the SINUMERIK product, you have also the possibility to determine the serial number of the hardware from a file::
Path to the keys.txt respectively*.alm file

Alm file

CF-Card for S120

SIEMENS © Siemens AG All Rights Reserved
6SL3054-0EG00-1BA0-Z
Z=F01
SINAMICS S120
SW 4.6 HF8

HW Ser. No. **110820A5**
Ser. No. T-D91J05943
24.09.2013
04.06.00.08
Disp. Note No. 25180631

SD-Card for S210 / G120

SIEMENS
SINAMICS
6SL3054-4AG00-2AA0
SD-Card 512MB empty
00.00.00.01
25197675
SW-N.: S-T-DOB000102
HW-N.: **N3093135810065**

Enter your hardware serial number which you find on your memory card and select your product type (Here a Screenshots from a CF-Card of a S120 and as well from a SD-Card for S210and G120).

How to assign a license from a certificate of license to a device

User menu

- > **Direct access**
- > Direct access with barcode
- > Customer login
- > Display license key
- > Manage license pool

Direct access

Login **Identify product** Select licenses Assign licenses Generate license key

The following licenses have been assigned to the hardware.
Product name: SINAMICS S CU3xx
Hardware serial number: 110820A5
Machine identifier:

No licenses have been assigned to the hardware yet.

Next

If there already were licenses assigned to this memory card it would be displayed here.

How to assign a license from a certificate of license to a device

User menu

- > Direct access
- > Direct access with barcode
- > Customer login
- > Display license key
- > Manage license pool

Direct access

Login Identify product **Select licenses** Assign licenses Generate license key

Select the licenses that you want to assign.

Product name: SINAMICS S CU3xx

Hardware serial no.: 110820A5

Machine identifier:

Current license key

| <u>Product</u> | <u>Quantity</u> | <u>Max quantity</u> | <u>Box</u> | <u>License number</u> |
|---|-----------------|---------------------|------------|---|
| SINAMICS Safety Integrated Extended Functions 6SL3074-0AA10-0AA0 | 0 | 16 | 1 | <div style="border: 1px solid black; padding: 2px;">T-H7IG09375 T-H7IG09376 T-H7IG09377</div> |

Next

1 - 1

All available licenses on this dispatch note are displayed here. This one contained three licenses. Check your COLs for further information about them.

How to assign a license from a certificate of license to a device

User menu

- > **Direct access**
- > Direct access with barcode
- > Customer login
- > Display license key
- > Manage license pool

Direct access

Login Identify product **Select licenses** Assign licenses Generate license key

Select the licenses that you want to assign.

Product name: SINAMICS S CU3xx

Hardware serial no.: 110820A5

Machine identifier: 

Current license key

| <u>Product</u> | <u>Quantity</u> | <u>Max quantity</u> | <u>Box</u> | <u>License number</u> |
|---|-----------------|---------------------|--|--|
| SINAMICS Safety Integrated Extended Functions 6SL3074-0AA10-0AA0 | 0 | 16 | 1  | <div style="border: 1px solid black; padding: 2px;">T-H7IG09375 T-H7IG09376 T-H7IG09377</div> |

Next

1 - 1

Optional: If you want to change your machine identifier, click on the “i”-symbol ...

How to assign a license from a certificate of license to a device

The screenshot shows a software interface with a 'User menu' on the left containing options like 'Direct access', 'Direct access with barcode', 'Customer login', 'Display license key', and 'Manage license pool'. The main area is titled 'Direct access' and contains a 'Change machine ID' dialog box. The dialog box has a title bar and a close button (X). Inside, there are two labels: 'Old machine identifier' and 'New machine identifier'. The 'New machine identifier' field contains the text 'MyAxis'. Below the input field are two buttons: 'Speichern' (Save) and 'Schliessen' (Close). To the right of the dialog box, a 'Next' button is partially visible. The background shows a list of items, including 'SINAMICS 6SL3074-...'.

... enter your new machine identifier and click “save”.

How to assign a license from a certificate of license to a device

User menu

- > Direct access
- > Direct access with barcode
- > Customer login
- > Display license key
- > Manage license pool

Direct access

Login Identify product **Select licenses** Assign licenses Generate license key

Select the licenses that you want to assign.


Product name: SINAMICS S CU3xx

Hardware serial no.: 110820A5

Machine identifier: MyAxis 

Current license key

| <u>Product</u> | <u>Quantity</u> | <u>Max quantity</u> | <u>Box</u> | <u>License number</u> |
|---|-----------------|---------------------|--|---|
| SINAMICS Safety Integrated Extended Functions 6SL3074-0AA10-0AA0 | 0 | 16 | 1   | <div style="border: 1px solid black; padding: 2px;"><div style="background-color: #0070C0; color: white; padding: 2px;">T-H7IG09375</div><div style="padding: 2px;">T-H7IG09376</div><div style="padding: 2px;">T-H7IG09377</div></div> |

 Now select which licenses you want to assign to your card and click “Next”. Here there is just one license type to choose from but there could as well be multiple different license types, depending on your order.

How to assign a license from a certificate of license to a device

User menu

- > **Direct access**
- > Direct access with barcode
- > Customer login
- > Display license key
- > Manage license pool

Direct access

Login Identify product Select licenses **Assign licenses** Generate license key

You would like to assign the following licenses to the product. If you continue, these licenses will be assigned.
This operation cannot be undone by the user alone!

| Product | License No. |
|---|-------------|
| SINAMICS Safety Integrated Extended Functions 6SL3074-0AA10-0AA0 | T-H7IG09375 |

CSV export

1 - 1

Assign

You get an overview over the selected licenses. With a click on the “Assign” button the licenses are permanently assigned to the card. If you want you can export the product description and the license number as .csv for your own documentation.

How to assign a license from a certificate of license to a device

User menu

- > Direct access
- > Direct access with barcode
- > Customer login
- > Display license key
- > Manage license pool

Direct access

Login Identify product Select licenses Assign licenses **Generate license key**

A license key has been generated on the basis of all licenses that you have assigned to a product.

The name of the license key is:
F SXX-LAKP-LA

Enter the license key on your target system.

The license key can be stored in a file:

- [Save the license key in SIN++SINAMICS S CU3xx+110820A5+incl_key.alm.](#)
- [Save the license key in keys.txt](#)
- [Save the license report in PDF format](#)

The following licenses are assigned to the hardware SINAMICS S CU3xx with the serial number 110820A5

| Assignment date | Order No. (MLFB) | Product | Licenses |
|-----------------|--------------------|---|-------------|
| 03-NOV-16 | 6SL3074-0AA10-0AA0 | SINAMICS Safety Integrated Extended Functions | T-H7IG09375 |

[CSV export](#)

1 - 1

A new license key was generated and replaces your old key now.
You can now save it in various formats. For further information please check page number 16.

SINAMICS Web License Manager

1 Assigning new licenses

2 Check for assigned licenses

3 Transfer new keys

How to check which licenses are assigned to a device

User menu

- > Direct access
- > Direct access with barcode
- > **Customer login**
- > Display license key
- > Manage license pool

Home

Welcome to the Web License Manager of Siemens DF MC!

The Web License Manager allows you to assign your software licenses online to a target system. You can assign several licenses at the same time. You will obtain a license key which you must transfer to your target system.

Before you can assign your software licenses, you must register using one of the following options:

Direct access: This access allows you to assign all licenses which are included in the delivery.



Direct access (barcode scanner): This access has been optimized for operating a barcode scanner. Thus, you can assign all Certificates of License which have been acquired using a barcode scanner.



Customer login: If you have a personal access, you can use the customer login to assign all licenses which you have obtained so far.



In case you accidentally delete the License Key from your CF- Card you can reobtain it through the Web License Manager.

How to check which licenses are assigned to a device

User menu

- > Direct access
- > Direct access with barcode
- > Customer login
- > **Display license key**
- > Manage license pool

Display license key

This information function is used to display the license key generated last. Only if an assignment has already been made can the license key be displayed.

Please fill in one of the two fields.

Hardware serial number

License no.

Machine identifier

SD-Card for S210 / G120

SIEMENS
SINAMICS
6SL3054-4AG00-2AA0
SD-Card 512MB empty
00.00.00.01
25197675
SW-N.: S.T.DORC00102
HW-N. **N3093135810065**

CF-Card for S120

SIEMENS Siemens AG
All Rights Reserved

6SL3054-0EG00-1BA0-Z
Z=F01
SINAMICS S120
SW 4.6 HF8

HW Ser. No. **110820A5**
Ser. No. T-D9IJ05943
24.09.2013
04.06.00.08
Disp. Note No. 25180631

Select „Hardware serial number“ and enter the number printed on the memory card.

How to check which licenses are assigned to a device

User menu

- > Direct access
- > Direct access with barcode
- > Customer login
- > **Display license key**
- > Manage license pool

Display license key

This information function is used to display the license key generated last.
Only if an assignment has already been made can the license key be displayed.

Please fill in one of the two fields.

Hardware serial number

License no.

Machine identifier

1 License key: FSXX-LAKP-LA

The license key can be stored in a file:

- [Save the license key in SIN++SINAMICS S CU3xx+110820A5+incl_key.alm](#)
- [Save the license key in keys.txt](#)
- [Save the license report in PDF format](#)

Further, you can obtain a license report including a compilation of all assigned licenses via e-mail.

3 Email address

1: This is your current License Key

2: There are different ways for you to store your license key. You can transfer your key directly via drag & drop into your Engineering tools (see page 19) or store them in a .txt file if you want to copy the license to the CF Card using a file browser. Alternatively you can save your License Report as a .pdf file.

3: After Entering your Email address, you can request a Summary of all assigned licenses. See next Page.

Select „Hardware serial number“ and enter the number printed on the CF-Card.

How to check which licenses are assigned to a device



The screenshot displays a 'license REPORT' header with the Siemens logo. Below the header is a table with the following data:

| Order No. | Product | License No. | CoL supplied |
|--------------------|---|-------------|--------------|
| 6SL3074-0AA10-0AA0 | SINAMICS Safety Integrated Extended Functions | T-H7IG09375 | Yes |

The License Report provides an overview over all currently assigned Licenses.




SINAMICS Web License Manager

1 Assigning new licenses

2 Check for assigned licenses


3 Transfer new keys

How to transfer a new key onto a memory card

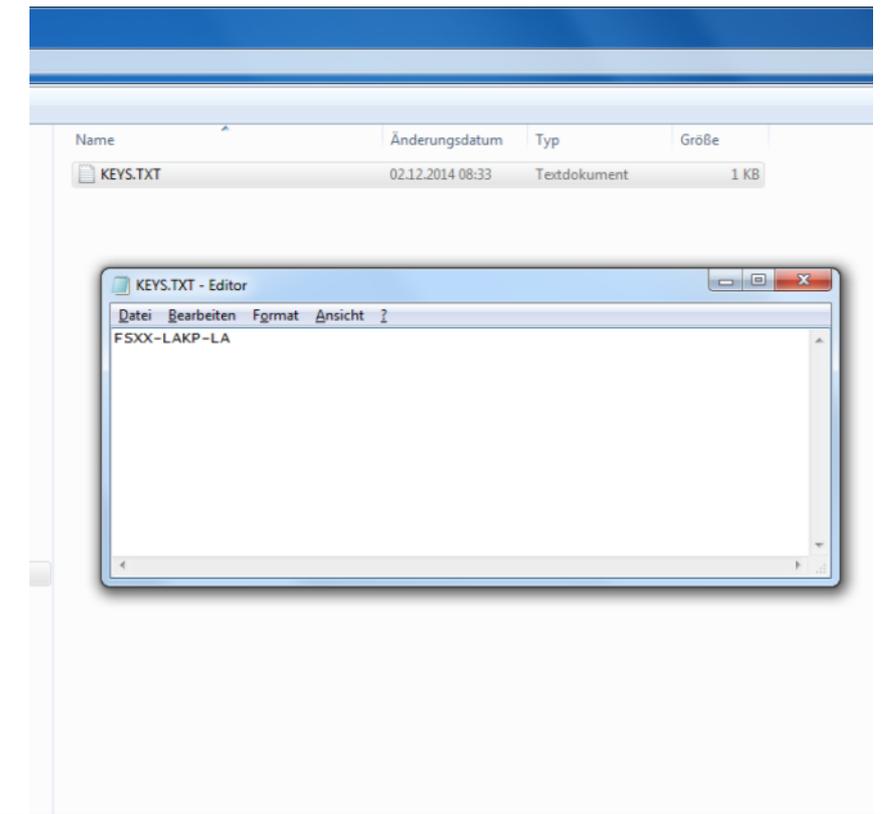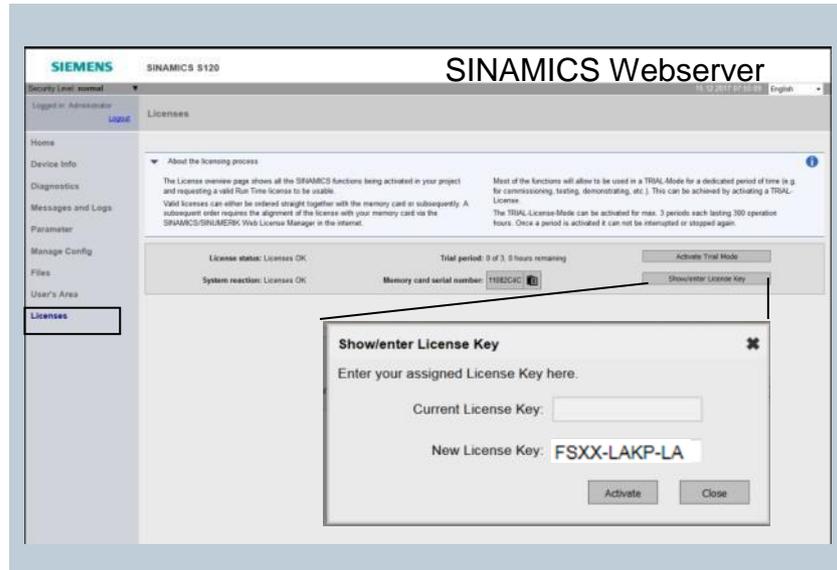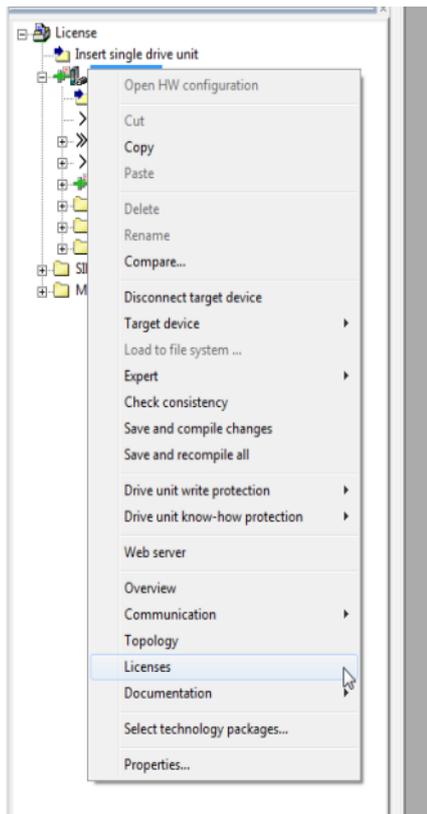

To transfer the license to your device, either use STARTER/Startdrive or Webserver and enter your license key there in the License Key dialog ...

...or put the memory card into your PC and enter it at YourCard/Keys/SINAMICS/KEYS.TXT

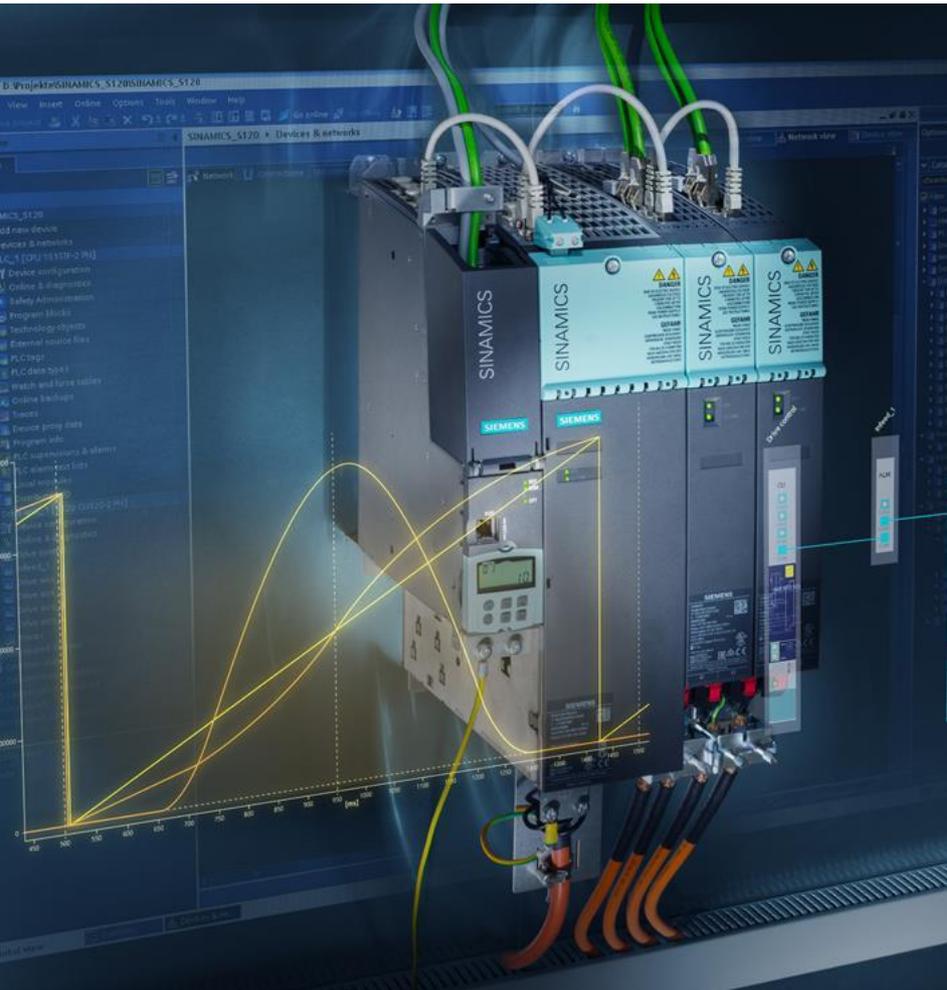

Subject to changes and errors. The information given in this document only contains general descriptions and/or performance features which may not always specifically reflect those described, or which may undergo modification in the course of further development of the products. The requested performance features are binding only when they are expressly agreed upon in the concluded contract.

All product designations, product names, etc. may contain trademarks or other rights of Siemens AG, its affiliated companies or third parties. Their unauthorized use may infringe the rights of the respective owner.