

 
HOW TO USE THE CLOCK PROGRAMMER

Your clock/ programmer consists of, TWO SLIDERS and FOUR BUTTONS.

These control your HEATING and HOT WATER. There is also a CLOCK (TIMER)

Which allows you to decide when and for how long your HEATING and HOT WATER will be ON .

You will need to set the time on the clock by turning the dial clockwise until the correct time is lined up with the time setting triangle.

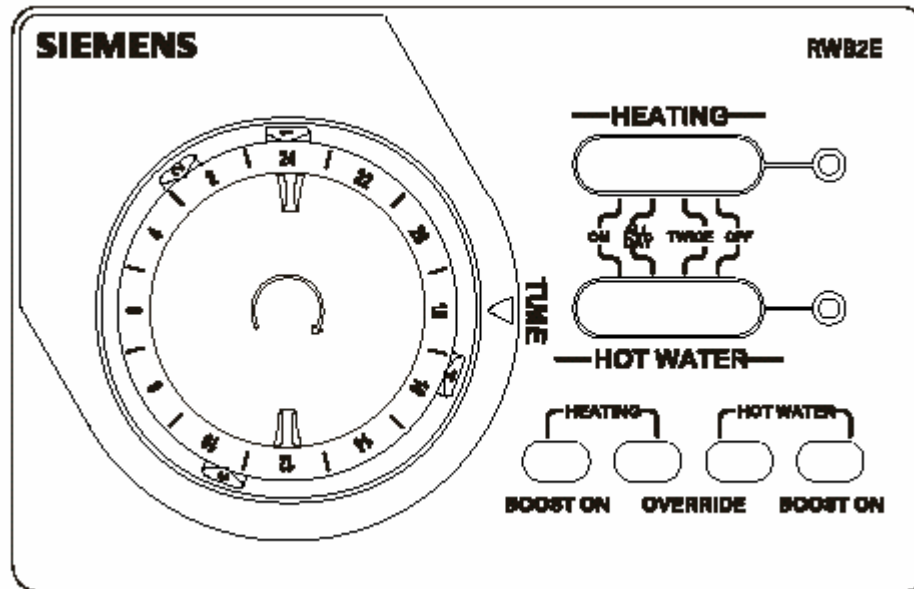

SLIDERS There are TWO sliders ONE for the hot water and ONE for central heating

ON This means that the heating or hot water is ON all the time.

ALL DAY. This means that the heating or hot water will come ON, at the first tappet, GO OFF at the last and Ignore the, TWO in-between.

TWICE This means that the heating or hot water will be ON and OFF at the times set.

OFF This means that the heating or hot water is OFF all the time.

There are FOUR buttons marked BOOST and OVERRIDE, (ONE of each for HEATING and HOT WATER)

BOOST

This means that if the HEATING or HOT WATER is not due to be ON or the slider is in the OFF position then you can use this button to turn HOT WATER or HEATING on for **one hour, or if pressed in an ON position, will also extend the period by one hour.**

OVERRIDE

This means that it will OVERRIDE the clock instructions. eg

(a) If your times were ON 7am and OFF 9am - ON 5pm and OFF 10pm and you pressed the OVERRIDE at 4pm then your HEATING or HOT WATER would turn ON straight away and turn OFF at 10pm

(b) If your times were ON 7am and OFF 9am - ON 5pm and OFF 10pm and you pressed the OVERRIDE at 9pm then your HEATING or HOT WATER would turn OFF straight away and turn ON at 7am the following day.

HOW TO USE THE CLOCK PROGRAMMER

ADJUSTING THE CLOCK

The CLOCK is a 24 HOUR CLOCK which allows you to control the TIMES you use your HEATING and HOT WATER, There are FOUR TAPPETS on the clock dial TWO are ORANGE and TWO are BLUE, the ORANGE TAPPETS are ON and the BLUE TAPPETS are OFF , simply move the TAPPETS to the time on the clock dial that you wish your HEATING /HOT WATER to switch ON or OFF

MANUAL USE

If you do not wish to use the timer you can switch your HEATING or HOT WATER, ON and OFF as you need too, by using the ON and OFF positions on the SLIDERS.

Remember that if you switch HEATING or HOT WATER, ON manually, you must also switch them OFF manually.

Do not switch the clock programmer ON and OFF by the main switch (usually located next to the clock programmer) as this will stop the clock and affect the timed programme.

ROOM THERMOSTAT

The thermostat is usually fitted in your hall and controls the house heating by keeping it at the temperature you have set a comfortable setting is usually between 18°C and 22°C

Remember that turning the thermostat up will not heat the room faster

The higher the room thermostat setting the more gas you will use

THE HOT WATER CYLINDER THERMOSTAT

A thermostat controls the water temperature, which is pre set. You do not need to adjust this.

THE BOILER

The Boiler is the powerhouse of your central heating and hot water system.

You would not normally need to adjust the boiler controls except to re-light the pilot light.

Full lighting instructions are inside the lower tray of the boiler.

Fault check list

If your system does not work properly go through the fault checklist, if after trying these you still have a problem or are unsure what to do contact this office or your rent office

Fault

Check /Remedy

Boiler will not ignite

- 1) Check water supply is on
- 2) Check electric supply is on and switch is on
- 3) Check that programmer is on an "ON" setting
- 4) Check that timer is showing correct time, and reset if necessary.
- 5) Check that room thermostat has not been set to low
- 6) Check that boiler thermostat is on and not set to low

Radiator(s) not heating
Up properly

- 1) Check that room thermostat is not set to low
- 2) Check that boiler thermostat is not set to low
- 3) Check time settings are right and giving sufficient time for system to heat up
- 4) Check radiator valve is on.

Heating is on but
No hot water

Check hot water has been selected remember the boiler comes on even when only central heating has been selected