

en Operating instructions

REV17.. - 7-day room temperature controller with weekday/weekend selection for the right temperature at the right time. All factory settings already provide optimal living comfort. You can easily adjust the controller to your needs with the user-assisted clear-text display and program selection slider.

Note the following for placing the room unit:

- Make sure no other influencing factors influence the room unit's temperature sensor (no solar radiation and other heat or cold source influences).

Display

Operating elements and settings

Operating elements and settings

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	
Time setting	Date	Weekdays 1-5	Weekend 6-7	Comfort phases 1, 2 or 3	Start time	Temperature	End	Start time	Temperature	End	Start time	Temperature	End	Saving temp. time program	Start Absence	Temperature Absence	End Absence	Temperature remote control

If the selected operating mode does not support the setting, the time display shows **PASS**.

Special symbols displayed

The controller display can show the following special symbols:

Is symbol displayed ?

The alarm indicates an error!

Press the Info button and check the error message (e.g. radio clock signal, radio connection to receiver, etc.). Contact a specialist as needed.

Is symbol displayed ?

This symbol tells you that you must exchange the batteries within the next 3 months.

Insert 2 new alkaline batteries type AA, 1.5 V as follows:

Remove the controller from the mounting base; open the battery compartment on the rear; remove the old batteries; insert the new batteries and reinsert the controller in the base.

Caution: Time and date are retained for **max. 1 minute**. (All other settings are fixed and remain unchanged!)

Dispose of the batteries as per regulations.

Is symbol displayed ?

The radio clock symbol only appears if the receiver is set up and activated to receive the time signal from Frankfurt (Germany). A permanent symbol indicates that both time and date of the controller are synchronized to Frankfurt radio clock (DCF77). The symbol flashes if the signal is not received for more than 1 week.

Is symbol displayed ?

The controller is in heating mode .

Commission the controller and quick start

The controller contains a factory-set heating switching pattern and temperature values. Proceed as follows for initial commissioning:

	Remove the controller from the mounting base and pull off the black insulating tape from the 2 batteries: The controller turns on automatically. Reinsert the controller in the mounting base.
	After startup, a welcome message appears for ca. 2 minutes. Press a button to interrupt the message. Language selection starts with "ENGLISH" (factory setting). Press or until your language appears. Press or move the slider to accept your language.
	Slider in position 1 (time setting): Press or to set the time. Note: You do not need to enter the time when DCF77 receiver for the time signal from Frankfurt (Germany) is equipped.
	Slider in position 2 (date: day/month/year): Press or to set the date. Note: You do not need to enter the date when DCF77 receiver for the time signal from Frankfurt (Germany) is equipped.
	Move the slider to the very right to position RUN (only way to close the cover).
	Set the operating mode with the operating mode selector. Factory setting is .

Fold the operating instructions and reinsert in the mounting base.

Turn on display lighting, check error messages or other important information

	Press the Info button once to activate display backlighting. Backlighting goes off automatically after a short time. Continuing to press the Info button activates the information display: Info is lit. The device first shows pending error messages and then important information (e.g. switching programs, ...).
--	---

Change the temperature level in the time switch program, or are you not at home for a while?

	In the time switch program, press this button to change from the current temperature level to the next and back. Quickly activate energy saving temperature when you leave the apartment briefly to save energy. The change appears on the display. It is valid only until the next switching time.
--	---

Tips to save energy without reducing comfort

- Heat your rooms to max 21 °C.
- Use to switch to energy saving temperature even if you are absent only briefly.
- Air out your rooms briefly, but with wide-open windows.

B2203en



24.12.2007

Siemens, Building Technologies

 

Select operating mode

Press the operating mode button  to select one of 5 modes.

Operating modes with time program




The controller offers both time programs Automatic  and Exception day .

Do you feel too warm / too cold ?

 

Press  or  to set the temperature. The setting is temporary and active only until the next time the controller activates a change.

Note: To set your own programs, see: "Enter customized temperatures and switching times".


 



Continuous operating modes

The controller offers continuous operating modes "Continuous comfort mode" , "Continuous energy saving mode"  and frost protection mode .

Do you feel too warm / too cold ?







 


 



 


 
 
 



Press  or  to set a continuous temperature.

Enter time and date

	Slider in position 1 (time setting): Press  or  to set the time.
<div>dd mm yy</div>	Slider in position 2 (date: Day/month/year): Press  or  to set the date.
RUN	Reset the slider to the RUN position.
Note: You do not need to enter time and date when DCF77 receiver for the time signal from Frankfurt (Germany) is equipped. The time display shows PASS .	

Enter customized temperatures and switching times

The controller has three different switching patterns that you can allocate to the weekday blocks 1-5 or weekend block 6-7.
Proceed as follows:

	Select operating mode  or  .
<div>1-5 6-7</div>	Slider in position 3 (weekdays 1-5 , weekend 6-7): Press  or  to select the desired block.
	Slider in position 4 (number of comfort phases): Press  or  to set the number of comfort phases.
<div>P1</div>	Slider in position 5 (start time comfort phase 1): Press  or  to set the start time.
<div></div>	Slider in position 6 (temperature comfort phase 1): Press  or  to set the temperature.
<div>P2</div>	Slider in position 7 (end time comfort phase 1): Press  or  to set the end time.
<div><div>P3P4</div><div>P5P6</div></div>	Slider positions 8...10 (comfort phase 2) and slider positions 11...13 (comfort phase 3): Same procedure as above for comfort phase 1.
<div>1-7 </div>	Slider in position 14 (energy saving temperature in time switch programs Automatic and Exception day): Press  or  to set the temperature. Note: The energy saving temperature is valid Monday through Sunday. It does not depend on operating mode "Continuous energy saving".
RUN	Move the slider to RUN position and close the cover.






 

 



 

 

Notes (e.g. individual settings):

Enter holidays or absence

You can enter start, temperature and end of your holidays. The controller switches to the set holiday temperature at the start of the holidays and back to the preset operating mode at the end of the holidays.

During holiday mode, symbol  flashes and the end of the holidays is displayed.

Proceed as follows:




	Slider in position 15 (start of absence): Press  or  to set the start of the holidays (date).
	Slider in position 16 (temperature during absence): Press  or  to set the temperature effective during the holidays.
	Slider in position 17 (end of absence): Press  or  to set the end of the holidays (date).
RUN	Move the slider back to RUN. Symbol  appears to the left of symbol  To quit holiday mode prematurely, press  ,  ,  ,  or move the slider.

Enter temperature for active remote control




 
 

With remote control, you are free to select the temperature. Activating remote control immediately enables control to the remote operating temperature regardless of the current operating mode. After you switch off remote control, the device returns to the set operating mode.







 



Symbol  flashes with active remote control.

 
 

Proceed as follows:

	Slider in position 18 (temperature for active remote control): Press  or  to set the temperature for active remote control.
RUN	Move the slider back to RUN.



Reset to factory settings

<div>  </div>	Press  and  together with the operating mode button  for 3 seconds. All temperature and time settings are reset to default values. The clocks starts at 12:00. Caution: All customized settings are lost !
---	--

Factory settings: Heating		
	<div>123</div>	20 °C
	<div>1-7</div>	16 °C
		8 °C
	<div></div>	12 °C



 


 



Factory settings: Switching times						
Comfort phases	P1	P2	P3	P4	P5	P6
1. 	07:00	23:00	PASS	PASS	PASS	PASS
2. 	06:00	08:00	17:00	22:00	PASS	PASS
3. 	06:00	08:00	11:00	13:00	17:00	22:00

Activate Party mode

You can activate Party mode only in operating modes  and . In Party mode, the device controls to any selectable temperature for any selectable time.

In Party mode, symbol  is displayed along with the end of Party mode.

Proceed as follows:

	<div><div>1. Press  for 3 seconds.</div><div>2. Press  or  to set the duration for Party mode. Party mode can last max. 9 hours. The entry is accepted after 20 seconds or when you press .</div><div>3. Press  or  to set the temperature.</div><div>4. Party mode ends automatically after the Party duration ends or when you press  or .</div></div>
---	--