



| | |
|--|---|
| | ⚠ DANGER |
| | HAZARDOUS VOLTAGE WILL CAUSE DEATH OR SERIOUS INJURY. DISCONNECT POWER BEFORE WORKING ON EQUIPMENT. |

INSTALLATION INSTRUCTIONS:

| | | | | | |
|---|--------------------|--------------------|--------------------|--------------------|--------------------|
| MAIN BREAKER ASSEMBLY CATALOG NO. | | | | | |
| MEK060 (E09671) | MEK070 (E09672) | MEK080 (E09673) | MEK090 (E09674) | MEK100 (E09675) | MEK125 (E09677) |
| FOR USE ONLY WHERE SPECIFIED ON PANEL LABEL | | | | | |

REMOVE FILLER PLATES OR TWISTOUTS FROM MAIN BREAKER OPENING IN TRIM.