#### Att ladda ner projekt till en Unified Comfort Panel (UCP).

- 1. Vilka produkter har använts i detta exempel?
- Mjukvaror:

Step7 Professional V16 Upd3 WinCC Unified V16 Upd3

• Hårdvara:

SIMATIC S7 CPU1518F-4 PN/DP MTP1500 Unified Comfort 6ES7 518-4FP00-0AB0 FW2.8. 6AV2128-3QB06-0AX0 V16.0.0.3

Projekt:

UCP\_forstaNedladdning.zap16

#### OBS!

Detta är ett tips/exempel på lösning som skall hjälpa användaren att komma igång och se möjligheterna att använda SIMATIC. Du måste själv anpassa detta tips/exempel till din applikation.

Siemens tar inget ansvar om material eller personal skadas i samband med användning av detta tips/exempel.

Vi kan heller inte garantera att innehållet är helt felfritt och vi förbehåller oss rätten att ändra tipset/exemplet vid behov.

2. Uppdatera operativsystemet i panelen.

Med senaste uppdateringen så har det många saker åtgärdats, blivit bättre i en UCP. så se till att alltid ha den senaste versionen. Just nu är det image/firmware V16.0.0.3.

Om panelen har en lägre version. Uppdatera enligt nedan steg för steg. Uppdatering av operativsystemen kan bara ske på X2 porten.

a (		SIMATIC
<u> </u>	System Properties \ Panel information	
Start Runtime	Properties	
System Properties		
. Runtime	Device type:	MTP1500 Unified Comfort
Properties	Article number:	6AV2 128-3Q806-0AX0
Network and Internet	Serial number:	LBM4002732
Comunity	Senai number.	20104002732
U security	Firmware/Image version:	V16.00.00.01_17.01
and Input	Runtime version:	16.0.0.1
Language, Region and Formats	Bootloader version:	V07.01.00.00_01.01.03.03
Service and	Poetloador release date:	02/10/2020
Commissioning	buuluduer release date.	03/10/2020
🖧 Apps	PN-X1 MAC address:	30-13-89-08-22-b9
	PN-X2 MAC address:	30-13-89-08-22-bc

• Ladda hem senaste filen supportsidorna och kör exe filen. De nya image/firmware filerna kommer att hamna på rätt ställe.

Industry Online	e Support United States	Contact Help	Support Request	Site Explorer	Search in Online Support	0
Home > Produc	ct Support			🗗 Product Su	pport   🍮 Services   🏟 Forum   🖡	mySupp
Entry type: Down	load Entry ID: 109746530, Entry date: 11/0	2/2020				
			> Rate		[	iĝa   🖶
mage dow	nloads for HMI operator pa	nels		Share this Pag	je: 🖂 🔁 F 🕨	
Entry Associa	ited product(s)			-		
				mySuppor	Cockpit	
Jownload HMI op	perator panel images.			Jonas Hammar	stedt	
1.1 Open Source	Software			> Add to mySu	pport favorites	
1.2 Unified Comfo	ort Panels Image and Readmes			> Add to mySu	pport documentation	
2.1 WinCC Panel	Image DVD			> Favorites		
2 Open Source	Software for Other Operator Panels	ands INOX		> CAx downloa	ds	
2.4 Comfort Pane	Is 15" - 22" Revised Version /Redesign/V2			> My Products	/ Clipboard	
1.5 Comfort Panel 2.6 Mobile Panels	Is PRO			Entries last	viewed	
2.7 Mobile Panels	1st Generation					
1.9 Basic Panels 1 2.10 Classic Panel	1st Generation			D 1 4		
Trainings and F	urther Information			Product in	rormation	
1.1 SITRAIN train 3.2 Further Inform	ings hation			<ul> <li>Presales info</li> </ul>		
				Catalog and	ordering system online	
Operator Panel Im	ages loss include the operating system and UMI Pur	time for operator papels		<ul> <li>Technical info</li> </ul>		
Depending on the v	version of WinCC (TIA Portal) you can use diffe	rent image versions.		<ul> <li>Support</li> </ul>		
nterdependency a	and Compatibility			<ul> <li>Service offer</li> </ul>		
The Compatibility To	ool shows the possible combinations of TIA Po	rtal, operator panels and operator panel image	version.	Training		
Compatibility To	ol			💽 Contact & pa	tners	
1 Unified Comfo	rt Panels			Dolatod lin	ke	
I.1 Open Source	Software			Related in	NO	
The Open Source of anguages. The "Un	components included are in "Unified_Comfort_I nified_Comfort_Panel_ReadMe_OSS - Third P	'anel_Readme_OSS_PCM.zip" file. The Zip file arty Software Notices.zip" file includes the Rea	e includes the ReadMe in different dme for third-party software.	> Get help with > Compatibility > How to use th	the Digital Assistant Tool e chatbot	
a of Unified_Cor	mfort_Panels_Readme_OSS_PCM.zip (6.9 MB	)		> Register your > Visit our Com	SINAMICS Drive	
le of Unified_Con	mfort_Panel_ReadMe_OSSThird_Party_So	tware_Notices.zip (3.5 MB)		/ Visit our Corn	enting Community	
i of Unified_Cor Unified_Cor	mfort_Panel_OpenSourceSoftware_part_1.zip	1.1 GB)				
of Unified Cor	mort_Panel_OpenSourceSoftware_part_2.2p	1.2 GB)				
of Unified_Con	mfort_Panel_OpenSourceSoftware_part_4.zip	994.5 MB)				
i o Unified_Cor	mfort_Panel_OpenSourceSoftware_part_5.zip	1.4 GB)				
v o onnied_cor	mon_Pane_openaourcesonware_par_0.2p	1.1 (8)				
.2 Unified Comf	fort Panels Image and Readmes					
Image Version	Image Download					
V16.0 Upd. 3	d v Unified_Comfort_Panel_Images_V SHA-258: b87c92d9e4767bc6b78cb2fbea	16_Upd3.exe (1,3 GB) 45085d7e5715d78aa0f9991bc442872813457f				
V18.0 Upd. 2	d* Unified_Comfort_Panel_V18_0_Up SHA-258: 8af93cbc2552a00a5572608323	d2.exe (1.3 GB) 94eacd68aafe07103c9ef9bb7d4b803b0e8232				

 Ställ in panelen för att ta emot uppdateringen på X2 porten och tilldela X2 porten en IP adress.

<i>a</i> 1		SIMATIC
<b>*</b> `	Service and Commissioning \ Transfer	
Start Runtime	Transfer mode	
System Properties		Enable transfer
Not Runtime Properties	Transfer channel	Ethernet (Supported only on
Network and		Ethernet (Supported only on X2
Security	Encrypted project transfer	interface)
<ul> <li>External Devices</li> </ul>	Password	PN/IE (Supported only on X1 interface)
and Input	Tubiliti.	Set Password
and Formats		Sectositore
れ Service and Commissioning		
<b>&amp;</b> Арря		
* <		SIMATIC HMI L
Start Runtime	Network and Internet \ Network settings	
System Properties	PN-X1 PN	-X2 General
Runtime		
<ul> <li>Properties</li> <li>Network and</li> </ul>	IP address	
finternet	0.0	Obtain an IP address via DHCP
Security	05	pecify an IP address
and Input	IP address: 1	92.168.1.150
and Formats	Subnet mask: 2	5.255.255.0
Commissioning	Default gateway:	
Apps	-	Set IP address

• Tilldela din dators nätverkskort en IP adress inom samma område som panelen.



• Ställ in PG/PC interface så att det använder rätt nätverkskort på din dator.

		All Control Panel Items			~	5 Search Control Panel 3
djust	your computer's settings					View by: Largé Icons 🔹
è.	Administrative Tools	Set PG/PC Interface Access Path ULDP / DCP   PNID Advator   Ma	1	×estore	🍕 BitLocker Dri	ve Encryption
2	Color Management	Access Point of the Application: STONLINE (STEP 7) -> Intel(R) (210 Gigabit	Network Connection	mager	Date and Tim	ie .
6	Default Programs	(Standard for STEP 7) Interface Parameter Assignment Used: Intel(P) (210 Gigabit Network Connection T	Properties	rinters	🚱 Ease of Acces	is Center
-	File Explorer Options	間intel用) Ethemet Connection (2) 121 A 間intel用) Ethemet Connection (2) 121	Diagnostice	32-bit)	A Fonts	
2	Indexing Options	Intel/R) 1210 Gigabit Network Conne     Intel/R) 1210 Gigabit Network Conne	Delete	ms	Keyboard	
0	Mail (Microsoft Outlook 2016) (32-bit)	(Parameter assignment of your NDIS-CP with/TCP/IP protocol (RFC-1006)			Network and Center	Sharing
3	Phone and Modem			1 Features	Realtek HD A	udio Manager
	Recovery			nd Desktop	Y Security and	Maintenance
ų	Set PG/PC Interface (32-bit)	Sound	Gander Help	ecognition	😻 Storage Spac	es
0	Sync Center	🧕 System	Taskbar a	nd Navigation	Troubleshoot	ing
12	User Accounts	WinCC Runtime Advanced	Window:	Defender	Windows Mo	bility Center

Starta SIMATIC ProSave och ladda ner nya imagen.
 Fliken "General": välj vilken panel och hur den skall kommas åt.
 Fliken "OS Update": kontroller att sökvägen är rätt och klicka på "Update OS" knappen.



• Nu skall panelen ha fått en ny image/firmware.



3. Ladda ner projektet.

Nu med image/firmware V16.0.0.3 så är det möjligt att använda "Ethernet" och "PN/IE" på både X1 och X2 porten. Om möjligt använd X2 och Ethernet för bäst hastighet.

Här kommer jag att använda X1 porten (switch). Pc - panel – cpu.

Data transmission options

The following table shows the options for data transmission between an HMI device and the configuration PC.

Interface	PROFIN	ET (LAN	)	USB	SD	
Transfer function	Protocol	X1	X2	X61 X64	X51	
Backup and Restore	PN/IE	-	а. С	x	x	
	Ethernet	-	x			
Update operating system	PN/IE	~		x	х	
	Ethernet	-	x	1		
Update operating system and	PN/IE	~			-	
Reset to factory settings	Ethernet	~	x	]		
Transfer a project	PN/IE	×	x	-		
0.00	Ethernet	×	x	]		
S7 communication	PN/IE	×	x	-	-	
NTP, Web Client, Internet access, Sm@rtClient/Sm@rtServer, Industrial Edge	Ethernet	×	×	-	-	

The X20 RS422/485 interface is designed for connecting controllers from other manufacturers. Do not use the X20 interface for data transfer between the configuration PC and the HMI device.

• Ställ in panelen på "Ethernet" och tilldela X1 porten en IP adress.

1		SIMATIC	ab 1		SIMATICE
				Network and Internet \ Network settings	
Start Runtime	Transfer mode		Start Runtime		L
System Properties	Hunster mode		System Properties	PN-X1	PN-X2 General
a Runtime	Enable	transfer	a Runtime		
Properties	Transfer channel Ethernet	~	Properties	IP address	
Network and Internet			Network and Internet		Specify an IP address
Security	Encrypted project transfer		😯 Security	ID seletes	102 169 0 150
External Devices	Parawards		External Devices	ir adure	
and Input	18550010.		and Input	Subnet ma	:k: 255.255.255.0
Canguage, Region and Formats		Set Password	Canguage, Region and Formats	Default gatewo	iy:
パ Service and Commissioning			M Service and Commissioning		Set IP address
Apps			Apps		

• Ställ gärna in Datum/tid och Skärmsläckare också.

SIMATIC HMI Uni	
Language, Region and Formats \ Date and time System Prope	erties \ Screensaver
Date: 06 November 2020 Start Runtime	
J System Properties Current Time: 10.04/37	ieral Settings
Runtime Guinent Intel. 1994-27	Enable screensaver
Properties Time zone: (UTC=01:00) Amsterdam, Be V Runtime	
yetwork and     yetwork and     Set date and time manually     Properties	Wait time: 1 min.
Security     Security     Security     Security	
External Devices     Cosynchronize dine with a wir (welwork nine Protocol) server     internet	h h
and Input	nthess of screensaver
G Language, Region     August 2017 07 00     External Devices	20
- and romas 4 September 2018 08 01 and input	50
10 Commissioning	%
Apps 7 December 2021 11 04 and Formats	0 10 20 30 40 50 60 70 80 90 100
8 January 2022 12 05	
9 February 2023 13 06	
Set Date and Time _1 👫 Apps	

• Kontrollera att din dators nätverkskort har en IP adress i samma område som panelen och att rätt nätverkskort är valt i "PG/PC Interface".

🕂 🕂 🕈 🔮 > Control Par	nel > All Control Panel Items > Network	k Connections		~ C	Search Netw	ork Connections	p	Irouble issues
Irganize • Disable this netwo	rk device Diagnose this connection	Rename this connection	View status of this connection	Change settings of th	his connection	80 • 🔳	0	
Name	Status	Device Na	me		Connectivity		Netv	G G
Disutanth Network Connection	Not connected	Divetooth	Device (Berroon) Area Network)					<b>g</b>
Bidecoorn Network Connection	Not connected	Silveroun	Center (Personal Ana Meanut)					
e Ethernet	Unidentified networ	inc Diemens P	COSM virtual Ethernet Adapter		Pic network ac	0655	Publi	
LAN [P1]	Unidentified networ	ink (intel(R) Eti	hemet Connection (2) (219-LM	LAN [P1] Properties			· ~	
📮 LAN (P2)	Network cable unpl	lugged Intel(R) I21	10 Gigabit Network Connection	Naturaking Channel			-	
atf] Wi-Fi	Hammarstedt-5.0	Intel(R) Du	sel Band Wireless-AC 7265	adding Scaling			-	Internet Protocol Version 4 (TCP/IPv4) Properties
VMware Network Adapter VMm	et1 Enabled	VMware V	irtual Ethemet Adapter for VMnet1	Connect using:			- 11	Present
VMware Network Adapter VMne	et8 Enabled	VMware V	intual Ethernet Adapter for VMnet8	Ttel(R) Ethernet C	Connection (2) 1215	HLM		ucheral
							- 1	You can get IP settings assigned automatically if your network supports
						Configure.		this capability. Otherwise, you need to ask your network administrator
				This connection uses the	following items:			for the appropriate th seconds.
				V Clast in Mana	off Naturday			O Obtain as 10 address to temptrate
				Where Bridge	Petronal		<u> </u>	Contain an an address accontaincary
				Rie and Pinter	Sharing for Micros	oft Networks		( Use the following IP address:
				Trend Micro NE	DIS 6.0 Filter Drive	E.		IP address: 192 . 168 . 0 . 199
				C Gos Packet Sc	heduler			Submet marks 255 255 0
				Semens PLCS	M Virtual Switch			
				🖉 🔔 Internet Protoco	ol Version 4 (TCP/	Pv4)	v	Default gateway:
				<.		>		
				Frid.	Unntal	Properties		Cottain DNS server address automatically
				Dunisting				Use the following DNS server addresses:
				Leecaption		and the day of		Preferred DNS server:
				wide area network pro	tocol that provide	totocol. The detaut		the state of the s
				across diverse interco	nnected networks			Alternate DNS server:
							- 11	The second se
							_	Validate settings upon exit Advanced
items 1 item selected			_			OK Car	cel	Validate settings upon exit Advanced
items 1 item selected						ок Саг	cel	Validate settings upon exit Advanced
items 1 item selected						OK Car	of	Veidate settings upon exit Advanced
items 1 item selected						OK Car	cel	Alfdate settings upon exit     Alfdate settings upon exit     Alfdate settings upon exit     OK     Cence
items 1 item selected			v10 3a	- C ×		OK Car	of	Valdele settings upon oxit Advanced
items 1 item selected III Control Panel Items → - ↑ 📧 - Control Panel - Art	united frame lanes		v[0] [sin	- C × nh Conto Panel p		OK Car	ce	Suddete settings upon part     Advanced.     Ox     Cancel
items 1 item selected II Control Panal Items → - ↑ 100 × Control Fanal + AFC just your computer's settings	coded fring lang		v[0] [3a Vav	- C × ch Contai Parel P		OK Car	of	Suddete settings upon part     Advanced.     OK     Cance
items 1 item selected II Control Panal Items → - ↑	wind find targ	×	v (d) San Ver	X ch Contai Panel P tog Tanga cont X		OK Car	cel	Medidete settings upon not:     Advanced.     DK     Cance
items 1 item selected	united Fried Target All Party Interface Alexan Park [1057/257] PHD Juniter [166.]	× estore	v (b) Sa Ver	- C × th Control Panel P by: Tragition T stion		OX Car	cel	Suddete settings upon part     Advanced.     OX     Cancer
terns 1 kens selected  Consol Pand tern  Consol Pand tern  T 1 Pan 1 Pand tern  A Administrative tools  Color Management	united fined latest control fined latest Name Fall [Lates / Col ] FED Adular [ Ma. ] Accessive of the Nackadan.	Store reager	√⊗ Si Var ≪t Billacker Drive Dravy Bill Date and Time	× at constribute - P system		CK.	CH	Suddete settings upon part     Advanced.     OX     Cancer
tems 1 Rem selected If Constituent Tems	ener han see er flyft fastras Ann Mei (Lay XIO) FRO Assaul, Joh (1970) X (1970) - John Assaul, Joh (1970) X (1970) - John Assaul, Joh (1970) X (1970) - John Assaul, Joh	Statue Statue fores	v⊗ su var ≪t Billacker Drive Encry @ Date and Time @ Esse of Access Center	X ch Corto Proc P by Eugenetic* stion		OK Det		Indidite settings upon part     Advanced.     OX     Cancer
terns 1 item selected  EConst Pand Tern  Const Pand Tern  Administrative Book  Codor Management  Dotault Programs  File Explorer Options	energine two energine to the second s	X store otros	ر این	X ch Cores Innet P by Exposite stion		OK Car	of	Indidet settings upon not:     Advanced.     DS     Conce
term 1 item selected	energ Para Lines energ Para Lines energy Para Lines Sector V of Para Against Sector V of Para Against Sector V (V 2) The Sector V (V 2) The	X store 0.015.01 y works genes. 22-bit) rs	vec	X al Contar Funct - P by Degeneration stion	s	OK Car	oi	Indidite settings upon part     Advanced.     D     Conce
term 1 item selected	einin Anna Iang einin Kanadad anna And Lary (200 (190 Adata) Jahl, J Sana And Lary (200 (190 Adata) Jahl, J Sana And Jahl,	X store a stare ante- press res	ve     ve     ve     titLacker Drive Encryp     in     Date and Intere     in     fonts     vepbaad     veboad     veboad     veboad	X al Conta Funct - P by Degeneration stion		OK Gr	of	Indidite settings upon part     Advanced.     D     Cance
term 1 kenn selected	erising free tars; erising free tars; the SPA teacher. (2010) (11) (2010) (2010) (2010) (2010) (2010) (2017) (2010) (2010) (2010) (2017) (2010	X chore and the second	ve	- C × A		OX Gr	of	Indidite settings upon part     Advanced.     O
tern 1 iten selected  UC-end find ten  UC-end  UC-en	entropy from the set of the set o	(115) arger (115)	Vie 2 Vor Vie	- C × A		OK Der	of	Indidet entrops upon part     Advanced.     O
tern: 1 item selected  Count hard none  Count hard none  Count hard none  Count hard none  Count Amagement  Dotable Programs  Profile count Amagement  Recovery  State Count Amagement  Count Amagement  Count Amagement  Count Amagement  Count Amagement  Count Amagement  Profile count Amagement	Annu A lega Angel Annu A de Lata / KO   Markada Santa A de Lata / Markada Santa / Markada Santa / Markada	X estore 0.1514.00	Vie Standard Control of Access Center  Cont	- C X A Cores Fore A		OK Der	of	Indidet entrop upon out
tem 1 film saleted Conditional film film Conditional film	control from tone	X store 0.054// magre renters yearers 4 mb yearers 4 mb yea		- C X A Carso Fore A		OK De	ol	dedite setting correct.     Advanced.     Corr.     Corr.

 Öppna Tia Portalen och ditt projekt. Markera panelen i projektträdet och klicka på "Download" knappen. Välj "Ethernet" och ange IP adressen, klicka på "Connect". När kontakt är upprättad, klicka på "Load".

38	Siemens - D./PLC PROJEKTITIA PORTALWI 6/UCP	UCP_Grund/UCP_Grund							
P	roject Edit View Insert Online Options To	ols Window Help							
	💁 📴 Save project 🛛 👗 💥 🧾 🗈 🗙 🌖 ±	(** 🖫 🖳 🖪 🖫 🖬	💋 Go online 🚀 🙃	offine 🛔 🖪 📭	🗩 🖃 🛄 🛛 📧		roject» 🖣		
	Project tree	🗉 🖣 Exte	nded download to	device		_			×
	Devices Plant objects			Configured access no	des of "NTP1500"				
	32	<u> </u>		Device	Device type	Slot	Interface type	Address	Subnet
				MT*1500	MTP1500 Unified		Ethernet	192,168,0,150	
	Name	Vertion		MIP1500.JE_CP_1	PROFINETInterface	5.X1	PNRE	192.168.0.150	
Ę	- 002_Grund	~		MTP1500.05_CP_2	PROFINETInterface	6 X2	PHILE	192.168.1.158	
сй С	Add new device								
	Bevices & networks								
	MTP1500 [MTP1500 Unified Combort]				Type of the PGPC inte	nace:	W. Cthemet		-
	T Device configuration				PUM Los		Discover.		
	Se Online & diagnostics	-							
	Collaboration data						Directation"		• •
	T Burnme semings				Talget				- 8
	> Differen								
	2. Convertions								
	M IIM alarms			Address or name	e of target device:				
	Perameter set types								
	III Logs			Contigured IP Ad	dness				
	5 Scheduled tasks			🕒 Use other P					
	Scripts			P address:	197 188 0 1				
	Cycles 🗠			0		-			
	Text and graphic lists		Hash LED	Use device nam	e (DNS)				
	Ungrouped devices			Device name:					Concert
	Estimation Security settings								
	Cross-device functions								
	Common data	on	line status information					Display only error m	essages
	Documentation settings	× 4	Attempting to connect	t to the device with ed	dress 192.168.0.150.				
	<	2	Connection establish	ed to the device with a	ddress 192.168.0.150				
	✓ Reference projects	¥	Scan and information	retrievel completed.					
	🔼 🔁								
	an Destable educer							1060	Gancel
	Details view								

• I "Load Preview" rutan så ställer du inte diverse saker som skall ske vid nedladdningen. Tex om Runtime skall startas, om nya användare och lösenord skall laddas ner mm.

tatus	1	Target	Message	Action
4 <mark>0</mark>	<b>A</b>	▼ MTP1500	Ready for loading.	Load 'HMI_RT_7'
	0	Load Runtime	Full download to target system	Full download
	0	<ul> <li>Runtime start</li> </ul>	Start Runtime after download to target system.	Start runtime
	0		Runtime "MTP1500" can be started after download.	
	0	<ul> <li>Runtime values</li> </ul>	Keep current values in runtime or reset to start values from the en	Keep current values
	0		Keep values of tags, active alarms and user management data.	
	0		Keep current values of tags and pending alarms in the runtime	Vid
	0		Keep current user administration data in runtime	
	0	<ul> <li>Reset logs</li> </ul>	Reset all logs in the runtime	No reset
	0		All data logs, alarm logs and context logs are reset in runtime.	
	0	<ul> <li>HMI Runtime</li> </ul>	Informations	
	0		The Runtime has the following version: -	
	0		The firmware has the following version: V16.00.00.03_03.01.00.36	
	Å	<ul> <li>Secure transfer</li> </ul>	Load runtime unencrypted	Unencrypted transfer
	4		The download is vulnerable to hacking. Please activate encrypted transfer in "Runtime settings > General"	
			11	

• Nu skall ditt projekt vara i gång på panelen.

- 4. Referensmaterial.
- Hjälpen i aktuell mjukvara.
- SIMATIC HMI HMI devices Unified Comfort Panels
   <a href="https://support.industry.siemens.com/cs/se/en/view/109773257">https://support.industry.siemens.com/cs/se/en/view/109773257</a>
- Why does the project transfer of the Unified Comfort Panel fail? (Loading the operator panel) https://support.industry.siemens.com/cs/se/en/view/109780176

- 5. Andra länkar.
  - Siemens Sverige Industriella tjänster <u>https://new.siemens.com/se/sv/produkter/tjanster/industriella-tjanster.htm</u>
  - Siemens Industry Online Support
     <u>https://support.industry.siemens.com/cs/se/en/</u>
  - Siemens utbildning Sverige <u>https://www.sitrain-learning.siemens.com/SE/</u>
  - TIA Portal Tuturial center <u>http://www.siemens.com/tia-portal-tutorial-center</u>
  - Where do you procure the current trial software for STEP 7, WinCC and Startdrive for TIA Portal V16? <u>https://support.industry.siemens.com/cs/ww/en/view/109772992</u>
  - Programming Guidelines and Programming Styleguide for SIMATIC S7-1200 and S7-1500 <u>https://support.industry.siemens.com/cs/ww/en/view/81318674</u>
  - TIA Selection Tool
     <u>http://www.siemens.com/tia-selection-tool</u>
  - Guide for switching from Comfort Panels to Unified Comfort Panels
     <u>https://support.industry.siemens.com/cs/se/en/view/109768002</u>
  - SIMATIC WinCC Unified Tutorial Center (Videos) <u>https://support.industry.siemens.com/cs/ww/en/view/109782433</u>
  - SIMATIC WinCC Unified Tips and Tricks for Scripting (JavaScript) <u>https://support.industry.siemens.com/cs/se/en/view/109758536</u>
  - How do you use the Trace Viewer with the Unified Comfort Panel?
     <u>https://support.industry.siemens.com/cs/se/en/view/109777593</u>
  - Filtering of messages and alarms in SIMATIC WinCC Unified <u>https://support.industry.siemens.com/cs/se/en/view/109760056</u>
  - Demoproject for SIMATIC WinCC Unified and SIMATIC HMI Unified Comfort Panels https://support.industry.siemens.com/cs/se/en/view/109776633
  - HMI design with the HMI Template Suite
     <u>https://support.industry.siemens.com/cs/se/en/view/91174767</u>
  - SIMATIC WinCC Unified Toolbox <u>https://support.industry.siemens.com/cs/se/en/view/109770480</u>
  - Why does the project transfer of the Unified Comfort Panel fail? (Loading the operator panel) <u>https://support.industry.siemens.com/cs/se/en/view/109780176</u>