

# SIEMENS

BREAKER CURRENT RATING (120/240 VOLTS)

BOLT CONNECTOR STRAPS TO BUS WITH SPECIAL BOLTS PROVIDED.

FOR FEED THRU AND MAIN CONVERTABLE PANELS—USE 1/4-20 NUTS SUPPLIED ON STUD.

NOTE:  
TORQUE TO 30-35 INCH POUNDS.

CONNECTOR STRAP

BUS

STUDS SUPPLIED ON FEED THRU AND MAIN CONVERTABLE PANELS



**⚠ DANGER**

HAZARDOUS VOLTAGE. WILL CAUSE DEATH OR SERIOUS INJURY. DISCONNECT POWER BEFORE WORKING ON EQUIPMENT.

THIS MAIN BREAKER ASSEMBLY MUST NOT BE PLUGGED INTO A BRANCH CIRCUIT POSITION. THE PARALLELED POLES CAN CREATE A SHORT CIRCUIT CONDITION WITH POSSIBLE DAMAGE TO EQUIPMENT AND PERSONAL INJURY. USE ONLY WHERE AND HOW SPECIFIED.

LINE TERMINAL COVER, LEAVE IN PLACE UNTIL READY TO INSTALL MAIN BREAKER IN PANEL, THEN, REMOVE AND DISCARD COVER.

PLUG MAIN BREAKER ASSEMBLY ON TO STABS ON FEEDER LUG. ENSURE COMPLETE ENGAGEMENT.

SLIDE LUG AWAY FROM BUS TO END OF TRACK.

LUG STAB USED ONLY WITH MAIN BREAKER ASSEMBLY. INSERT TANG INTO WIRE WAY OPENING IN LUG.

LIFT END OF BUS TO DISENGAGE LUG.

## INSTALLATION INSTRUCTIONS:

MAIN BREAKER ASSEMBLY CATALOG NO.			
MBK150 (EQ9683)	MBK175 (EQ9684)	MBK200 (EQ9685)	MBK225 (EQ9686)
FOR USE ONLY WHERE SPECIFIED ON PANEL LABEL			

REMOVE FILLER PLATES OR TWISTOUTS FROM MAIN BREAKER OPENING IN TRIM.

117020B REV.10