
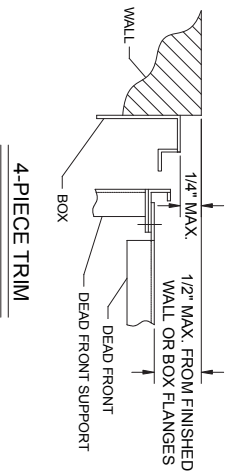


BOX INSTALLATION INSTRUCTIONS

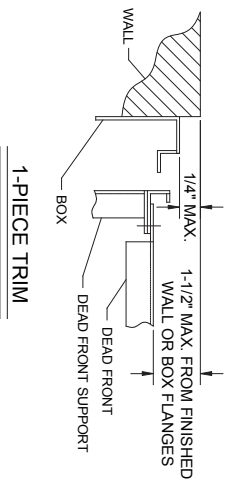

FOR FLUSH INSTALLATIONS

MOUNT THE BOX SO THE SIDE FLANGES ARE A MAXIMUM OF 1/4" BEHIND THE FINISHED WALL IN NON-COMBUSTIBLE WALL AND FLUSH OR PROTRUDING IN COMBUSTIBLE WALL. THE PROVIDED ADJUSTABLE FLUSH TRIM IS USED TO MOUNT OVER THE WALL AND MOUNT TO THE CAN. USE PROVIDED #10 CARRIAGE BOLTS TO SECURE FLUSH TRIM. SECURE INTERIOR WITH 1/4 - 20 SCREWS PROVIDED.

SIEMENS

11-B-1010-01 REV. 0