


IF IN DOUBT ASK
DO NOT SCALE

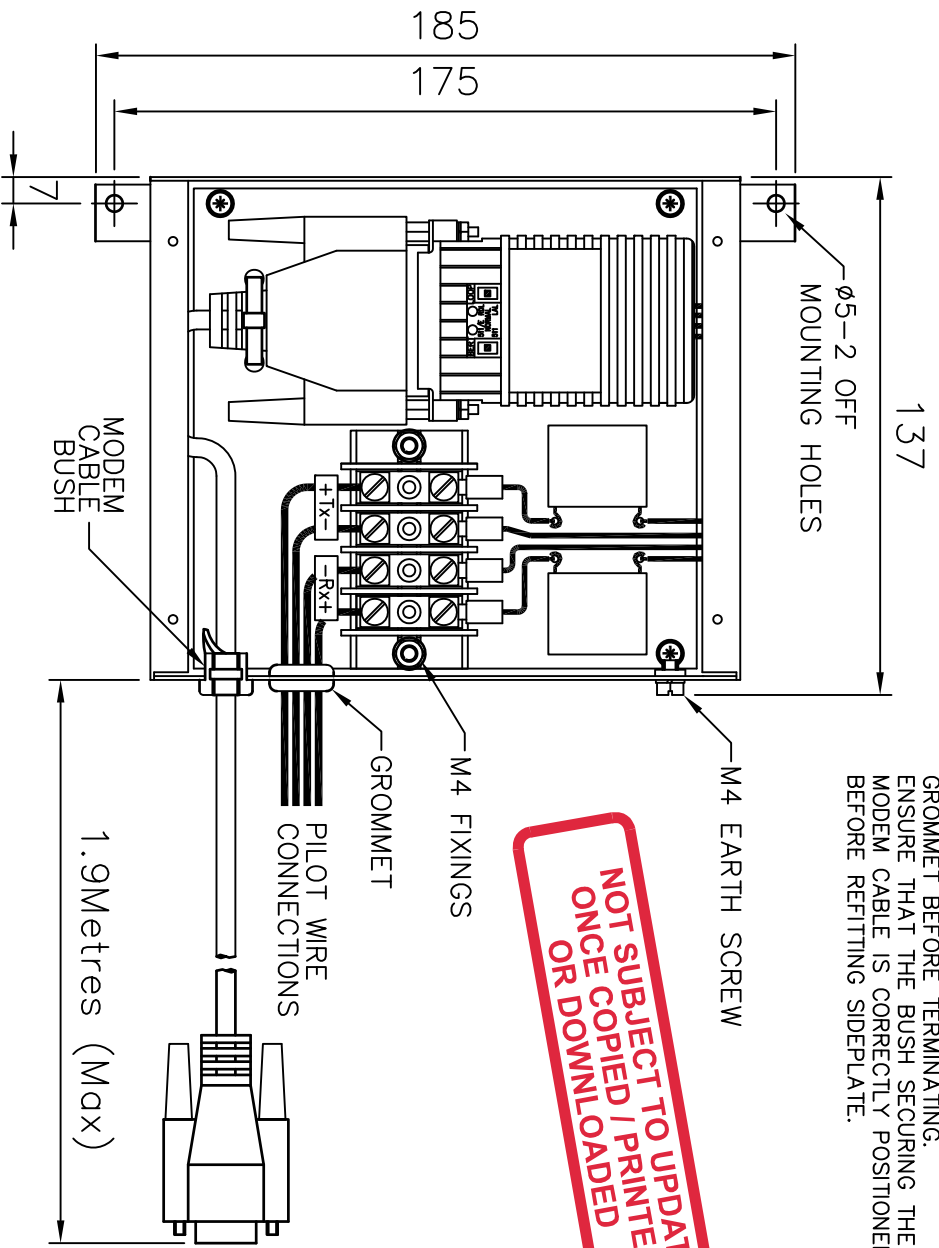

NOTE.
REMOVE SIDEPLATE TO GAIN ACCESS TO ON-SITE PILOT WIRE CONNECTIONS. PILOT WIRES TO BE INSERTED THROUGH GROMMET BEFORE TERMINATING. ENSURE THAT THE BUSH SECURING THE MODEM CABLE IS CORRECTLY POSITIONED BEFORE REFITTING SIDEPLATE.

**NOT SUBJECT TO UPDATE
ONCE COPIED / PRINTED
OR DOWNLOADED**

MATERIAL:

Dimensions in millimetres : Surface texture in micrometres.
Machine where marked ✓
For explanation of dimensions, tolerances, notes etc. see B.S.308.
Limits on untoleranced unmachined dimensions to \pm _____
Limits on untoleranced machined dimensions to B.S.4500:
i.e. up to 6 ± 0.1 ; over 30 to 120 ± 0.3 ; over 315 ± 0.8 ;
over 6 to 30 ± 0.2 ; over 120 to 315 ± 0.5 ;
General unmachined angular tolerance \pm _____

Copyright © 2013

Reyrolle Ltd.

3 ROW	21/05/13	MN3633/693	ID
2 ROW	15/9/06	MN693/2833	
1	17/09/04	CHANGE	
ISSUE	DATE	NOTED	

Finish:

Title: OUTLINE, PANEL DRILLING & ON-SITE PILOT WIRE CONNECTIONS FOR SOLKOR-N RS232 PILOT WIRE MODEM

First used on:

Treatment:

Reyrolle Protection
Hebburn.

Similar Articles:

Original Scale:

1:2

Supersedes:

2695X10003

DRAWN: MMather	CHECKED: RD.WATSON	APPROVED: RD.WATSON	DATE: 20/09/04	I.E.	OPS.	PCP.	Purch. Spec.	TQ.	EAC	CE.	STD.	A4h
----------------	--------------------	---------------------	----------------	------	------	------	--------------	-----	-----	-----	------	-----