

Installation Instructions



Note:

This instruction outlines the recommended general installation procedure. For installation by a qualified person, as defined by all local electrical codes and/or the National Electrical Code®.

Siemens Power Mod is compatible with the previous Siemens and Murray¹ modular metering devices. The SBJ (Single Bolt Joint) is interchangeable with the QC (QuickConnect™) method of connecting modules.

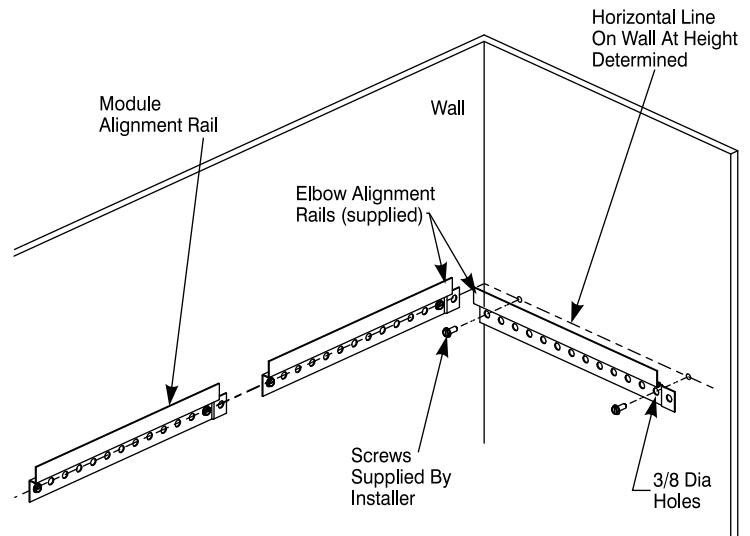


Fig. 1: Alignment Rail Mounting

Step 1. Mount (2) Alignment Rails (Supplied) for Elbow.

Determine proper mounting height so that the meter heights in the line-up are in accordance with utility requirements and local codes. Mount alignment rails for entire line-up per instructions provided with Power Mod modules. See Fig. 1.

Step 2. Remove Access Covers.

Remove both Access Covers from Elbow. Retain Access Covers and hardware for re-installation. See Fig. 2.

Step 3. Hang Elbow.

Hang Elbow on alignment rails and secure to wall with Mounting Tabs. See Fig. 2.

Step 4. Install QuickConnect and next module.

Connect module as described in main PowerMod instruction sheet provided with module.

Step 5. Remove (2) QuickBolt™ Straps from right side of Elbow.

See Fig. 2.

Step 6. Install additional modules as required.

Step 7. Re-install Covers.

Re-install both Access Covers. See Fig. 2.

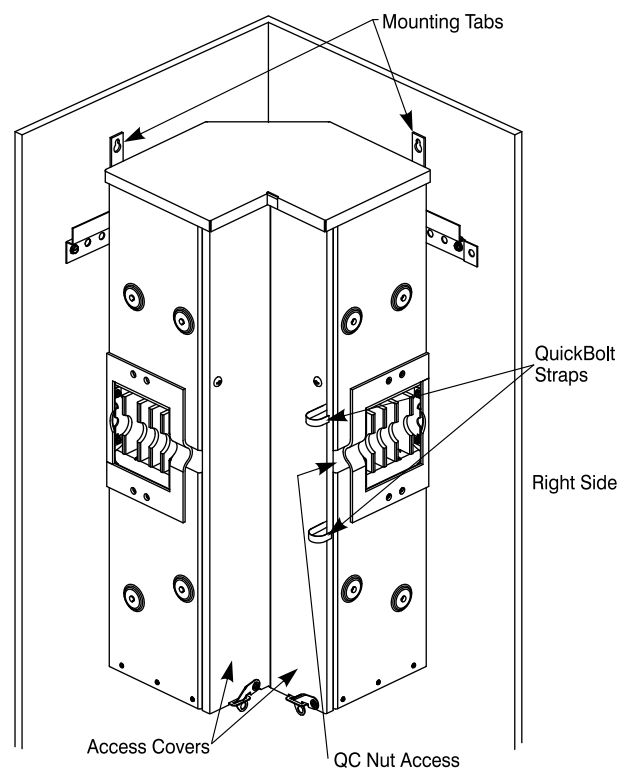


Fig. 2: Elbow Installation Detail